

elektron

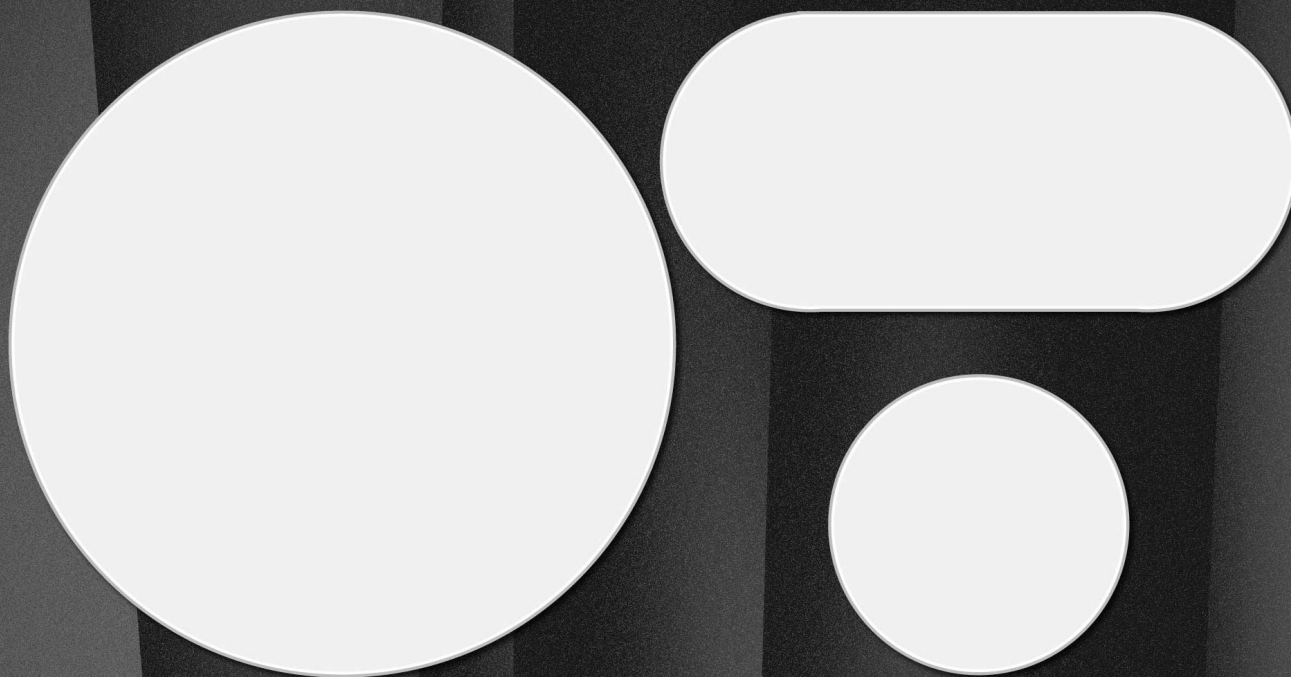

OCTATRACK

DPS-1 ||||| DYNAMIC PERFORMANCE SAMPLER

USER'S MANUAL

FCC compliance statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

European Union regulation compliance statement

This product has been tested to comply with the Low Voltage Directive 2006/95/EC and the Electromagnetic Compatibility Directive 2004/108/EC. The product meets the requirements of RoHS 2 Directive 2011/65/EU.



This symbol indicates that your product must be disposed of properly according to local laws and regulations.

The included switched-mode power supply is CEC LEVEL V compliant.

The device contains a non rechargable lithium perchlorate battery cell that may need to be recycled separately depending on local environmental laws. If the battery needs replacing, please contact Elektron or a local professional technician for servicing.

Legal disclaimer

The information in this document is subject to change without notice and should not be construed as a commitment by Elektron. Elektron assumes no responsibility for any errors that may appear in this document. Elektron may also make improvements and/or changes in the products and programs described in this document at any time without notice. In no event shall Elektron be liable for any special, indirect, or consequential damages or any damages whatsoever resulting from loss of use, data, or profits, whether in an action of contract, negligence, or other action, arising out of or in connection with the use or performance of this information.

IMPORTANT SAFETY AND MAINTENANCE INSTRUCTIONS

Please read these instructions carefully and adhere to the operating advice.

1. Do not use this unit near water.
2. Never use aggressive cleaners on the casing or on the LCD screen. Remove dust, dirt and fingerprints with a soft, dry and non-abrasive cloth. More persistent dirt can be removed with a slightly damp cloth using only water. Disconnect all cables while doing this. Only reconnect them when the product is safely dry.
3. To avoid scratches or damage, never use sharp objects near the casing or the LCD screen. Avoid applying any pressure to the screen itself.
4. Install in accordance with the manufacturer's instructions. Make sure you place the unit on a stable surface before use. If you mount the unit in a rack, be sure to tighten all four screws in the rack mount holes.
5. Connect the unit to an easily accessible electrical outlet close to the unit.
6. When transporting the unit, use accessories recommended by the manufacturer or the original box and padding.
7. Do not install near any heat sources such as radiators, heat registers, stoves, or any other equipment (including amplifiers) producing heat.
8. Do not put the PL-2 Protective Cover (Elektron accessory) on the unit while the unit is powered on.
9. Make sure there is sufficient air circulation in the room where the unit is kept.
10. This product, by itself or in combination with amplifiers, headphones or speakers, is capable of producing sound levels that may cause permanent hearing loss. Do not operate at a high volume level or at a level that is uncomfortable.
11. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the unit.
12. Use attachments/accessories specified by the manufacturer.
13. Unplug this unit during lightning storms or when it is not used for long periods of time.
14. Refer all servicing to qualified service technicians. Servicing is required when the unit has been damaged in any way, liquid has been spilled or objects have fallen into the unit, the unit has been exposed to rain or moisture, does not operate normally, or has been dropped.

WARNING

To reduce the risk of fire, electrical shock or product damage:

- Do not expose the unit to rain, moisture, dripping or splashing and also avoid placing objects filled with liquid, such as vases, on the unit.
- Do not expose the unit to direct sunlight, nor use it in ambient temperatures exceeding 40°C as this can lead to malfunction.
- Do not open the casing. There are no user repairable or adjustable parts inside. Leave service and repairs to trained service technicians only.

SAFETY INSTRUCTIONS FOR THE POWER ADAPTER ELEKTRON PSU-2

- The adapter is not safety grounded and may only be used indoors.
- To ensure good ventilation for the adapter, do not place it in tight spaces. To prevent risk of electric shock and fire because of overheating, ensure that curtains and other objects do not prevent adapter ventilation.
- Do not expose the power adapter to direct sunlight, nor use it in ambient temperatures exceeding 40°C.
- Connect the adapter to an easily accessible electrical outlet close to the unit.
- The adapter is in standby mode when the power cord is connected. The primary circuit is always active when the cord is connected to the power outlet. Pull out the cord to completely disconnect the adapter.
- In the EU, only use CE approved power cords.

TABLE OF CONTENTS

1. INTRODUCTION	10
1.1 CONVENTIONS IN THIS MANUAL.....	10
2. THE BACKGROUND OF THE OCTATRACK.....	11
2.1 SUGGESTED APPLICATIONS OF THE OCTATRACK.....	11
2.1.1 LOOPER DEVICE	11
2.1.2 RADICAL SOUND PROCESSOR	11
2.1.3 BACKING TRACK MACHINE	11
2.1.4 LIVE SETUP HUB.....	11
2.1.5 REMIX TOOL.....	11
2.1.6 EFFECTS UNIT EXTRAORDINAIRE.....	11
3. PANEL LAYOUT AND CONNECTORS	12
3.1 FRONT PANEL	12
3.2 REAR CONNECTORS.....	14
3.3 OCTATRACK ACCESSORIES	14
3.3.1 RACK MOUNT KIT.....	14
3.3.2 CARRYING BAG AND PROTECTIVE LID	14
3.4 THE COMPACT FLASH CARD READER	14
3.4.1 COMPACT FLASH CARD SPECIFICATIONS	15
3.5 CONNECTING THE UNIT	15
3.6 CARE INSTRUCTIONS	15
4. OVERVIEW OF THE OCTATRACK STRUCTURE	16
4.1 SETS	16
4.2 AUDIO POOL	16
4.3 PROJECTS	16
4.4 FLEX AND STATIC SAMPLE SLOT LISTS.....	17
4.5 BANKS	17
4.6 PATTERNS	17
4.7 PARTS.....	17
4.8 SCENES.....	17
4.9 ARRANGEMENTS.....	17
4.10 TRACKS	17
4.11 MACHINES	17
4.12 HOW INFORMATION IS HANDLED	18
5. THE USER INTERFACE	19
5.1 MENUS AND WINDOWS	19
5.2 PARAMETER EDITING	20
5.2.1 QUICK PARAMETER EDITING	20
5.2.2 PARAMETER VALUE SKIP.....	20
5.3 QUICK SCROLLING	20
5.4 COPY, CLEAR AND PASTE	20
5.5 THE NAMING MENU.....	20
5.5.1 POP-UP MENU NAMING	20
6. QUICK START	22
6.1 DEMO MODE.....	22
6.1.1 PLAYING THE DEMO PATTERNS	22
6.1.2 ADJUSTING PARAMETERS.....	22
6.1.3 EXPERIMENTING WITH SCENES	22

6.1.4 RECORDING A PATTERN USING GRID RECORDING.....	22
6.1.5 RECORDING A PATTERN USING LIVE RECORDING	22
6.1.6 PARAMETER LOCKS	23
6.2 MOUNTING A SET AND LOADING A PROJECT	23
6.2.1 MOUNTING A SET	23
6.2.2 LOADING A PROJECT	24
6.3 LOADING SAMPLES	24
6.3.1 ASSIGNING A MACHINE TO A TRACK	24
6.3.2 ASSIGNING A SAMPLE TO A MACHINE	25
7. SETS	26
7.1 CREATING AND MOUNTING A SET	26
7.2 AUDIO POOL.....	27
7.2.1 ADDING CONTENT TO THE AUDIO POOL.....	27
7.2.2 AUDIO FILE COMPATIBILITY	27
8. PROJECTS	28
8.1 PROJECTS AND RAM MEMORY.....	28
8.2 LOADING AND CREATING A PROJECT.....	28
8.3 LOADING SAMPLES TO THE SAMPLE SLOTS	29
8.3.1 LOADING FROM THE QUICK ASSIGN MENU	29
8.3.2 LOADING FROM THE PLAYBACK SETUP MENU	30
8.3.3 FILE BROWSER	30
8.4 THE PROJECT MENU	31
8.4.1 PROJECT	31
8.5 SYSTEM	32
8.5.1 USB DISK MODE	32
8.5.2 OS UPGRADE	33
8.5.3 DATE/TIME	33
8.5.4 PERSONALIZE	33
8.5.5 CARD TOOLS	34
8.5.6 STATUS	35
8.6 CONTROL	35
8.6.1 AUDIO	35
8.6.2 INPUT.....	36
8.6.3 SEQUENCER.....	36
8.6.4 MIDI SEQUENCER	37
8.6.5 MEMORY.....	37
8.6.6 METRONOME.....	39
8.7 MIDI	39
8.7.1 CONTROL	39
8.7.2 SYNC.....	40
8.7.3 CHANNELS.....	41
8.7.4 TURBO STATUS	41
8.8 MIXER MENU	42
8.9 TEMPO MENU	43
8.9.1 TAP TEMPO.....	43
8.9.2 PATTERN TEMPO NUDGE	43
8.9.3 SAMPLE TEMPO NUDGE	43
9. TRACK RECORDERS AND PICKUP MACHINES	44
9.1 RECORDING EDIT AND SETUP MENUS.....	45
9.1.1 RECORDING EDIT MENU.....	45
9.1.2 RECORDING SETUP 1 MENU	45

9.1.3 RECORDING SETUP 2 MENU	46
9.2 TRACK RECORDER SAMPLING METHODS.....	47
9.2.1 MANUAL SAMPLING	47
9.2.2 RECORDER TRIG SAMPLING	48
9.2.3 PLAYBACK OF CAPTURED RECORDER SAMPLES	48
9.3 PICKUP MACHINE SAMPLING	49
9.3.1 MASTER AND SLAVE PICKUP MACHINES.....	49
9.3.2 CONTROLLING THE PICKUP MACHINES.....	50
9.3.2 SEQUENCER TO PICKUP SYNC.....	50
10. BANKS, PARTS AND SCENES.....	52
10.1 BANKS.....	52
10.2 PARTS.....	52
10.2.1 PART QUICK SELECT	52
10.2.2 PARTS EDIT	53
10.2.3 PART RELOAD.....	53
10.3 SCENES.....	53
10.3.1 ASSIGNING AND ADJUSTING SCENES	53
10.3.2 SCENE VOLUME LOCKING	54
10.3.3 SCENE MUTE	54
10.3.4 SCENE COPY	54
10.3.5 SCENE CLEAR	54
11. TRACKS	55
11.1 THE DIFFERENCE BETWEEN FLEX AND STATIC MACHINES	55
11.2 ASSIGNING MACHINES TO TRACKS	55
11.2.1 ASSIGNING MACHINES IN THE QUICK ASSIGN MENU	55
11.2.2 ASSIGNING MACHINES IN THE PLAYBACK SETUP MENU	56
11.3 ASSIGNING FLEX AND STATIC SAMPLES TO MACHINES	56
11.3.1 ASSIGNING SAMPLES IN THE QUICK ASSIGN MENU	56
11.3.2 ASSIGNING SAMPLES IN THE PLAYBACK SETUP MENU	56
11.4 TRACK PARAMETER PAGES.....	57
11.4.1 TRACK MAIN <i>LEVEL</i>	57
11.4.2 TRACK CUE <i>LEVEL</i>	57
11.4.3 PLAYBACK MAIN.....	57
11.4.4 PLAYBACK SETUP	57
11.4.5 AMP MAIN	58
11.4.6 AMP SETUP.....	58
11.4.7 LFO MAIN.....	59
11.4.8 LFO SETUP	60
11.4.9 LFO DESIGNER	61
11.4.10 EFFECT 1 AND EFFECT 2.....	61
11.5 DIRECT TRACK MUTING.....	62
11.6 MAIN AND CUE OUTPUTS ROUTING	62
11.6.1 MAIN OUTPUT ROUTING.....	63
11.6.2 CUE OUTPUT ROUTING.....	63
11.6.3 PARAMETERS AFFECTING MAIN AND CUE <i>LEVELS</i>	63
12. PATTERNS	64
12.1 TRIG LED INDICATIONS.....	64
12.2 BASIC PATTERN OPERATIONS	64
12.2.1 SELECTING A PATTERN.....	64
12.2.2 PATTERN CONTROL.....	64
12.2.3 PATTERN CHAINING.....	65

12.3 RECORDING MODES	65
12.3.1 GRID RECORDING MODE	65
12.3.2 LIVE RECORDING MODE	65
12.4 TRIG TYPES	66
12.4.1 SAMPLE TRIGS	66
12.4.2 TRIGLESS LOCKS	66
12.4.3 TRIGLESS TRIGS	66
12.4.4 ONE SHOT TRIGS	66
12.4.5 SWING TRIGS	67
12.4.6 SLIDE TRIGS	67
12.4.7 RECORDER TRIGS	67
12.5 PARAMETER LOCKS	67
12.6 SAMPLE LOCKS	67
12.7 TRIG MODES	68
12.7.1 TRACK	68
12.7.2 CHROMATIC	68
12.7.3 SLOTS	69
12.7.4 SLICES	69
12.7.5 QUICK MUTE	69
12.7.6 DELAY CONTROL	69
12.8 SEQUENCER COPY, PASTE AND CLEAR OPERATIONS	70
12.8.1 PATTERN COPY	70
12.8.2 PATTERN CLEAR	70
12.8.3 TRACK COPY	70
12.8.4 TRACK CLEAR	71
12.8.5 TRACK PAGE COPY	71
12.8.6 TRACK PAGE CLEAR	71
12.8.7 TRACK PARAMETER PAGE COPY	71
12.8.8 TRACK PARAMETER PAGE CLEAR	71
12.8.9 TRIG COPY	71
12.8.10 TRIG LOCK CLEAR	72
12.9 TRACK TRIG EDIT MENU	72
12.9.1 TRIGS	72
12.9.2 SLIDE	72
12.9.3 SWING	73
12.9.4 RECORDER TRIGS	73
12.10 PATTERN SETTINGS MENU	73
12.10.1 PATTERN	74
12.11 MICRO TIMING	75
12.12 CONDITIONAL LOCKS	76
12.13 FILL MODE	76
12.14 SCALE SETUP	77
12.14.1 NORMAL	77
12.14.2 PER TRACK	77
13. THE AUDIO EDITOR	79
13.1 ACCESSING THE AUDIO EDITOR	79
13.1.1 ACCESS FROM THE QUICK ASSIGN MENU	79
13.1.2 ACCESS FROM THE PLAYBACK SETUP MENU	79
13.1.3 ACCESS FROM TRACKS AND TRACK RECORDERS	79
13.2 AUDIO EDITOR FUNCTIONALITY	79
13.2.1 TRIM	79
13.2.2 SLICE	80

13.2.3 EDIT	81
13.2.4 ATTRIBUTES	83
13.2.5 FILE	85
14. THE ARRANGER.....	86
14.1 THE ARRANGER MENU	86
14.1.1 EDIT	86
14.1.2 RENAME	88
14.1.3 CHANGE	88
14.1.4 CHAIN	88
14.1.5 CLEAR	88
14.1.6 SAVE	88
14.1.7 RELOAD	88
15. THE MIDI SEQUENCER	89
15.1 ACCESSING THE MIDI SEQUENCER.....	89
15.2 HOW MIDI IS ROUTED.....	89
15.3 MIDI MODE LIVE RECORDING AND PARAMETER LOCKING.....	90
15.4 MIDI TRACK PARAMETER PAGES	90
15.4.1 NOTE MAIN	90
15.4.2 NOTE SETUP.....	91
15.4.3 ARPEGGIATOR MAIN	91
15.4.4 ARPEGGIATOR SETUP.....	92
15.4.5 MIDI LFO MAIN	92
15.4.6 MIDI LFO SETUP.....	92
15.4.7 CTRL 1 MAIN.....	93
15.4.8 CTRL 1 SETUP.....	93
15.4.9 CTRL 2 MAIN	93
15.4.10 CTRL 2 SETUP.....	94
16. OCTATRACK SETUP EXAMPLES.....	95
16.1 OCTATRACK AS A PERFORMANCE HUB	95
16.1.1 DIR METHOD	95
16.1.2 THRU MACHINES METHOD	96
16.2 OCTATRACK WITH EXTERNAL EFFECTS	97
16.3 OCTATRACK PROCESSING LIVE INSTRUMENTS.....	98
16.4 OCTATRACK AS A DJ MIXER AND SAMPLER.....	99
16.4.1 DJ MIXING USING THE DIR METHOD	99
16.4.2 DJ MIXING USING THE THRU METHOD	100
16.5 OCTATRACK AS A MIDI CONTROL CENTER.....	101
16.5.1 MIDI CONTROL USING CC DIRECT CONNECT AND THE AUTO CHANNEL	101
17. OCTATRACK TUTORIALS	103
17.1 TRACK RECORDER SAMPLING.....	103
17.1.1 MANUAL SAMPLING	103
17.1.2 SAMPLING USING RECORDER TRIGS.....	103
17.1.3 PLAYBACK OF CAPTURED RECORDER SAMPLES	104
17.1.4 PICKUP MACHINE SAMPLING.....	104
17.1.5 CONTROLLING THE PICK UP MACHINES WITH A MIDI FOOT CONTROLLER.....	105
17.2 LOOP REMIXING	106
17.2.1 LOOP REMIXING USING SLICES	106
17.2.2 LOOP REMIXING USING THE CROSSFADER.....	107
17.3 PREPARING LOOPS AND SAMPLES.....	108
17.4 THE OCTATRACK AS A DJ DECK	109
17.5 THE OCTATRACK AS AN EFFECTS PROCESSOR.....	110

18. EARLY STARTUP MENU.....	111
18.1 TEST MODE.....	111
18.2 EMPTY RESET.....	111
18.3 MIDI UPGRADE.....	111
18.4 SEND UPGRADE.....	111
19. SUMMARY OF BUTTON COMBINATIONS.....	113
20. TECHNICAL INFORMATION.....	115
21. CREDITS AND CONTACT INFORMATION.....	115
APPENDIX A: MACHINE REFERENCE.....	116
A.1 THRU MACHINE.....	116
A.2 FLEX MACHINE.....	117
A.3 STATIC MACHINE.....	118
A.4 NEIGHBOR MACHINE.....	119
A.5 PICKUP MACHINE.....	120
APPENDIX B: EFFECTS REFERENCE.....	121
B.1 NONE.....	121
B.2 12/24DB MULTI MODE FILTER.....	122
B.3 2-BAND PARAMETRIC EQ.....	123
B.4 DJ STYLE KILL EQ.....	124
B.5 2-10 STAGE PHASER.....	125
B.6 FLANGER.....	126
B.7 2-10 TAP CHORUS.....	127
B.8 SPATIALIZER.....	128
B.9 COMB FILTER.....	129
B.10 DYNAMIX COMPRESSOR.....	130
B.11 LO-FI COLLECTION.....	131
B.12 ECHO FREEZE DELAY.....	132
B.13 GATEBOX PLATE REVERB.....	133
B.14 SPRING REVERB.....	134
B.15 DARK REVERB.....	135
APPENDIX C: MIDI CONTROL REFERENCE.....	136
C.1 NOTE MAPPING.....	136
C.2 CTRL CHANGE MAPPINGS.....	137
C.3 MIDI MODE CTRL CHANGE MAPPINGS.....	138
INDEX.....	140

1. INTRODUCTION

Thank you for choosing the Octatrack DPS-1. The Octatrack is a dynamic performance sampler ideal for real-time sampling, remixing and audio manipulation. It features the improved Elektron step sequencer which makes it easy to bend and process samples in new and unique ways. To make the most of the machine, we would recommend you to carefully read this manual. Tutorial videos, found on the Elektron website, are also available. They cover the basics of the Octatrack and are a great complement to this document.

1.1 CONVENTIONS IN THIS MANUAL

We have used the following conventions throughout the manual:

Key names are written in upper case, bold style and bracketed letters. For instance, the key labeled “Function” on the main panel is called **[FUNCTION]**.

Menu names are written in upper case letters. The PLAYBACK SETUP menu is an example of that.

Parameter names and certain menu options where settings can be made or actions performed are written in bold, upper case letters. For example, **HEADPHONES MIX**.

Upper case letters are used for parameter setting alternatives, for example, ONE, and certain menu settings, like EXTERNAL.

Messages visible on the screen are written in upper case letters with quotation marks. Like this, “CHOOSE BANK”

Knobs are written in upper case, bold, italic letters. For instance, the knob “Level” is called ***LEVEL***.

LED indicators like the record LED are written like this: <RECORD>.

The following symbols are used throughout the manual:



Important information that you should pay attention to.



A tip that will make it easier for you to interact with the Octatrack.



This symbol is not used, but it shows a nice shrimp.

2. THE BACKGROUND OF THE OCTATRACK

The first relatively affordable samplers were released in the 1980's and made a huge impact on the music scene of that time. Sonic elements, taken from completely new sources, could suddenly form a vital part of a composition. This resulted in the birth and evolution of several genres, for example hip hop. The concept of the sampler has since then branched off in several directions. Software based samplers are today capable of handling enormously large, multi-sampled, sample libraries. Hardware samplers aren't really suited for those tasks. Instead, they come to their best when conceived as dedicated devices focusing on new and radical approaches to sampling.

When we developed the Machinedrum UW, one of the goals was to allow for a creative use of samples. Once the machine was released it became apparent that especially the RAM machines, which made it possible to record sounds in real-time and instantly play them back, were utilized in ways we originally couldn't even imagine. Users around the world used them to incorporate live sampled shortwave radio sounds in their compositions, make instant remixes of 12" records and to more or less conceive new genres of music. It was obvious that the RAM machine concept harbored a tremendous potential. This was the starting point of the Octatrack. We wanted to create a machine that would regard recorded material not as inflexible sounds, but rather as something highly malleable. This is one of the reasons why the Octatrack exists. The other one is because of the stage. The laptop computer has quickly established itself as a common instrument in live setups. It is a powerful and highly customizable tool, however, the multi functionality is at the same time a disadvantage. When it comes to audio related tasks a laptop is still a jack of all trades but master of none. The Octatrack on the other hand is designed to be a streamlined, reliable and straightforward machine allowing live performers to really add something extra to their sets. It can act as a backing track machine, a second turntable, a source of experimental soundscapes or simply as an instrument encouraging improvisation and fun.

These two reasons converge and form the ultimate *raison d'être* of the Octatrack: its capability to re-establish sampling as an art form. We hope it will be a trusty companion during your musical endeavours.

2.1 SUGGESTED APPLICATIONS OF THE OCTATRACK

The flexibility of the Octatrack makes it a very powerful device suited to a wide range of tasks. Here a few of them are presented.

2.1.1 LOOPER DEVICE

The Octatrack is ideal for DJ's and live performers. You will be able to quickly sample a turntable or other sound sources present on the stage and instantly play back and affect the recorded loop. Add pre-recorded loops and sounds to samples captured in real-time to take your performance to a completely new level. The real-time timestretch will make sure everything stays in sync.

2.1.2 RADICAL SOUND PROCESSOR

The combined power of the sampling engine, the sequencer and the FX blocks makes the Octatrack a very powerful audio mangler. This functionality is great when working in the studio and wanting to obtain unique sounds and textures.

2.1.3 BACKING TRACK MACHINE

Each of the eight stereo tracks can stream gigabyte-large samples. Despite the large size of the samples they can still be subject to timestretch. Change the tempo of the Octatrack and the backing track samples can be timestretched accordingly. On top of this you can treat the samples with the Octatrack effects and sequencer tricks.

2.1.4 LIVE SETUP HUB

The two input pairs combined with the extensive audio routing possibilities allow the Octatrack to function as a mixer. Connect for example a Machinedrum and a Monomachine to the inputs and enjoy a complete live setup with extreme possibilities.


2.1.5 REMIX TOOL

It is easy to change the pitch of different sections of a vocal sample without changing the overall tempo of the sample. Chopping up and rearranging samples and loops is extremely simple thanks to features like the LFO designer and slice points. The Octatrack lets you break down audio content and restructure it in new and interesting ways.

2.1.6 EFFECTS UNIT EXTRAORDINAIRE

Chained FX blocks paired with automated real time sampling can warble and twist incoming audio in ways previously unachievable by a single machine. Two chains, each with 8 simultaneous effects, can be active at the same time.

3. PANEL LAYOUT AND CONNECTORS

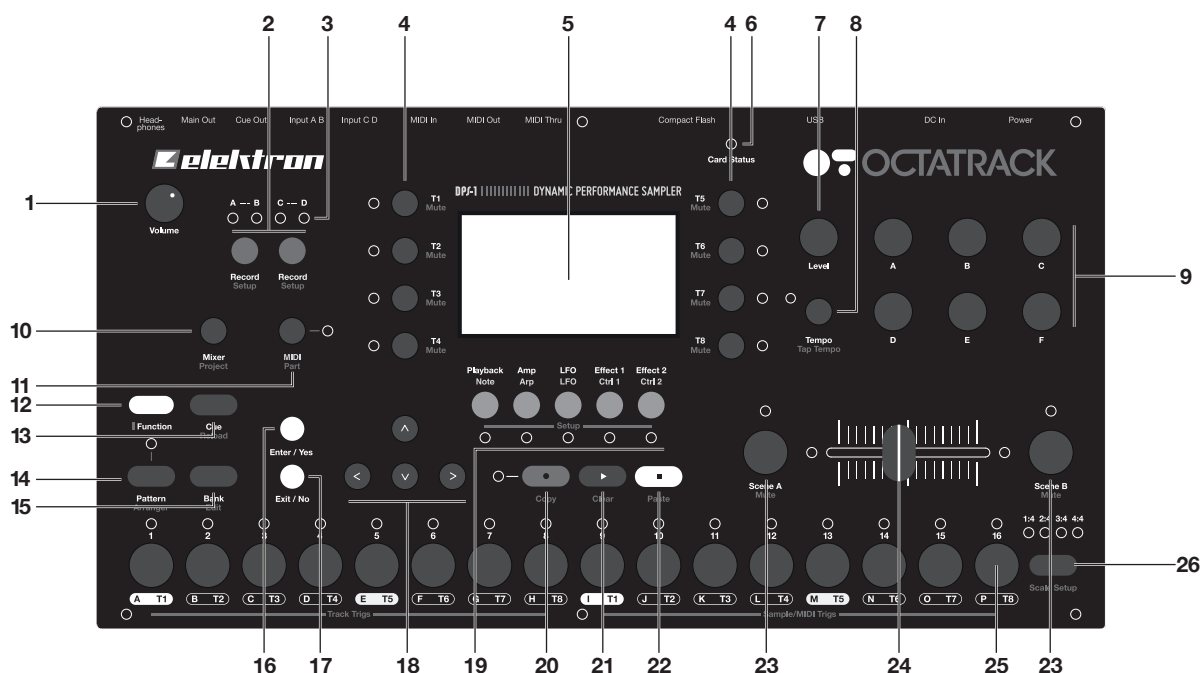

3.1 FRONT PANEL

The Octatrack front panel. For a more comprehensive list of key combinations, please see “19. SUMMARY OF BUTTON COMBINATIONS” on page 113.

1. **HEADPHONES VOLUME CONTROL** sets the volume for the stereo headphones jack.
2. **[AUDIO RECORD]** buttons are used for real-time sampling through the external inputs. There is one **[AUDIO RECORD]** button per audio input pair.
3. The **<AUDIO RECORD>** LEDs indicate the strength of the signal received on the external inputs. When in the **RECORD SETUP** menu these LEDs also indicate the source selection for recorder trigs.
4. **[TRACK]** buttons. Press a **[TRACK]** button to move the focus to the corresponding track. Pressing a **[TRACK]** button + an **[AUDIO RECORD]** button will record audio to the recorder of the selected track. **[FUNCTION]** + **[TRACK]** will mute the selected track. **[CUE]** + **[TRACK]** will cue the selected track. The **<TRACK>** LEDs indicate which track is active as well as the mute and cue status of the tracks.
5. The LCD graphical interface.
6. **<CARD STATUS>** LED, indicating the activity of the Compact Flash card.
7. **LEVEL** sets the overall volume level of the active track. **[FUNCTION]** + **LEVEL** controls the main output volume.
8. **[TEMPO]** key. Brings up the **TEMPO** menu. The current tempo is always indicated by the flashing speed of the **<TEMPO>** LED. Tapping the BPM is done by holding **[FUNCTION]** and then repeatedly tapping **[TEMPO]**.
9. **DATA ENTRY** knobs. Used to set parameter values. Press the knob when turning to change values in larger increments.
10. **[MIXER]** opens up a menu where settings for the in- and outputs can be made. Tracks can also be muted and solo:ed here. Pressing **[FUNCTION]** + **[MIXER]** opens the **PROJECT** menu.
11. **[MIDI]** activates the MIDI editing mode. A lit **<MIDI>** LED indicates the MIDI editing mode is active. When in the **RECORD SETUP** menu this LED indicates both the signal strength of the internal sample source and the internal source selection for recorder trigs. **[FUNCTION]** + **[MIDI]** opens the **PARTS** menu. When a Pickup machine is used, the button combination performs a number of commands.
12. **[FUNCTION]** key. Press and hold it for accessing the secondary function of another key. Secondary functions are often printed in red text on the panel.
13. Pressing **[CUE]** + a **[TRACK]** key will cue the track. The audio of the track will then be routed to the cue outputs. **[FUNCTION]** + **[CUE]** will reload the parameter settings of the selected part.


14. Pressing **[PATTERN]** + a **[TRIG]** key selects the active pattern within a bank. The ARRANGER menu is opened by pressing **[FUNCTION]** + **[PATTERN]**.
15. **[BANK]** + a **[TRIG]** key selects the active bank. Pressing **[FUNCTION]** + **[BANK]** opens various context based menus.
16. **[ENTER/YES]** key. Used for entering sub-menus and for confirming choices.
17. **[EXIT/NO]** key. Used for exiting an active menu and for deselecting options.
18. The **[ARROW]** keys. Used for menu navigation. They are called **[UP]**, **[DOWN]**, **[LEFT]** and **[RIGHT]**. Pressing **[LEFT]**/**[RIGHT]** while no particular menu is open will temporarily nudge the BPM up or down.
19. **[TRACK PARAMETER]** keys switches between the TRACK PARAMETER pages of the active track. Pressing **[FUNCTION]** + a **[TRACK PARAMETER]** key or quickly double pressing a **[TRACK PARAMETER]** key will open the SETUP menu of the selected TRACK PARAMETER page. In MIDI SEQUENCER mode the TRACK PARAMETER pages reflect the MIDI functionality of the tracks.
20. **[REC]** key. Toggles GRID RECORDING mode on/off. Starts LIVE RECORDING mode if held while pressing **[PLAY]**. In GRID RECORDING mode, the <RECORD> LED gives a steady light, while in LIVE RECORDING mode it flashes. Pressing **[FUNCTION]** + **[REC]** performs a copy command.
21. **[PLAY]** key. Starts playback of a pattern or arrangement. Pressing **[PLAY]** a second time pauses playback. **[FUNCTION]** + **[PLAY]** performs a clear command.
22. **[STOP]** key. Stops the playback of a pattern or arrangement. **[FUNCTION]** + **[STOP]** performs a paste command.



Copy, clear and paste functions are available in many menus. The implementation is described in “SEQUENCER COPY, PASTE AND CLEAR OPERATIONS” on page 84.

23. **[SCENE A]/[SCENE B]** + **[TRIG]** assigns one of 16 scenes to the A and B scene slots. **[SCENE A]/[SCENE B]** + a **DATA ENTRY** knob will assign the chosen parameter value to the scene. **[FUNCTION]** + **[SCENE A]/[SCENE B]** mutes the scene.
24. The crossfader interpolates between the parameter values of scene A and scene B.
25. **[TRIG]** keys 1 to 16. They have many uses, for example triggering either the machine of a track or a complete track. Also used for placing trigs while in GRID RECORDING mode. When pressed in combination with the **[PATTERN]**, **[BANK]** and **[SCENE]** buttons they select patterns, banks and scenes. Above each **[TRIG]** key a <TRIG> LED indicates the position of placed trigs.
26. **[PATTERN PAGE]** selects the active pattern page when GRID RECORDING mode is active. Above the **[PATTERN PAGE]** key four <PATTERN PAGE> LEDs are found. They are used for indicating the pattern page currently being played or edited. If for example 64 steps, or four pattern pages, are used in a pattern, all four LEDs will be lit. For scale lengths up to 16 steps, the <1:4> LED will stay lit and pressing **[PATTERN PAGE]** will have no effect. **[FUNCTION]** + **[PATTERN PAGE]** opens the SCALE SETUP menu where track length and time signature settings are made.

3.2 REAR CONNECTORS

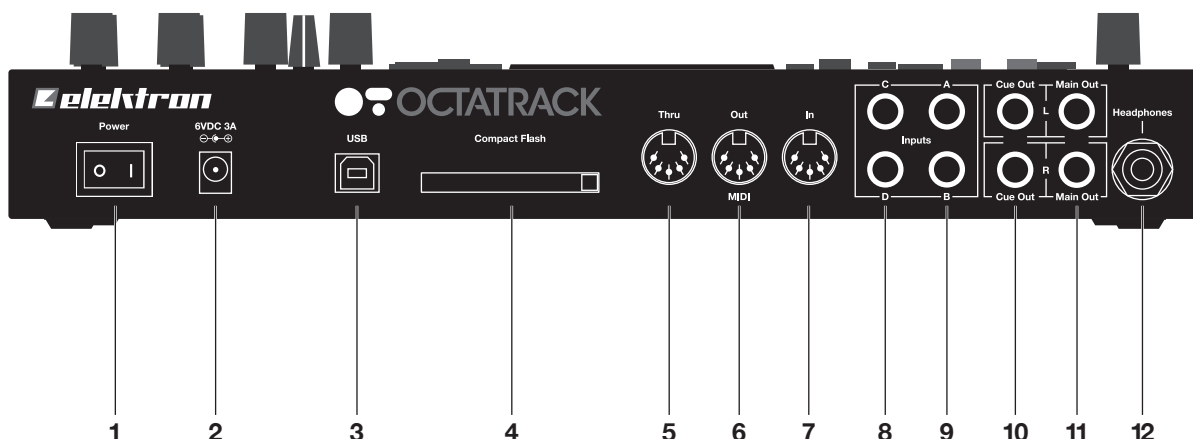

1. Power on/off switch.
2. 6V DC power in.
3. Hi Speed USB 2.0 connection.
4. Compact Flash card reader.
5. MIDI Thru.
6. MIDI Out.
7. MIDI In.
8. Input C/D.
9. Input A/B.
10. Cue out L/R.
11. Main out L/R.
12. Headphones output.



Caution! Use only the bundled Elektron PSU-2 power supply with your Octatrack. It can, using an appropriate power cord, be used all over the globe without the need of voltage converters. Using the wrong type of adapter may damage your unit. Damage caused by the use of incorrect power supply is not covered by warranty.

3.3 OCTATRACK ACCESSORIES

3.3.1 RACK MOUNT KIT

The Octatrack can be rack mounted in a standard 19" rack, using the Octatrack rack mount kit which can be ordered separately. When rack mounted, the Octatrack occupies four standard height units plus additional space, usually about 1 HE, which is needed to accommodate cables plugged into the unit.

When assembling the rack mount kit, make sure that you have a Philips screwdriver of the right size. Use the included M3x6mm size screws to secure the rack mount consoles on each side of the Octatrack. Make sure all screws are fastened for secure operation of the unit.

3.3.2 CARRYING BAG AND PROTECTIVE LID

The carrying bag accommodates one Octatrack. The protective plastic lid is put on top of the Octatrack panel and protects the crossfader and the knobs. The protective lid is by default included with the bag.

3.4 THE COMPACT FLASH CARD READER

The <CARD STATUS> LED lights up when a Compact Flash card is inserted. A blinking bright green LED light means the card is being read, a red LED light means the card is being written to. Sometimes data cannot be written until [STOP] is pressed. The <CARD STATUS> LED will then remain yellow until so happens.

Eject the Compact Flash card by pressing the button located to the right of the reader. After being pressed the button will protrude a few millimeters. Press it again to eject the Compact Flash card.

3.4.1 COMPACT FLASH CARD SPECIFICATIONS

Cards supporting UDMA and at least 133x (~20MB/s) for both reads and writes are compatible with the Octatrack. Cards must be FAT16 or FAT32 formatted, preferably FAT32. Up to 64 GB Compact Flash cards are supported.



Never remove the card while data is being read or written to it. Doing so might corrupt files and data. Only when the <CARD STATUS> LED emits a dimmed green and steady light the card might be removed.

3.5 CONNECTING THE UNIT

Before you start connecting the Octatrack to other units, make sure all units are switched off.

1. Plug the supplied DC adapter to a power outlet and connect the small plug to the 6 V DC connector of the Octatrack unit.
2. Connect the main out L/R from the Octatrack to your mixer or amplifier.
3. If MIDI control is desired, connect MIDI OUT from the Octatrack to the MIDI IN of the device you wish to send data to. Connect the MIDI IN of the Octatrack to the MIDI OUT of the device you wish to receive data from. The MIDI THRU port “echoes” the data arriving at the MIDI IN port, so it can be used for chaining MIDI units together.
4. Switch on all units.



The USB connection may inject computer noise in the outputs of the Octatrack. Should this occur, use balanced cables or use a battery operated computer. Do not remove the safety grounding of your computer. It is there to protect against electric shocks.


3.6 CARE INSTRUCTIONS

To ensure many years of trouble free operation, please follow the advice below:

- Never use any aggressive cleaners on the casing or the LCD overlay. Remove dust, dirt and fingerprints with a soft dry cloth. More persistent dirt can be removed with a slightly damp cloth using only water.
- To avoid scratches or damage, never use sharp objects near the display. Also avoid applying any pressure to the display itself.
- When transporting the Octatrack, use the box and padding the unit originally shipped with or the Elektron Carry Bag ECC-2.
- Make sure you place the unit on a stable surface before use. If you mount the unit in a rack, be sure to tighten all four screws in the rack mount holes.
- The memory used for storing patterns and parts is powered by a battery inside the unit. It will hold data at least 6 years before needing replacement. If the battery needs replacement, the “BATTERY LOW” message will appear in the display. Contact Elektron support or your nearest repair center.
- Use the power switch to turn off the machine when it is not in use.

4. OVERVIEW OF THE OCTATRACK STRUCTURE

The Octatrack is organized in a hierarchical way. The image below outlines the data structure of the Octatrack.

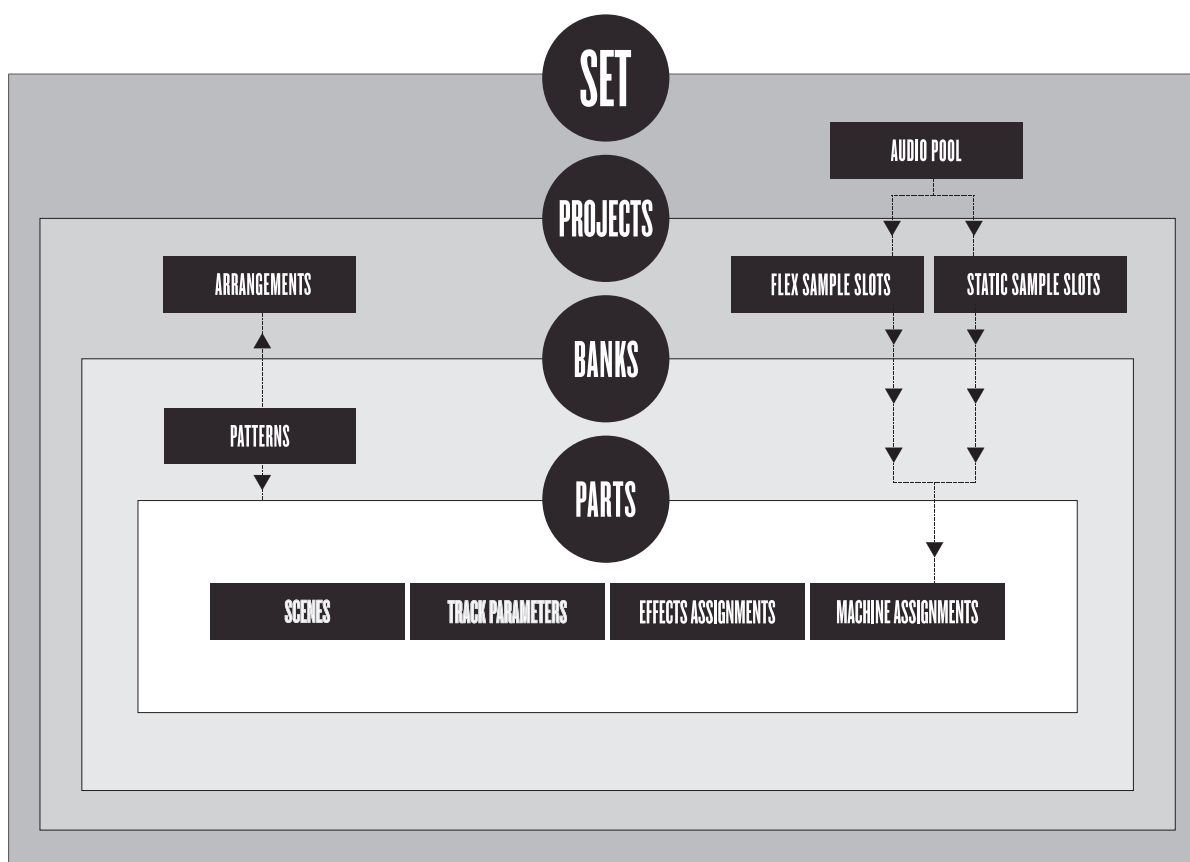

4.1 SETS

A set is the top level structure of the Octatrack. It can contain a near unlimited amount of projects plus one audio pool. The amount of samples in the audio pool as well as the amount of projects are limited only by the size of the Compact Flash card. The samples in the audio pool are available to all projects of the set. Sets are saved on the Compact Flash card. Since a set can contain many projects, some users might find that one set is all they need. For more information, please see “7. SETS” on page 26.

4.2 AUDIO POOL

Each set contains one audio pool which is stored on the Compact Flash card. The audio pool contains the samples that can be loaded to the Flex and Static sample slot lists of the projects of a set. For more information, please see “7.2.1 ADDING CONTENT TO THE AUDIO POOL” on page 27.

4.3 PROJECTS

For the Octatrack to work as intended, a set needs to be mounted and a project needs to be loaded. A project contains 16 banks, 8 arrangements, 8 track recorders and their recorder buffers, 128 sample slots dedicated to Flex machines, 128 slots dedicated to Static machines, various project specific settings and the BPM setting for all the patterns of the project. A project can therefore be regarded as a collection of compositions.

The samples used to fill the Flex and Static sample slots are fetched from the audio pool of the set. The samples used by a project can also be collected and saved in the project folder. The command COLLECT SAMPLES are used for this and makes a project more or less self contained. For more information, please see “8. PROJECTS” on page 28. For the sake of sample organization it is recommended to only store samples in the audio pool.

4.4 FLEX AND STATIC SAMPLE SLOT LISTS

For samples to be available to Flex and Static machines they first need to be loaded from the audio pool to the Flex or Static sample slot lists. When samples are present in these lists they can be assigned to, and thus processed by, Flex and Static machines assigned to the audio tracks of a pattern. Read how to load audio pool samples to the sample slot lists in the section “8.3 LOADING SAMPLES TO THE SAMPLE SLOTS” on page 29. Read how to assign samples to a machine in the section “11.3 ASSIGNING FLEX AND STATIC SAMPLES TO MACHINES” on page 56.

4.5 BANKS

Each project hosts 16 banks and each bank hosts 16 patterns and 4 parts. This makes a bank suited for hosting a complete composition as the available patterns and parts allow a large number of song variations. Switching between banks is seamless, meaning playback won't be halted or audio cut off. For more information, please see “10.1 BANKS” on page 52.

4.6 PATTERNS

For each bank 16 patterns are available, meaning 256 patterns are always at hand. A pattern consists of sequencer data like trigs, parameter locks, track lengths and time signatures for the eight audio tracks and the eight MIDI tracks. For more information, please see “12. PATTERNS” on page 64.

4.7 PARTS

4 parts are available to each bank. A part contains machine assignments and their associated samples, track parameter settings, FX assignments as well as 16 scenes. A pattern is always linked to a part. Changing parts will let the new part be controlled by the active pattern. For more information, please see “10.2 PARTS” on page 52.

4.8 SCENES

Scenes are assigned to the scene A and scene B slots. They decide which parameters the crossfader will affect. For more information, please see “4.8 SCENES” on page 17.

4.9 ARRANGEMENTS

Each project contains eight arrangements. They are used to structure the playback of patterns. An arrangement is a great way to form a long sequence out of several patterns. For more information, please see “14. THE ARRANGER” on page 86.

4.10 TRACKS

An Octatrack pattern handles eight audio tracks and eight MIDI tracks. Each audio track can host a machine. With the exception of Neighbor machines, any machine type can be assigned to any of the eight audio tracks. For more information, please see “4.10 TRACKS” on page 17.

4.11 MACHINES

Machines are assigned to the eight audio tracks. Each machine fills a different purpose. Read more about the various machine types in “APPENDIX A: MACHINE REFERENCE” on page 116. How machines are assigned to tracks is covered in “11.2 ASSIGNING MACHINES TO TRACKS” on page 55.

Flex machines process samples. They offer instant control over samples since Flex samples are loaded to the RAM memory of the Octatrack. The samples available to Flex machines are located in the Flex sample slot list, which can host 128 Flex samples.

Static machines process samples. The samples available to Static machines are located in the Static sample slot list, which can host 128 Static samples streamed from the Compact Flash card. A single Static sample can be as big as 2 gigabytes.

Thru machines are used to listen to the inputs of the Octatrack. They can be used to affect incoming audio with filtering and effects.

Neighbor machines listen to the output of the preceding track. They can be used to build powerful effects chains.

Pickup machines are ideal when wanting to use the Octatrack as a looper device.

4.12 HOW INFORMATION IS HANDLED

When working within a project there is no need to save as all changes are automatically cached on card. Changes made to a project will be remembered even after the machine has been switched off. The only time an operation needs to be carried out is before removing the Compact Flash card. The project should then be synced to the card. For more information about this operation, please see page 30.


There exists a SAVE command for projects though. Once you are content with a project it is wise to save it. If you continue your work with the project, but are not satisfied with the results, you can then bring back the project to the previously saved state by performing a project RELOAD command. For more information, please see "8.4.1 PROJECT" on page 31.



Never turn off the Octatrack while the <CARD STATUS> LED is blinking. It indicates data is being written to the Compact Flash card and disrupting this process may corrupt data. Only when the <CARD STATUS> LED emits a dimmed green and steady light the Octatrack might be switched off.

5. THE USER INTERFACE

The center of Octatrack editing is the LCD display. The main interface screen is shown below:

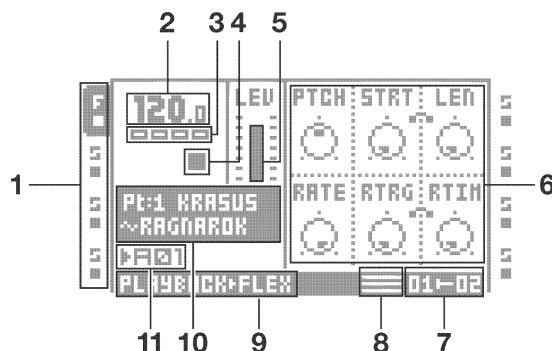

1. Track icons showing the machine assignments and status of the tracks. The active track is highlighted. Track assignments are abbreviated. "F" = Flex machine, "S" = Static machine, "T" = Thru machine, "N" = Neighbor machine, "P" = Pickup machine, "M" = Master track. Beneath the track assignment symbols the status of the track is shown. A play symbol means the sample of the track is playing, a stop symbol means the track is not playing, a plus sign means the track recorder or the Pickup machine of the track is recording. For Pickup machines, more track icons exist. For a complete list, see "9.3 PICKUP MACHINE SAMPLING" on page 49. If the Octatrack MIDI mode is active, the icons will show the MIDI channels the tracks send data to.
2. The current tempo displayed with one decimal.
3. Four boxes showing the playback position. Each box represents a downbeat.
4. The playback/recording status shown by the standard "record", "play", "pause" and "stop" symbols; , , , and .
5. Level bar showing the overall volume level of the machine of the active track.
6. Up to six track parameters. They show what the **DATA ENTRY** knobs control and also indicate the current parameter values. When two parameters belong to each other in some way, they will have a small "clip" between them as shown below:



7. Assigned scenes and the current position of the crossfader.
8. Graphics indicating which TRIG mode that is currently active.
9. Info about which TRACK PARAMETER page is active.
10. Info box where the name of the active part and the name of the sample assigned to the machine of the track is shown.
11. The currently active pattern.

5.1 MENUS AND WINDOWS

When a menu or window is opened the function of certain buttons and/or knobs will change. When a window has functions mapped to certain interface controls, icons representing these controls will be visible in the opened window. The icons are:



The [ARROW] buttons



The [FUNCTION] key



The [TRIG] keys



The **LEVEL** knob



All windows can be closed using the [EXIT/NO] key.

Buttons or knobs not used by an active menu retain their original function. For example, the **TEMPO** menu makes use of the **LEVEL** knob, but you can still use the **DATA ENTRY** knobs to control the parameters of the track in focus.

5.2 PARAMETER EDITING

The **DATA ENTRY** knobs are used to change the value of the track parameters. The physical location of the knobs on the front panel correspond to the layout of the parameters on the screen. Turn **DATA ENTRY** knob **A** to adjust the upper left parameter, turn **DATA ENTRY** knob **B** to adjust the the middle parameter of the upper row and so on. If one of the slots in the parameter grid is blank, the corresponding **DATA ENTRY** knob fills no function in that particular menu.

5.2.1 QUICK PARAMETER EDITING

If the **DATA ENTRY** knob is pressed down while being turned parameters will be adjusted in increments of 7. This makes it much quicker to sweep through a whole parameter range.

5.2.2 PARAMETER VALUE SKIP

Keeping **[FUNCTION]** pressed while turning a parameter will make the parameter values jump to relevant positions. For parameters ranging from 0 to 127 either 0 or 127 will be selected. For parameters ranging from -64 to 63 the values will jump between -64, 0 and +64. Other alternatives exist as well, the value of the Echo Freeze Delay TIME parameter will for example be doubled for each increment. This is useful when using the effect as a repeater.

5.3 QUICK SCROLLING

In menus containing lists, like the file browser or the sample slot lists, quick scrolling is available. Press **[FUNCTION]** + the **[UP]** or **[DOWN]** arrow keys to move the cursor one menu page at a time.




When previewing sounds in the sample slot lists or in the file browser, the quick scroll feature will be temporarily disabled for as long as **[FUNCTION]** is pressed.

5.4 COPY, CLEAR AND PASTE

Copy, clear and paste commands are available in a lot of contexts. A copy operation is performed by pressing **[FUNCTION]** + **[REC]**. A paste operation is performed by pressing **[FUNCTION]** + **[STOP]**. A clear operation is performed by pressing **[FUNCTION]** + **[PLAY]**. Paste and clear operations can be undone by repeating the button press combination. See the different sections in the manual for more information about where these commands are available.

5.5 THE NAMING MENU

The naming procedure is identical for the various naming menus that exist.

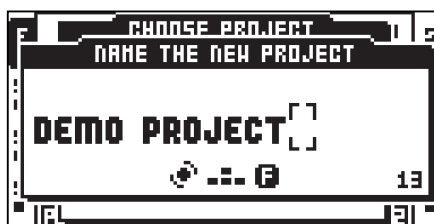

The **[LEFT]** and **[RIGHT]** arrow keys are used to navigate between the letters. Turning the **LEVEL** knob or pressing the **[UP]** or **[DOWN]** arrow keys select the letter. Press **[FUNCTION]** + **[EXIT/NO]** to quickly erase characters. Another method of erasing characters is to press **[CUE]** + **[EXIT/NO]**. The difference compared to using the **[FUNCTION]** + **[EXIT/NO]** method is that the naming pop-up menu will not appear.

5.5.1 POP-UP MENU NAMING

While in a NAMING menu it is possible to open a pop up-menu displaying all available letters, symbols and digits. Entering names in the pop up-menu is often a considerably faster naming method. When a NAMING menu is open, press the **[FUNCTION]** key to access the pop up-menu.



While keeping **[FUNCTION]** pressed use the **[ARROW]** keys to navigate to the character you want to insert. Once there, release **[FUNCTION]** to insert the character.

When naming projects, sets and samples there are two extended pop-up menu pages of characters to choose from. Scroll between the pages by moving the cursor upwards or downwards until the other page is reached.



The number of characters to choose from is slightly more limited when naming parts and arrangements. Only one page of characters exists for these pop-up menus.



Copy, paste and clear commands are available in the naming menus. If you instead of pressing **[FUNCTION]** press **[CUE]** when performing the commands, the pop-up menu won't open.

6. QUICK START

This quick start will guide you through some of the basic operations to allow you to start using the Octatrack right away. First connect it as described in section “3.5 CONNECTING THE UNIT” on page 15.

6.1 DEMO MODE

While in this mode the Octatrack will be able to play back a set of 16 demo patterns without needing to have a Compact Flash card inserted. Demo mode is a great way to get acquainted with the basics of the Octatrack. Note that you can not save any changes made to the sounds or patterns while in demo mode.

1. Make sure no Compact Flash card is inserted. Switch on the Octatrack while keeping the **[ENTER/YES]** button pressed. The LCD screen will state that demo mode is being entered.

6.1.1 PLAYING THE DEMO PATTERNS

In demo mode 16 demo patterns, ranging from A01 to A16, are available.

1. Press **[PLAY]** to listen to pattern A01.
2. Select pattern A02, which is the second demo pattern, by pressing **[PATTERN]** + **[TRIG]** key 2. Pattern A03 is selected by pressing **[PATTERN]** + **[TRIG]** key 3 and so on.
3. Mute tracks by pressing **[FUNCTION]** + the **[TRACK]** key of the track you want to mute. Unmute by repeating the procedure.

6.1.2 ADJUSTING PARAMETERS

Each track contains five TRACK PARAMETER pages. Here you find the parameters that affecting the sample of the track. The buttons used to open the pages are located directly below the LCD screen.

1. Make sure the pattern is still playing.
2. Press the **[TRACK]** key of the track whose sample you wish to affect.
3. To change the pitch of the sample, press the **[PLAYBACK]** key. The PLAYBACK page will open. The parameter labeled **PTCH** changes the pitch of the sample. Turn **DATA ENTRY** knob **A** to change the parameter value.
4. Try out the rest of the TRACK PARAMETER menu parameters to experiment with the sound shaping possibilities.
5. To reload the parameter settings to their original state, press **[FUNCTION]** + **[CUE]**.

6.1.3 EXPERIMENTING WITH SCENES

Scenes contain locked parameters. The crossfader is used to morph between the locked scene parameters. Scenes are covered in the section “4.8 SCENES” on page 17.

1. Select any demo pattern. Set the crossfader to its rightmost position. This will fully activate the scene assigned to scene slot B.
2. Hold **[SCENE B]** and press a **[TRIG]** key to assign a new scene to the scene slot. The already assigned scene is indicated by a red <TRIG> LED. Experiment with assigning different scenes to the scene slot and listen to how the sound of the pattern changes.

6.1.4 RECORDING A PATTERN USING GRID RECORDING

Use GRID RECORDING mode to input sample trigs to the sequencer. Sample trigs trig the machines and samples of the tracks. In depth information about this mode is found in section “12.3.1 GRID RECORDING MODE” on page 65.

1. Press the **[REC]** key to enter GRID RECORDING mode. The <REC> LED will light up, indicating the mode is now active.
2. Select the track to which you want to input sample trigs by pressing the relevant **[TRACK]** button.
3. Press a **[TRIG]** key to enter a sample trig. Press the same **[TRIG]** key again to remove the sample trig. If the pattern contains more than 16 steps, use the **[PATTERN PAGE]** key to switch between the pattern pages.
4. To edit other tracks, change the active track by pressing the other **[TRACK]** buttons.

6.1.5 RECORDING A PATTERN USING LIVE RECORDING

The LIVE RECORDING mode allows you to record sample trigs and parameter changes while the sequencer is running. In depth information about this mode is found in section “12.3.2 LIVE RECORDING MODE” on page 65.

1. To enter this mode, hold **[REC]** and then press **[PLAY]**. The <RECORD> LED starts to blink, indicating LIVE RECORDING mode is activated, and the sequencer starts to play.
2. You can now record sample trigs manually by pressing the last 8 **[TRIG]** keys. Pressing **[TRIG]** key 9 will add a sample trig to track 1, **[TRIG]** key 10 adds a sample trig to track 2 and so on. You will be able to hear all recorded sample trigs the next time the pattern starts over.

6.1.6 PARAMETER LOCKS

A parameter lock allows individual parameter values for a trig. It is one of the most important Octatrack features. For more information, please see “12.5 PARAMETER LOCKS” on page 67.

1. When in GRID RECORDING mode, hold a **[TRIG]** key and then tweak a parameter. The LCD screen graphics of the adjusted parameter will become inverted to indicate that the sample trig now is locked to the value you have set. The <TRIG> LED above the sample trig will flash to indicate that a parameter is locked for that step.
2. To remove all locks for a sample trig, press the **[TRIG]** key of the locked trig twice. You can also remove single locks. Hold the **[TRIG]** key while clicking the **DATA ENTRY** knob corresponding to the locked parameter to do so. The inverted graphics will disappear and the parameter lock is now removed.

6.2 MOUNTING A SET AND LOADING A PROJECT

A set needs to be mounted for the Octatrack to be able to load projects and populate the Flex and Static sample slot lists with samples. The Compact Flash card that came shipped with your Octatrack contains a set called “PRESETS”. This set contains a project also named “PRESETS”.

If you are using an empty Compact Flash card a set needs to be created and mounted before you can start processing samples. For more information, please see “7. SETS” on page 26.

6.2.1 MOUNTING A SET

1. Turn on the Octatrack. Make sure you have a Compact Flash card inserted. If you are using a new Compact Flash card an information window stating “NO SET IS MOUNTED! PLEASE MOUNT ONE.” may appear. Press **[ENTER/YES]** and the menu where sets are mounted and created will automatically be opened. Otherwise, proceed to step 2.
2. Press **[FUNCTION] + [MIXER]** to open the PROJECT menu. Select PROJECT and press **[ENTER/YES]** or the **[RIGHT]** arrow key. Scroll down the list and select CHANGE, located in the SET section.



3. Press **[ENTER/YES]** to open the menu where sets are mounted and created. If you are not working within an existing project a window asking “NOT WITHIN A PROJECT. CHANGES MADE WILL BE DISCARDED. CONTINUE?” will appear. Press **[ENTER/YES]** to proceed with the mounting of the set. Note that any changes you have made will be discarded. If you want to save the changes to a new project, use the SAVE TO NEW command found in the PROJECT menu. Pressing **[EXIT/NO]** will cancel the set mounting operation.



4. If you are using the Compact Flash card that came with the unit, select “PRESETS” and press **[ENTER/YES]**. If you are using an empty Compact Flash card a set needs to be created. Select <CREATE NEW SET> and press **[ENTER/YES]**. Name the set by using the **[ARROW]** keys and when done press **[ENTER/YES]**. Select the set in the list and press **[ENTER/YES]**. A set has now been mounted.



After a set has been mounted the menu where projects are loaded is automatically opened.

6.2.2 LOADING A PROJECT

After a set has been mounted a project should be loaded. The Compact Flash card that came shipped with the unit contains one project, named "PRESETS". This project contains 16 demo patterns. If an empty Compact Flash is used the newly created set will not contain any projects and a project should therefore be created. For more information, please see "8. PROJECTS" on page 28.

1. Press **[FUNCTION]** + **[MIXER]** to open the PROJECT menu. Select PROJECT and press **[ENTER/YES]** or the **[RIGHT]** arrow key. Select CHANGE, located in the PROJECT section.



2. Press **[ENTER/YES]** to open the menu.



3. If the bundled Compact Flash card is inserted, and the set called "PRESETS" has been mounted, select the project "PRESETS" and press **[ENTER/YES]**. The project will be loaded. If a new Compact Flash is used select <CREATE NEW PROJECT> and press **[ENTER/YES]**. Name the project and press **[ENTER/YES]**. The newly created project will be loaded.


6.3 LOADING SAMPLES

When a set has been mounted, and a project preferably has been loaded, the samples in the audio pool of the set can be processed by the Flex and Static machines. To do so a Flex or Static machine needs to be assigned to a track and samples need to be loaded to the Flex or Static sample slot lists. Note that if the audio pool of the mounted set doesn't contain any samples it first needs to be filled with content. For more information, please see "4.2 AUDIO POOL" on page 16.

Two main methods of assigning machines and samples exist. This quick start guide covers the one where the PLAYBACK SETUP menu is used. The other method, using the QUICK ASSIGN menu, is covered in sections "11.2.1 ASSIGNING MACHINES IN THE QUICK ASSIGN MENU" on page 55. and "11.3.1 ASSIGNING SAMPLES IN THE QUICK ASSIGN MENU" on page 56.

6.3.1 ASSIGNING A MACHINE TO A TRACK


1. Select the first track by pressing **[TRACK]** key 1.
2. Enter the PLAYBACK SETUP menu by pressing **[FUNCTION]** and **[PLAYBACK]**. From here the machine list needs to be accessed. If a sample slot list was opened move to the machine list by pressing the **[LEFT]** arrow key.

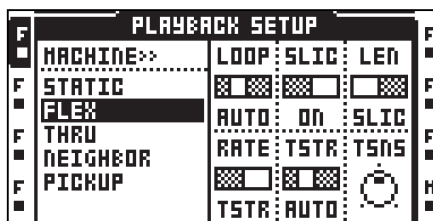


3. Select the machine you want to assign from the list of machines. Press **[ENTER/YES]** to assign it to the track. Note that only Flex and Static machines can play samples. Press the **[RIGHT]** arrow button to enter the sample slot list for the assigned machine.

6.3.2 ASSIGNING A SAMPLE TO A MACHINE


1. Make sure a set with an audio pool containing samples is mounted. The audio pool belonging to the "PRESETS" set found on the bundled Compact Flash card is full of samples. A project should preferably have been loaded as well.
2. Select a track containing a Flex or Static machine by pressing the relevant **[TRACK]** key.
3. Enter the PLAYBACK SETUP menu by pressing **[FUNCTION]** and **[PLAYBACK]**. The sample slot list will be opened. If the machine list is opened, press the **[RIGHT]** arrow key to enter the sample slot list. The sample currently assigned to the machine is indicated by inverted graphics.

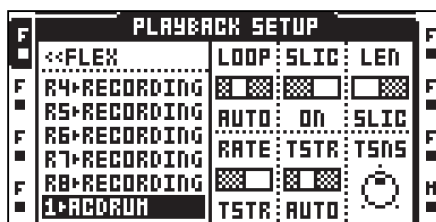


4. If samples already are present in the sample slot list, select a sample and press **[ENTER/YES]** to assign it to the machine.

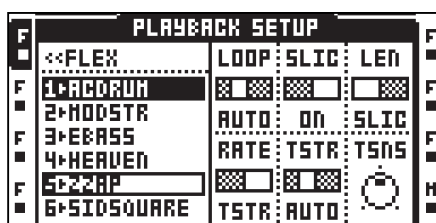

5. To load a new sample from the audio pool to an empty sample slot, select the sample slot and press **[ENTER/YES]**. The file browser listing the content of the audio pool will be opened. If a sample slot already contains a sample, press the **[RIGHT]** arrow key to access the audio pool without assigning the selected sample slot to the machine.

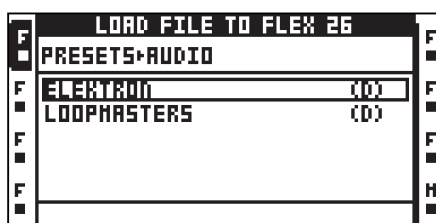

6. Navigate in the audio pool by using the **[UP]** and **[DOWN]** arrow keys. Subfolders in the audio pool are marked with a "(D)", which is short for directory. Open subfolders by pressing the **[RIGHT]** arrow key or **[ENTER/YES]**. Press the **[LEFT]** arrow keys to move back one step in the folder hierarchy. Localize the sample that should be loaded to the sample slot. Press **[ENTER/YES]** to load the sample to the sample slot list.

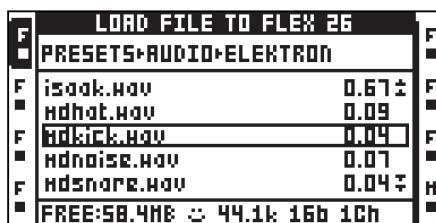

Press **[FUNCTION]** + **[ENTER/YES]** to preview samples from the main outputs. Press **[CUE]** + **[ENTER/YES]** to preview from the cue outputs.

7. SETS

A set is the top layer of the Octatrack hierarchy. Sets are completely self contained. Sets contain:

- An amount of projects only limited by the size of the Compact Flash card.
- An audio pool, where the samples shared by the projects of the set are stored.

A set needs to be mounted in order for the Octatrack to be able to load a project belonging to the set. A mounted set and a loaded project is required for the Octatrack to work as intended. For more information, please see “8. PROJECTS” on page 28.

When booting, the Octatrack automatically mounts the previously mounted set and loads the previous project, but sometimes that might not be possible, for instance when a freshly formatted Compact Flash card has been inserted or when switching cards to a card containing other sets. Sets then have to be manually mounted.

If Compact Flash cards are changed a window stating “WRONG COMPACT FLASH CARD INSERTED. CONTINUE?” will appear. This is a prompt indicating a new Compact Flash card has been inserted. Press [ENTER/YES] to continue. If you decide to proceed a window stating “NO SET IS MOUNTED! PLEASE MOUNT ONE.” will appear. Pressing [ENTER/YES] will automatically open the menu where sets can be created and mounted. If the inserted card contains sets, mount one of them. If the card doesn't contain any sets, create and mount one.

If the Octatrack boots with a set, but no project is active, a window stating “YOU ARE NOT WORKING IN ANY PROJECT. USE THE SAVE AS NEW COMMAND TO KEEP ANY CHANGES!” will appear. Press [ENTER/YES] to make the prompt disappear. Since no project is active, any changes made while in this state will be discarded when mounting another set or loading another project. Use the **SAVE TO NEW** command found in the PROJECT menu to save any changes to a new project. Otherwise, just create or load a new project.



Back up your sets to a computer. Should you lose your Compact Flash card it is easy to transfer the sets from the computer to a new card.

Sets are stored as folders in the root directory of the Compact Flash card. This can be seen when for example connecting the Octatrack to a computer via USB and browsing the content of the Compact Flash card with the computer. Read more on how to connect the Octatrack to a computer in the section “8.5 SYSTEM” on page 32.

7.1 CREATING AND MOUNTING A SET

Sets are created and mounted in the PROJECT menu.

1. Press [FUNCTION] + [MIXER] to open this menu. Select PROJECT and press the right [ARROW] key or [ENTER/YES] to access the sub-menu options. Then select CHANGE, located in the SET section.




2. Press [ENTER/YES]. The active project will automatically be synced to the Compact Flash card, storing all settings and assignments, before the menu where sets are changed is opened.



If no project is active a prompt asking “NOT WITHIN A PROJECT. CHANGES MADE WILL BE DISCARDED. CONTINUE?” will appear. Press [ENTER/YES] to continue with the change sets procedure. Note that this will discard any settings and assignments already made. If you don't want to lose any information, press [EXIT/NO] to cancel the operation. Then save all settings to a new project by using the **SAVE TO NEW** command before changing sets.

Once CHANGE has been selected and [ENTER/YES] been pressed a list of available sets stored on the Compact Flash card will appear.

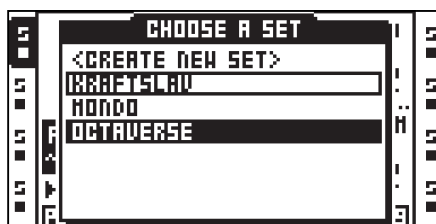

3. The currently active set is indicated by inverted graphics. To mount another set, select one from the list of sets found in the menu. Mount it by pressing **[ENTER/YES]**. Once the set has been mounted, the menu where projects are loaded and created will automatically be opened.
4. Create a new set by selecting **<CREATE NEW SET>** and pressing **[ENTER/YES]**. A naming menu will appear where the new set can be named.



After a set has been mounted a project should preferably be loaded or, if the set doesn't contain any projects, created and then loaded.

7.2 AUDIO POOL

All the samples of a set are collected in the audio pool. These samples are used to fill the Flex and Static sample slots of the projects of the set. When a set is created, an audio pool is automatically created as well.

The content of an audio pool is exclusive to a set. If you want to use the same sample in two sets, the sample needs to be copied to both audio pools.

7.2.1 ADDING CONTENT TO THE AUDIO POOL

To add content to the audio pool the Octatrack should preferably be connected to a computer.

1. Connect the Octatrack to a computer using a USB cable.
2. Open the PROJECT menu, select SYSTEM and then USB DISK MODE. Press **[ENTER/YES]** to make the Compact Flash card appear as a mass storage device in the computer. Read more about the USB DISK MODE in the section "8.5 SYSTEM" on page 32.
3. Using the computer, locate the set folder whose audio pool you want to add audio content to. Inside the set folder a folder called AUDIO is located. This is the audio pool of the set. All audio material in this folder will be accessible by the projects of the set.
4. To add content to the audio pool of the set, simply drag and drop audio files or folders containing audio files to the AUDIO folder. When done the Octatrack should be unmounted from the computer.



When loading samples to the Flex and Static sample slots, the file browser of the Octatrack is used to browse the Compact Flash card. For more information, please see "8.3.3 FILE BROWSER" on page 30.



After opening a set folder, the AUDIO folder and the saved projects of the set are visible. Although audio files can be placed in the project folders it is for convenience sake recommended to put audio files only in the AUDIO folder.

Folders and sub-folders in the audio pool should contain a maximum of 1024 files or sub-folders.

7.2.2 AUDIO FILE COMPATIBILITY

Both Flex and Static machines can handle 16 or 24 bit/44.1 kHz wav/aiff files, either in mono or stereo.

8. PROJECTS

Each set can contain an amount of projects only limited by the size of the Compact Flash card. A project contains:

- 16 banks.
- 8 arrangements.
- 128 Flex sample slots and their associated Flex samples.
- 128 Static sample slots and their associated Static samples.
- 8 track recorders and their recorder buffers.
- A BPM setting controlling the tempo of the patterns.
- PROJECT menu settings.

Projects can be regarded as a collection of compositions. A project could for example contain your whole live set or a certain amount of songs you are working on. One project at a time can be loaded. For the Octatrack to work as intended, a project should always be active, i.e. loaded.

All changes made to an active project are automatically cached on card. This means you can work on a project, switch off the Octatrack, switch it on and start working exactly from where you left off. It is possible to save a project by performing a project **SAVE** command though. This is only necessary if you want to be able to revert the project to a specific state. In general, performing a project **SAVE** command is recommended once you are content with a project. This way you can keep on experimenting with the project, but, if needed, always go back to the saved state by performing a **RELOAD** command. Read more how about how to save and reload a project in section “8.4.1 PROJECT” on page 31.

When not working within a project, for example after mounting a set containing no projects, it is still possible to assign machines, effects and make parameter and pattern settings. The Octatrack will remember the settings of the active bank even after being switched off, but will discard them if a new set is mounted or another project is loaded. Should you want to save the changes as a new project, use the **SAVE TO NEW** command, found in the PROJECT menu. If the Octatrack boot and sense that no project is active a prompt appears saying “YOU ARE NOT WORKING IN ANY PROJECT. USE THE SAVE AS NEW COMMAND TO KEEP ANY CHANGES!”



Before ejecting the Compact Flash card the active project should always be synced to the card, by using the SYNC TO CARD operation. Otherwise changes will be lost. For more information, please see “8.4.1 PROJECT” on page 31.


8.1 PROJECTS AND RAM MEMORY

The total amount of RAM memory available to a project is 85,5 MB. This memory is shared between the track recorders and the samples loaded to the Flex sample slots. By default the Flex sample slots can be filled with 64 MB of samples while the reserved track recorder memory ensures that each track recorder always can sample 2.7 MB of stereo audio. But you can change the allocation of reserved track recorder memory and Flex RAM memory. Track recorder memory can be increased at the cost Flex RAM memory. The opposite also applies, meaning Flex RAM memory can be increased at the cost of track recorder memory. The track recorders can also use Flex RAM when sampling. Read more on how to allocate RAM memory in section “8.6.5 MEMORY” on page 37.


8.2 LOADING AND CREATING A PROJECT

Before loading a project, a set needs to be mounted. Read more about how to create and mount sets in section “7.1 CREATING AND MOUNTING A SET” on page 26.

1. Projects are loaded in the PROJECT menu. Press **[FUNCTION] + [MIXER]** to open this menu. Select PROJECT and press the right **[ARROW]** key or **[ENTER/YES]** to access the sub-menu options. Then select CHANGE, located in the PROJECT section.

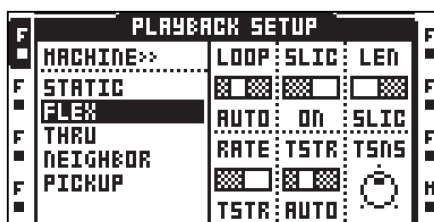

- Press **[ENTER/YES]** to open a list of the projects available to the set. Below the header of the menu the name of the active set is visible. The currently active project is indicated by inverted graphics.

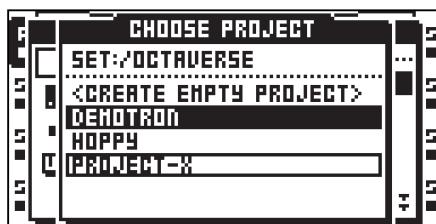

- To load a new project, select one from the list and load it by pressing **[ENTER/YES]**. The currently active project will automatically be synced to card, meaning all settings and assignments will be saved to the card, before the new project is loaded.
- Create a new, empty, project by selecting **<CREATE EMPTY PROJECT>** and pressing **[ENTER/YES]**. A naming menu will appear where the new project can be named.



It is possible to rename and delete projects while in the **CHANGE** menu. Press **[FUNCTION] + [BANK]** to open a menu where rename and delete options are present.


8.3 LOADING SAMPLES TO THE SAMPLE SLOTS

For the Flex and Static machines to be able to play back audio, samples need to be loaded to the Flex and Static sample slots lists of the project. Samples loaded to the 128 Flex sample slots are called Flex samples. They are only available to Flex machines. Samples loaded to the 128 Static sample slots are called Static samples. They are only available to Static machines. The samples in the sample slot lists are accessible by all Flex and Static machines of the project. Read more how to assign the samples of the sample slot lists to Flex and Static machines in section “11.3 ASSIGNING FLEX AND STATIC SAMPLES TO MACHINES” on page 56.

To load samples to the sample slots the audio pool must contain samples. Read more about how to fill the audio pool with content in the section “4.2 AUDIO POOL” on page 16.

8.3.1 LOADING FROM THE QUICK ASSIGN MENU

- The quickest method to load samples to the sample slots is to quickly double press a **[TRACK]** button. The QUICK ASSIGN menu for that track will appear. The Flex sample slot list will be displayed if the active track contained a Flex machine. The Static sample slot list will be displayed if the active track contained a Static machine. If the track contained any other machine type the machine list will appear. If so, open the Flex sample slot list by moving the cursor to FLEX and press the **[RIGHT]** arrow key. Open the Static sample slot list by moving the cursor to STATIC and pressing the **[RIGHT]** arrow key.

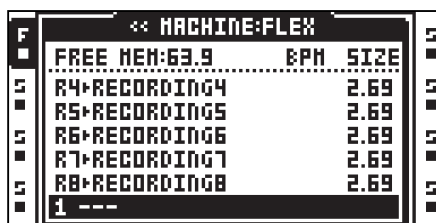

- Select an empty sample slot position and press **[ENTER/YES]**. The file browser, covered in the section “FILE BROWSER” on page 28, will be opened. It reflects the content of the audio pool of the mounted set.
- Locate the sample you wish to load and press **[ENTER/YES]**. Both the Flex and Static sample slot lists can be entered and samples loaded without the machine of the track being changed.

If you want to replace a sample already loaded to a sample slot position, but don't want to assign the sample to the Flex or Static machine of the track, press the **[RIGHT]** arrow key to open the file browser.

It is possible to load samples to the recorder buffers, just as if they were Flex sample slots. The recorder buffers, which contain any audio captured by the track recorders, are found in the Flex sample slot list, located above Flex sample slot position 1. The length of the sample is restricted by the reserved memory of the buffer. If the loaded sample is longer than allowed by the buffer it will be truncated. Mono samples will also be converted to stereo.



It is possible to copy, paste and clear sample slots while in the QUICK ASSIGN menu. Copying a sample slot will copy all its attributes, slices and trim settings.

Select a sample in the Flex/Static sample slot list and press [FUNCTION] + [BANK] to edit it in the audio editor.

Selecting a sample in the Flex or Static sample slot list and pressing [FUNCTION] + [LEFT]/[RIGHT] will load the next or previous sample from the directory the original sample resided in.

At the top of the Flex sample slot list the amount of RAM memory available to the project is shown. If Flex samples are present in the list their BPM and size in MB are also displayed.


Samples can be previewed in the sample slot lists. Select a sample and press [FUNCTION] + [ENTER/YES] to do so. This will preview the sample from the main outputs. Press [CUE] + [ENTER/YES] to preview from the cue outputs. When previewing the quick scroll feature will be temporarily disabled for as long as [FUNCTION] is pressed.

A blinking star next to a file name indicates the sample has been edited in the EDIT menu found in the audio editor, but not yet been saved.

8.3.2 LOADING FROM THE PLAYBACK SETUP MENU

The PLAYBACK SETUP menu can also be used when loading samples to sample slots.

1. Press [FUNCTION] + [PLAYBACK] to open the PLAYBACK SETUP menu and access the Flex and Static sample slot lists. If the machine list appears, select the machine type whose sample list you want to access and press the [RIGHT] arrow key.

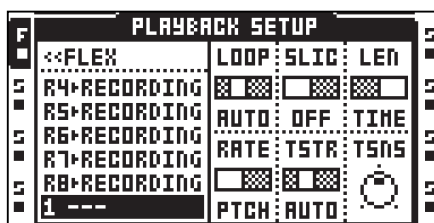

2. Load a sample by selecting a sample slot and pressing [ENTER/YES]. The file browser reflecting the content of the audio pool of the active set will be opened. Locate the sample you wish to load and press [ENTER/YES] to load it.

If you want to replace a sample already loaded to a sample slot position, but don't want to assign the sample to the Flex or Static machine of the track, press the [RIGHT] arrow key to open the file browser.



Select a sample in the Flex/Static sample slot list and press [FUNCTION] + [BANK] to edit it in the audio editor.

Selecting a sample in the PLAYBACK SETUP sample list and pressing [FUNCTION] + [LEFT]/[RIGHT] will load the next or previous sample from the directory the original sample resided in.

Samples can be previewed in the sample slot lists. Select a sample and press [FUNCTION] + [ENTER/YES] to do so. This will preview the sample from the main outputs. Press [CUE] + [ENTER/YES] to preview from the cue outputs. When previewing the quick scroll feature will be temporarily disabled for as long as [FUNCTION] is pressed.

8.3.3 FILE BROWSER

The file browser is used when locating samples that should be loaded to the Flex and Static sample slots. It is a representation of the audio pool of the set.



Folders are indicated by a “(D)”. Open folders by selecting them and pressing the **[RIGHT]** arrow key or **[ENTER/YES]**. If an opened folder contains more files or folders than the menu list can show, two arrows pointing downwards will be visible in the lower right part of the screen. Scroll down in the folder by pressing the **[DOWN]** arrow key. A sample is loaded by selecting it and either pressing **[ENTER/YES]** or the **[RIGHT]** arrow key. However, the file browser is not closed until **[ENTER/YES]** is released. This makes it possible to keep holding **[ENTER/YES]** and use the **[UP]/[DOWN]** arrow keys to instantly load the next or previous file in the directory without having to re-open the file browser for each file. This mode of assignment is handy to use when the sequencer is running and you want to try out how different sample assignments will affect sound and feel of the pattern.

At the top of the menu the folder path is visible. To go back one step in the folder hierarchy, press the **[LEFT]** arrow button. If the file browser was opened from a Flex sample slot list, the bottom of the LCD screen will show how much RAM memory that is available to the project. The size of the samples are indicated in MB to the right of the sample names.

When the cursor is moved over a sample, the smiley symbol at the bottom of the screen will show a happy face if the sample is ready to be loaded without any problems. If the file is too big to be loaded, or if the file is incompatible with the Octatrack audio engine, the smiley will look sad. Samples with an unsupported sample rate, like 48 kHz, will make the smiley look indifferent, indicating the sample will be played back albeit at the wrong speed. To the right of the smiley the sample rate, bit depth and number of channels of the selected sample is shown.

When opening the file browser from a Flex/Static slot already containing a sample, that sample will be indicated by inverted graphics.



Audio files can be previewed in the file browser. Select the file and press **[FUNCTION] + [ENTER/YES]** to do so. This will preview the file from the main outputs. Press **[CUE] + [ENTER/YES]** to preview from the cue outputs. Previewing samples temporarily disables the page scrolling function, initiated by pressing **[FUNCTION] + [UP]/[DOWN]**, for as long as **[FUNCTION]** is held. When previewing, the sample will be affected by the track effects of the active track. It is possible though to preview samples in a dry fashion. The preview behavior setting is found in the **PERSONALIZE** menu. For more information, please see “8.5.4 PERSONALIZE” on page 33.



At the root of the audio pool file structure several folders might be found. The **AUDIO** folder contains the audio pool. Any other folders most likely represent any saved projects of the set. If audio files, as recommended, only have been put in the **AUDIO** folder the project folders will appear as empty when exploring them using the file browser.

8.4 THE PROJECT MENU

In the **PROJECT** menu various project related settings can be made. Press **[FUNCTION] + [MIXER]** to open the menu. Four main menus are located to the left. To access their sub-menus and setting options, select a main menu and press either **[ENTER/YES]** or the **[RIGHT]** arrow key. At the top of the menu the names of the currently active set and project are visible.



8.4.1 PROJECT

Here commands relating to sets and projects are found. Scroll down in the settings list on the right hand side by using the **[DOWN]** arrow key. Select a command by pressing **[ENTER/YES]**.



CHANGE changes the active project to a new one. When selecting this command and pressing **[ENTER/YES]** a list of all projects of the set will appear. Locate the project you want to load and once found, load it by pressing **[ENTER/YES]**. Selecting **<CREATE NEW PROJECT>** and pressing **[ENTER/YES]** will create a new project. A naming menu will then appear.

It is possible to rename and delete projects while in the **CHANGE** menu. Press **[FUNCTION] + [BANK]** to open a menu where rename and delete options are present.

SAVE saves the project. As all changes to a project are automatically cached on card, saving a project and then reloading it is the only way to return to a specific project state. In general you should save a project once you are satisfied with it. When performing a **SAVE** command the project will be synced to card as well.

RELOAD reloads the project to the state it was saved in.

SYNC TO CARD is a recommended operation before ejecting the Compact Flash card as it will sync the cache to the card. Removing the card without first card syncing the project might result in data losses. If a project has been saved using the project **SAVE** command, information about the saved state will be written to the card as well.



Removing the card without first card syncing the project might result in data losses.

SAVE TO NEW saves a copy of the active project under a new name. After selecting this option a naming window will appear. If the currently mounted set contains no projects it is advised to save the current settings and sample assignments to a new project.

EXPORT TO SET allows the currently active project to be exported to a different set. All samples located in the Flex and Static sample slot lists of the active project will be copied to the destination set. Samples located in the project folder will be copied to the new project folder and samples located in the audio pool will be copied to the audio pool of the destination set. Note that the active project will be saved, just as if a project **SAVE** command had been performed, prior to being exported to the new set. It is possible to export a project to a new, empty set which can be created in the export process. This will create a set containing only the exported project together with an audio pool stripped of unnecessary samples. To make sure the audio pool of the new set only contains samples actually being used by the project, the **PURGE SAMPLES** command can be used on the project prior to export.

SET CHANGE will change sets. For more information, please see “7. SETS” on page 26.

COLLECT SAMPLES copies samples that are used by the currently active project into the project directory, which will effectively disconnect the project from the audio pool.


PURGE SAMPLES will remove all unused samples from the project. Note that samples are only removed from the Flex and Static sample slot lists of the project; the actual samples will not be deleted from the audio pool.

SAVE CURRENT BANK works like the save project command, but on a per bank basis. The command will save the settings and assignments of the currently active bank.

RELOAD CURRENT BANK works like the reload project command, but on a per bank basis. The command will revert the currently active bank to the previously saved state.

8.5 SYSTEM

In this menu the USB connection is activated, OS updates performed, date and time set and personal settings made. It also contains a file manager for basic file editing tasks.

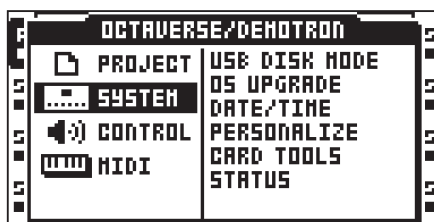

8.5.1 USB DISK MODE

Enables the USB connection. Connect the Octatrack to a computer using a USB cable, select **USB DISK MODE** and press **[ENTER/YES]** to make the Compact Flash card appear as an external mass storage device to the computer. When the Octatrack is connected to a computer via USB audio pools can be

filled with content. For more information, please see “7.2.1 ADDING CONTENT TO THE AUDIO POOL” on page 27.



Unmount the Octatrack from your computer operating system once you want to exit USB DISK MODE.



Use the USB connection to back up sets to a computer hard disk.

8.5.2 OS UPGRADE


This is an alternative to the EARLY STARTUP menu method of OS upgrading. When upgrading the OS in this way an Octatrack OS file, with the file extension .bin, needs to be placed in the root of the Compact Flash card. Select OS UPGRADE and press [ENTER/YES]. A prompt will appear asking if you want to continue with the OS upgrade. Press [ENTER/YES] to upgrade the OS. Press [EXIT/NO] to cancel the operation.



Starting from OS 1.00, the active project will automatically be synced to the Compact Flash card before the OS is upgraded.

8.5.3 DATE/TIME


Here the date and time of the built-in clock are set.

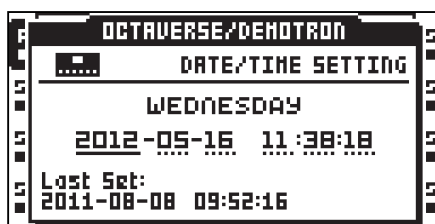

Navigate between the date and time settings using the [LEFT] and [RIGHT] arrow keys. Use the [UP] and [DOWN] arrow keys to adjust the settings. Press [ENTER/YES] to confirm.

8.5.4 PERSONALIZE

Here you can customize the behavior of the Octatrack. Open the menu by selecting it and pressing [ENTER/YES]. Activate and deactivate settings by pressing [ENTER/YES]. It is also possible to use the [LEFT]/[RIGHT] arrow keys for this.

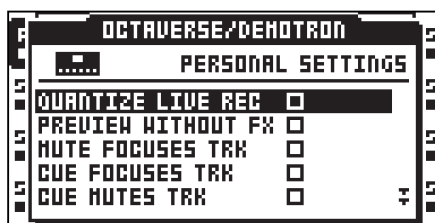

QUANTIZE LIVE REC will when checked quantize notes input while in LIVE RECORDING mode to full sequencer steps. When this option is unchecked notes will be quantized according to the micro timing resolution, which is 1/384 steps.

PREVIEW WITHOUT FX will when unchecked preview samples through the track effects of the active track. If checked, track effects will not affect the previewed sample.

MUTE FOCUSES TRACK will when checked make a track active when being muted through pressing [FUNCTION] + [TRACK].

CUE FOCUSES TRACK will when checked make a track active when it is being cued by pressing [CUE] + [TRACK].

CUE MUTES TRACK will when checked combine the cue and mute functions. When a track is being cued it will at the same time automatically be muted.

DISABLE FUNCTION + ENCODER will when checked disable all functions that normally occur when

[**FUNCTION**] is held and an encoder turned.

DISABLE YES/NO ARM will when checked disable the one shot trig arming and disarming when simply pressing [**ENTER/YES**] or [**EXIT/NO**]. Note that when this arm/disarm functionality is disabled, the same functionality can be achieved by pressing [**FUNCTION**] + [**ENTER/YES**] or [**FUNCTION**] + [**EXIT/NO**]. Read more about one shot trigs in section “12.4.4 ONE SHOT TRIGS” on page 66.

DIS. STOP-STOP ARM will when checked disable one shot trig arming when double pressing [**STOP**] while the sequencer is stopped.

DIS. PAGE AUTOCOPY will when checked no longer auto copy existing trigs when extending the length of a track or pattern. Read more about how to change pattern and track length in section “12.14 SCALE SETUP” on page 77.

DEFAULT TRIG MODE selects the default track triggering mode when creating new projects. Read more about the modes in the section “12.10 PATTERN SETTINGS MENU” on page 73.

DEFAULT REC MODE selects the default trig mode for the track recorders when creating new projects. For more information, please see “9.1 RECORDING EDIT AND SETUP MENUS” on page 45.

SAVE SAMPLES TO offers two settings.

- **AUDIO POOL** will when saving recorded audio or saving samples in the audio editor save the data to the audio pool of the set.
- **PROJECT DIRECTORY** will when saving recorded audio or saving samples in the audio editor save the data to the project folder.


SHORT SAMPLE NAME controls how samples will be abbreviated when loaded to the Flex and Static sample slot lists.

- **BEG+END** will combine the five first characters of the file name with the five last characters. This is the default option.
- **BEG ONLY** will show the first ten characters of the sample name.
- **END ONLY** will show the last ten characters of the sample name.

RECORD QUICK MODE will when activated alleviate the need to press a [**TRACK**] key in combination with the [**AUDIO RECORD**] keys to initiate manual sampling. Instead, pressing the [**AUDIO RECORD**] keys will directly initiate manual sampling for the track recorder of the active track, making one handed sampling operation possible. This quick mode of sampling works a bit different when sampling internal sources. Pressing [**MIDI**] will only initiate sampling when the **RECORDING SETUP** menus are active and **GRID RECORDING** mode is not active. If these menus are not active, MIDI mode will be accessed when the button is pressed. Read more about manual sampling in the section “9.2.1 MANUAL SAMPLING” on page 47.

8.5.5 CARD TOOLS

Offers tools for managing the Compact Flash card. The card can be formatted and files copied, erased, renamed etc.

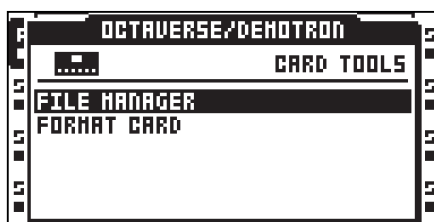

FILE MANAGER is where files on the Compact Flash card are handled. It exists as an alternative to handling files and folders with a computer. When entering the FILE MANAGER mode, sequencer playback will be stopped and the project synced to card.

FILE MANAGER	
OCTAVERSE/DEHOTRON	
arr01.strd	0.01
arr01.work	0.01
arr02.strd	0.01
arr02.work	0.01
arr03.strd	0.01
HK DIR RENAME DELETE COPY PASTE	

Navigate in the file manager using the [**ARROW**] keys. At the top of the screen a folder path is visible.

Two workspaces are available, acting as user-definable short cuts to different locations on the Compact Flash card. To assign a location to workspace 1, navigate to the location you want to assign the workspace to and press **[TRACK]** keys 1-4. The same procedure applies for assigning a location workspace 2, but **[TRACK]** keys 5-8 are used instead. Once workspaces have been assigned, jump to workspace 1 by pressing **[TRACK]** keys 1-4 and to workspace 2 by pressing **[TRACK]** keys 5-8.

The files belonging to the project are located in the folder with the same name as the project. Each file of the project exists in two variants, one with the file extension **.strd** and one with the extension **.work**. Files with the extension **.strd** are the files that previously have been saved by performing a project **SAVE** command. The files with the **.work** extension contain the active project.

At the bottom of the screen the available commands are listed. The commands are chosen with the **[TRACK PARAMETER]** keys. Press **[FUNCTION]** to gain access to more commands.

MK DIR will create a folder. The **NAMING** menu will appear where the folder can be named.

RENAME will rename a file or folder. The **NAMING** menu will appear where the file or folder can be renamed.

DELETE will delete a file or folder.

COPY will copy a file or folder.

PASTE will paste a copied file or folder.

CUT is accessed when holding **[FUNCTION]**. Will cut a selected file or folder.



Be very careful when working within the file manager. If the wrong files are accidentally deleted or renamed, projects can be ruined.



By copying a bank file to another project you can create a project featuring your favorite banks. Note that only sequencer data, parts, scenes and parameter settings will be copied when copying a bank file. No samples will be copied and the machines assigned to the tracks will refer to the same Flex and Static sample slot positions as before. Hence you might need to load the samples used by the copied bank to empty Flex and Static sample slots of the new project and assign these sample slots to the correct machines of the tracks.

FORMAT CARD formats the card. Once selected and **[ENTER/YES]** is pressed a prompt will appear, asking if the operation should proceed. Press **[ENTER/YES]** to format the card. Note that all information on the card will be lost and any partitions gone.

8.5.6 STATUS

This is the menu where information relating to the OS, battery and Compact Flash card is found.




8.6 CONTROL

This is where various track and sequencer settings can be modified.



8.6.1 AUDIO

Controls the behavior of the outputs and selects whether track 8 should be used as a master track or not. Activate and deactivate settings by pressing **[ENTER/YES]**

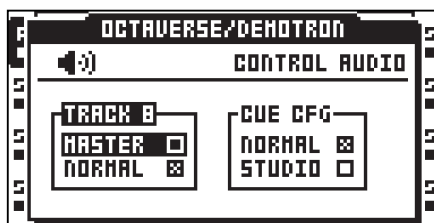

TRACK 8 offers two settings. Only one setting can be activated at a time.

- **MASTER** will when active turn track 8 into a master track. The track effects of track 8 will then affect all the other tracks as well as any audio coming from the external inputs.
- **NORMAL** will make track 8 function like all the other tracks.



AMP SETUP, LFO MAIN/SETUP and EFFECT 1 and EFFECT 2 MAIN/SETUP are the only **TRACK PARAMETER** pages available to a master track.

CUE CFG offers settings which can make the cue outputs function as an assignable pair of outputs. Two settings are available. Only one setting can be activated at a time. Read more about the cue outputs in section “11.6 MAIN AND CUE OUTPUTS ROUTING” on page 62.

- **NORMAL** will make the cue outputs function normally, meaning a track will be routed to the cue outputs when **[CUE]** + **[TRACK]** is pressed.
- **STUDIO** will disable the normal cue functionality. Audio tracks can now be routed to the cue outputs as if they were a standard pair of assignable outputs. Each audio track gets two independent **LEV** settings, one for the main outs and one for the cue outs. Adjust the **LEV** setting for the main outputs by turning the **LEVEL** knob. Adjust the **LEV** setting for the cue outputs by pressing **[CUE]** and turning the **LEVEL** knob. Muting a track while **STUDIO** mode is enabled will mute the sound from both the main and cue outputs.

8.6.2 INPUT

Controls the noise gates and the delay compensation of the audio inputs.




NOISE GATE AB sets the dB level of the noise gate for input pair AB. The threshold is set with the **LEVEL** knob. Any signal below the threshold will be cut. An -INF setting deactivates the noise gate.

NOISE GATE CD sets the dB level of the noise gate for input pair CD. The threshold is set with the **LEVEL** knob. Any signal below the threshold will be cut. An -INF setting deactivates the noise gate.

DELAY COMPENSATE will when activated introduce a very short delay to the audio signal listened to via the **DIR** setting. If for example an audio signal is listened to through both the **DIR** input and a Thru machine/Pickup machine, both signals will then be in sync. If **DELAY COMPENSATE** would have been deactivated in the above scenario, the delay caused by the internal processing would make the audio signal routed to the Thru/Pickup machine play a few milliseconds later than the **DIR** signal. The combined **DIR** and Thru/Pickup signal would then exhibit a slightly phased sound.

8.6.3 SEQUENCER

Here the default behavior of the sequencer is set.

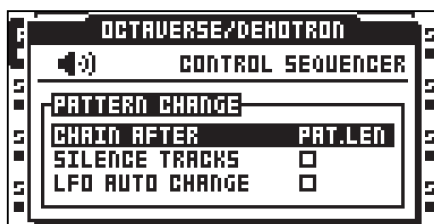


CHAIN AFTER controls when chained patterns will start to play. The default mode is PAT.LEN. When a pattern is playing and a new pattern is selected, the pattern currently playing will play to its end before the new pattern starts playing. If PER TRACK scale mode is active and a very long, or infinite, master length setting is used it might be more convenient to initiate a new pattern after the active pattern has played a certain amount of steps. Set the amount of steps using the **LEVEL** knob. This setting affects all patterns in a project, but can be overridden on a per pattern basis in the PATTERN SETTINGS menu. There the USE PRJ SET setting can be unchecked, allowing for a unique chaining behavior for the chosen pattern. Read more about the PER TRACK mode and the master length setting in section “12.14 SCALE SETUP” on page 77. Read more about the PATTERN SETTINGS menu in section “12.10 PATTERN SETTINGS MENU” on page 73.

SILENCE TRACKS will, when checked, silence all tracks when changing to a pattern linked to a different part. The samples of the tracks will then enter their release phase as set in the AMP menu. When unchecked, samples from the previous pattern/part will continue to play until trigs occur on the tracks of the new pattern. Activate and deactivate this setting by pressing [ENTER/YES]. This setting affects all pattern in the project, but can be overridden on a per track basis. For more information, please see “12.10 PATTERN SETTINGS MENU” on page 73.

LFO AUTO CHANGE will when checked make all LFOs automatically restart with any new LFO settings activated when changing to a pattern containing another part. If unchecked, the settings of the LFOs of the previous pattern/part will not be changed until trigs occur on the tracks of the new pattern. Activate and deactivate this setting by pressing [ENTER/YES].

8.6.4 MIDI SEQUENCER

Contains the CC direct connect setting.

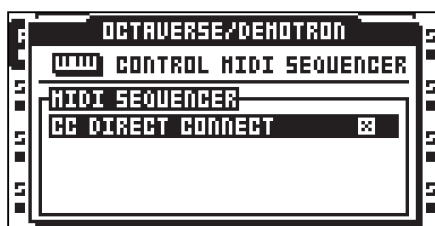

CC DIRECT CONNECT is activated/deactivated by pressing [ENTER/YES]. Two settings exist.

- **ON** will, when the Octatrack MIDI mode is activated, route MIDI CC messages straight to the MIDI output port. When MIDI mode is enabled and LIVE RECORDING mode is active, specified CCs in the CTRL 1 and CTRL 2 SETUP pages can also be recorded by the sequencer. Other CCs will not be recorded by the Octatrack, but still routed to the MIDI output port.
- **OFF** makes the auto channel listen to MIDI CC messages according to the MIDI MODE MAPPINGS table found in “APPENDIX C: MIDI CONTROL REFERENCE” on page 136. MIDI CCs 36-45 sent on the auto channel will be remapped according to the CC messages specified in the CTRL 1 and CTRL 2 SETUP pages.



Messages received on the MIDI channel of the active MIDI track always behave as if CC DIRECT CONNECT is activated.




CC DIRECT CONNECT is useful when for example connecting the MIDI IN and OUT of an external synthesizer to the MIDI OUT and IN of the Octatrack. When CC DIRECT CONNECT is enabled, and the synth is set to local off, turning a knob on the synthesizer will affect that particular synth parameter, given the knob sends a CC message and sends it to the auto channel or the MIDI channel of the active MIDI track. If the CC value of the knob also has been mapped to a CTRL 1/CTRL 2 SETUP menu parameter, it is possible for knob changes made on the external synthesizer to be recorded by the Octatrack when in LIVE RECORDING mode. This behavior also applies to parameter locks. Hold down a [TRIG] key, turn the synth knob and the synth parameter will be locked accordingly.

For a tutorial on how the Octatrack can be set up with external MIDI devices when CC DIRECT CONNECT is activated, please see “16.5 OCTATRACK AS A MIDI CONTROL CENTER” on page 101.

8.6.5 MEMORY

Contains settings related to sample bit depth and the track recorder memory distribution. Use the **LEVEL** knob or the [LEFT]/[RIGHT] arrow keys to change the settings.

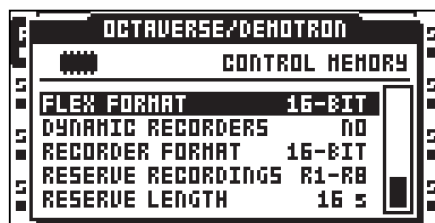

The total amount of RAM memory available to a project is 85,5 MB. This memory is shared by Flex RAM, which is used when loading Flex samples, and track recorder memory, which is used when sampling. In this menu the distribution of Flex RAM and track recorder memory can be set. To the right a bar is shown visualizing the memory distribution. The dotted area in the top represents occupied Flex memory, the white area in the middle represents free RAM and the black area in the bottom represents reserved track recorder memory.

Changes made does not come into effect until exiting the menu. When doing so, a prompt will appear asking you to confirm the changes. This is because the recorder buffers are cleared when changes are made and confirmed.

FLEX FORMAT controls what bit depth samples will be in when loaded to the Flex sample slot list. Samples loaded to the Static slot list are unaffected by this setting. Two settings exist.

- **24-BIT** will retain the bit depth of 24-bit samples when they are loaded. 16-bit samples will still be in 16-bit.
- **16-BIT** will convert 24-bit samples to 16-bit samples when loaded, meaning samples will occupy less Flex RAM memory at the cost of reduced bit depth. If a sample is saved when this setting is active, it will be saved as a 16 bit sample no matter the original bit depth. If a 24-bit sample is saved a prompt will appear informing it will be saved as a 16-bit sample.

DYNAMIC RECORDERS offers two settings.

- **NO** forces the track recorders to use only the track recorder memory, which by default is 16 seconds of sampling time per track recorder. It is possible to increase or decrease the available track recorder memory by using the **RESERVE RECORDINGS** and the **RESERVE LENGTH** settings.
- **YES** makes it possible for track recorders to exceed the track recorder memory and utilize any free Flex RAM memory.

RECORDER FORMAT selects in what bit depth the track recorders will sample. 24-bit and 16-bit settings are available.

RESERVE RECORDINGS chooses which track recorders that can be assigned a certain amount of dedicated sample time. This setting in combination with the **RESERVE LENGTH** setting basically decides the size of the track recorder memory.

- **R1...R1-R8** selects the track recorders that will be affected by the **RESERVE LENGTH** setting. Track recorders outside the selected track recorder range will not have any track recorder memory allocated, making it impossible for them to sample unless **DYNAMIC RECORDERS** is set to YES. These track recorders will then use the Flex RAM memory when sampling.
- **NONE** will add all track recorder memory to the Flex RAM memory, making the total amount of available RAM, which is 85,5 MB, consist of only Flex RAM. As no track recorder memory will be available to the track recorders, sampling will be not be possible unless **DYNAMIC RECORDERS** is set to YES. The track recorders will then utilize the available Flex RAM memory when sampling. When NONE is selected the **RESERVE LENGTH** setting will have no effect at all.


RESERVE LENGTH makes it possible to reserve sample time to the track recorders chosen by the **RESERVE RECORDINGS** setting. These track recorders will always be able to sample the amount of seconds set here. When selecting the reserved sample time, the equivalent in sequencer steps based on the current Octatrack BPM, as well as the amount of RAM the reserved time will occupy, is shown in the upper left corner of the LCD screen. The black bar in the lower right corner of the LCD will also change according to size of the reserved track recorder memory. The more track recorders affected and the more sampling time reserved, the less Flex RAM will become available for Flex samples. This works the other way around as well. Less reserved sampling time means more Flex RAM will be available. If **DYNAMIC RECORDERS** is set to YES and the reserved sampling time is exceeded when sampling, the track recorders will start using the available Flex RAM memory.



By reserving a large amount of RAM memory to a track recorder, internal sampling of complete Octatrack songs are possible.

8.6.6 METRONOME

Configures the Octatrack metronome. A click track is very useful when for example inputting sample trigs or note trigs while in LIVE RECORDING mode. Note that the metronome will only sound when the sequencer is running. The metronome can quickly be toggled on/off by pressing [CUE] + [TEMPO]. Use the **LEVEL** knob or the [LEFT]/[RIGHT] arrow keys to change the settings of this menu.

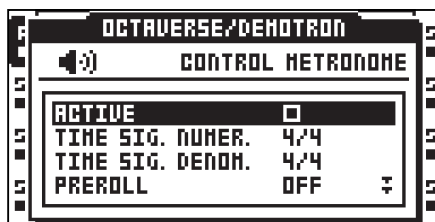

ACTIVE activates/deactivates the metronome.

TIME SIG. NUMER controls the note measure of the time signature of the metronome.

TIME SIG. DENOM controls the beat measure of the time signature of the metronome.

PREROLL controls for how many bars the metronome will sound before the sequencer starts playing. This setting only affects the start of the sequencer when LIVE RECORDING mode is initiated.

CUE VOLUME controls the metronome volume sent to the cue outputs.


MAIN VOLUME controls the metronome volume sent to the main outputs.

TONAL will when active give the click track a tonal character. When deactivated the click track will be constituted of short atonal impulses.

PITCH sets the pitch of the tonal click track. This setting is not available when TONAL is deactivated.


8.7 MIDI

Here MIDI related settings are made.

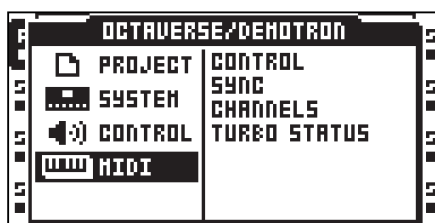

8.7.1 CONTROL

Sets how the Octatrack handles certain MIDI messages.

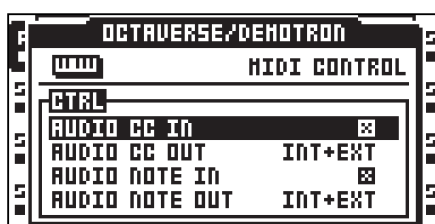

AUDIO CC IN controls whether the audio tracks react to incoming MIDI CCs or not. Enable or disable by pressing [ENTER/YES]. When disabled no CCs will affect the audio tracks.

AUDIO CC OUT sets in what way the knobs used for audio tracks will transmit MIDI CCs. This setting contains three options. Select between the options by pressing the [LEFT] or [RIGHT] arrow keys or by pressing [ENTER/YES].

- **INT** will make the knobs affect only internal parameters. They will not send out any MIDI CCs.
- **EXT** makes the knobs send out MIDI CCs but stops them from affecting internal parameters. This option essentially makes the knobs work in a local off mode.
- **INT+EXT** makes the knobs control both internal parameters and send out MIDI CC data.


AUDIO NOTE IN controls whether incoming MIDI notes should affect audio tracks or not. Enable or disable by pressing **[ENTER/YES]**. When disabled no incoming MIDI notes will affect the audio tracks, meaning tracks or machines can't be triggered externally.

AUDIO NOTE OUT sets what MIDI information the **[TRIG]** keys transmit. This setting contains three options. Select between the options by pressing the **[LEFT]** or **[RIGHT]** arrow keys or by pressing **[ENTER/YES]**.

- **INT** will make **[TRIG]** key presses affect only internal machines or tracks. **[TRIG]** keys will not send out any MIDI notes, unless pressed when being on a MIDI track.
- **EXT** will make **[TRIG]** key presses send out MIDI notes. No internal machines or tracks will be triggered. This option essentially makes the **[TRIG]** keys function in a local off mode fashion.
- **INT+EXT** makes **[TRIG]** key presses trig internal machines and tracks. MIDI notes will at the same time be sent out.

8.7.2 SYNC

Here the Octatrack can be set to transmit and respond to sequencer related MIDI messages. Open the menu by selecting it and pressing **[ENTER/YES]**. Move between the menu options by using the **[ARROW]** keys. Activate and deactivate settings by pressing **[ENTER/YES]**.

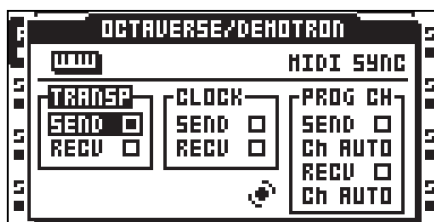

TRANSPORT SEND will when active make the Octatrack send out system realtime messages like play, stop, continue and song position pointer.

TRANSPORT RECEIVE will when active make the Octatrack respond to system realtime messages like play, stop, continue and song position pointer

CLOCK SEND will when active make the Octatrack transmit MIDI clock.

CLOCK RECEIVE will when active make the Octatrack respond to MIDI clock sent from external devices.

PROG CH SEND will when checked send out program change MIDI messages when the active pattern on the Octatrack changes. Which channel the messages are sent on is controlled by the setting below.

CHANNEL sets which channel the Octatrack should send program change messages on. The **LEVEL** knob is used to change this setting. If **AUTO** is chosen the first MIDI channel used by the audio tracks, and not used by any of the MIDI tracks, will be used. If **CHANNEL** is set to a specific MIDI channel, that channel will be used to transmit program change messages.

PROG CH RECEIVE will when checked make the Octatrack listen and react to incoming program change messages that changes the pattern on the Octatrack. Which channel the messages will be received on is controlled by the setting below.


CHANNEL sets which channel the Octatrack will receive program change messages on. If set to **AUTO** any channel specified in the **CHANNELS** menu will be used. For more information, please see "8.7.3 CHANNELS" on page 41. If **CHANNEL** is set to a specific MIDI channel, that channel will be used to receive program change messages.



- Program change messages are ignored by the Octatrack if received on the **AUTO CHANNEL** if the device is in MIDI mode. However, the program change messages are sent through the device but are remapped to the channel set in the **NOTE SETUP** menu of the active MIDI track. Please see "15.4.2 NOTE SETUP" on page 91.
- If both **CLOCK RECEIVE** and **TRANSPORT RECEIVE** are activated, the Octatrack will wait for MIDI clock after receiving start or continue messages for 16 seconds before considering external sync lost. This, for example, allows for preroll in sequencers not starting clock until preroll is completed. If only **TRANSPORT RECEIVE** is enabled the machine will start as soon as possible after receiving start or continue.

8.7.3 CHANNELS

This is where the MIDI channel configuration of the audio tracks is done. Navigate in the menu with the **[LEFT]** and **[RIGHT]** arrow keys. Change MIDI channels by using the **[UP]** and **[DOWN]** arrow keys or the **LEVEL** knob.

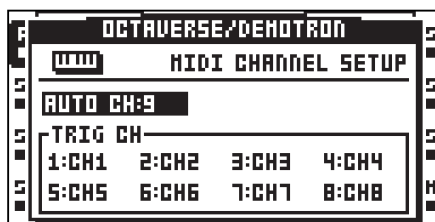

AUTO CHANNEL is the MIDI channel giving access to the currently active track. MIDI CC messages sent to the auto channel can in LIVE RECORDING mode be recorded to the active track. When in MIDI mode and **CC DIRECT CONNECT** is enabled, CC messages sent to the auto channel will be sent straight to the MIDI output port. CC messages specified in the CTRL 1 and CTRL 2 SETUP menus can also be recorded while in LIVE RECORDING mode. If **CC DIRECT CONNECT** is disabled the Octatrack MIDI tracks will react to incoming CCs according to the MIDI MODE MAPPINGS table found in “APPENDIX C: MIDI CONTROL REFERENCE” on page 136.

Pitch information for the audio tracks can be recorded in a chromatic fashion by sending MIDI note data to the auto channel. This is another way of controlling samples chromatically instead of using CHROMATIC mode. For more info about this, please see the NOTE MAPPINGS table found in “APPENDIX C: MIDI CONTROL REFERENCE” on page 136. Read about the CHROMATIC mode in section “12.7.2 CHROMATIC” on page 68. **TRIG CHANNEL** sets which MIDI channels the audio tracks respond and send data to. If for example MIDI channel 1 is assigned to track 1, the track can be externally controlled according to the mappings found in “APPENDIX C: MIDI CONTROL REFERENCE” on page 136. The track can at the same time, when active, send out MIDI data on MIDI channel 1. This occurs when the **DATA ENTRY** knobs are adjusted and when **[TRIG]** keys are pressed. An OFF setting means the audio track will not respond to, nor send out, any MIDI data.



To avoid unwanted MIDI conflicts when controlling external instruments with the Octatrack MIDI sequencer, the MIDI channels assigned to the audio tracks should preferably not be the same as those assigned to the MIDI tracks. Read more about this matter in section “15.2 HOW MIDI IS ROUTED” on page 89.



Parameter locks and scene locks can be entered via the auto channel. This is done by holding down a **[TRIG]** key or a **[SCENE]** key and sending the corresponding CC message. MIDI CC mappings are covered in “APPENDIX C: MIDI CONTROL REFERENCE” on page 136.

8.7.4 TURBO STATUS

Allows Turbo mode negotiation between Elektron gear. Connecting the Octatrack to other Turbo protocol compatible gear, like the Machinedrum and the Monomachine, makes it possible to increase the normal MIDI bandwidth by up to 10x. This increases the accuracy of MIDI clock signals as well as the timing of CC messages. Note that Octatrack MIDI IN/OUT must be connected to the MIDI OUT/IN of the turbo protocol compatible device for the Turbo mode negotiation to function.




CURRENT SPEED shows the current multiplier of the MIDI transfer rate. When the Octatrack is not connected to a MIDI device using Turbo protocol compatible software, the speed will be x 1.0.

NEGOTIATE selects the multiplier of the MIDI transfer rate that should be used. The **[LEFT]/[RIGHT]** arrow keys are used. Press **[ENTER/YES]** to start the negotiation.

8.8 MIXER MENU

In the MIXER menu settings for the headphones output and inputs AB and CD are made. The **LEVEL** knob is used to change settings. While this menu is active, tracks can also be muted and soloed by pressing the **[TRIG]** keys. The MIXER menu settings are common for all banks and patterns of a project.

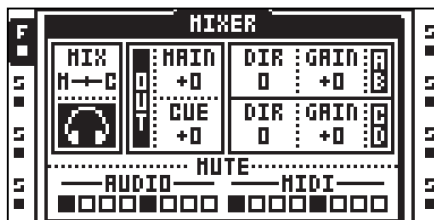

MIX determines what will be heard from the headphones output. If the indicator is set to the leftmost position, the headphones output will be a mirror of the main outputs. If set to the rightmost position only audio from cued tracks will be routed to the headphones output.

MAIN/CUE OUT sets the final output level of the main and cue outputs respectively. A zero setting will neither gain nor attenuate the signal. A +63 setting will boost the signal by 12 dB.

AB/CD DIR offers parameters that will make the Octatrack act like a very basic mixer. It simply routes audio coming from the **A/B** and **C/D** inputs to the main outputs. An **AB/CD DIR** setting of 0 will not send any incoming audio to the main outputs. When **AB/CD DIR** is set to 127 the level of incoming audio sent to the main outputs will neither be increased nor attenuated.

The **DIR** parameters don't affect the volume of incoming audio when sampling. Even if they are set to 0 sampling is therefore possible. **AB/CD DIR** are however affected by **AB/CD GAIN** settings.



The **DIR** mode of input is handy when you perform live and don't have any Octatrack tracks to spare. Depending on the size of your setup a dedicated mixer might not be necessary at all.

DIR sound won't be affected by any of the dual FX blocks, but will be affected by the master track effects if a master track is used. Use Thru machines for affecting incoming audio with the FX blocks.

When not in the MIXER menu the **MAIN** parameter can be adjusted by pressing **[FUNCTION]** while turning the **LEVEL** knob.

AB/CD GAIN can attenuate or gain the audio signal coming from inputs AB/CD. A -64 setting will mute audio altogether, a setting of 0 will neither gain nor attenuate the signal and a setting of +63 will boost the signal by 12 dB. These settings affect the volume of incoming audio when sampling, when setting **AB/CD DIR** levels and when using **THRU** machines.

MUTE offers a visualization of the mute and solo status of the tracks. When the MIXER menu is open the **[TRIG]** keys can be used to mute and solo both audio and MIDI tracks. **[TRIG]** keys 1-8 affect the audio tracks and **[TRIG]** keys 9-16 affect the MIDI tracks.

To mute a track, simply press the corresponding **[TRIG]** key. An unlit <TRIG> LED and a line instead of a square in the track mute section indicate a muted track. A lit red <TRIG> LED and an outlined square in the track mute section means a track is audible. While holding **[FUNCTION]** and pressing the **[TRIG]** keys, the mute changes will be held until **[FUNCTION]** is released. A track that is currently muted but will be unmuted when **[FUNCTION]** is released is displayed as a "+" sign. A track that is currently not muted but will be muted when **[FUNCTION]** is released is displayed as an "X" sign.

It is possible to solo tracks by pressing **[CUE]** + the **[TRIG]** keys corresponding to the tracks you want to solo. A solo'ed track is indicated by a green <TRIG> LED and the letter "S". Unsolo a track by repeating the button combination. Tracks that will be audible once all tracks are unsolo'ed are indicated by half bright red <TRIG> LEDs and dotted squares. The <TRIG> LEDs of tracks muted before the solo operation will be unlit. When exiting the solo mode these tracks will stay muted. Muted tracks being solo'ed will revert to their muted status once solo mode is exited.

If a track is cued, muting it prevents it from being sent to the main outputs. The track will however still be audible from the cue outputs. A cued track being solo'ed will be audible from the main and cue outputs.



If track 8 has been turned into a master track it won't be affected by mutes.

Cue audio output is not available on the master track.

If Neighbor machines are used the track or tracks preceding the last Neighbor machine can not be muted. To mute the chain, mute the last Neighbor machine.




It is possible to mute a track without entering the MIXER menu. Just press [FUNCTION] + the [TRACK] key corresponding to the track you want to mute. Track solo'ing is only possible in the MIXER menu though.

The <TRACK> LEDs also indicate mute status. A muted and currently active track is indicated by a yellow <TRACK> LED. A muted and currently not selected track is indicated by an unlit <TRACK> LED.

8.9 TEMPO MENU

Here the BPM of the project is set. The TEMPO screen is opened by pressing the [TEMPO] key.

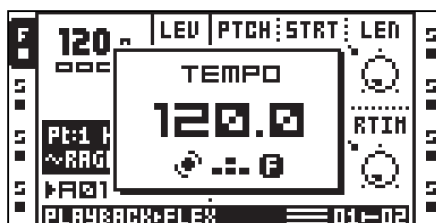

The **LEVEL** knob changes the current tempo in integer steps. The [UP] and [DOWN] arrow keys change the decimal part of the tempo.

8.9.1 TAP TEMPO

To tap a tempo, hold the [FUNCTION] key and tap the [TEMPO] key in a steady rhythm. After four consecutive taps the average tempo of the taps will be set as the new tempo. You can continue tapping the [TEMPO] key, the tapped tempo average will then keep on updating.

8.9.2 PATTERN TEMPO NUDGE

You can temporarily shift the tempo up or down by 10% by pressing the [LEFT] or [RIGHT] arrow keys. When the key is released the BPM will revert back to the original setting. This functionality is very handy when manually syncing your Octatrack to a turntable or an external sound source. Note that you do not need to be in the TEMPO menu to perform this tempo shift.

8.9.3 SAMPLE TEMPO NUDGE

By holding one or more [TRACK] keys and pressing [LEFT]/[RIGHT] the tempo of the samples currently playing on those tracks can be temporarily nudged. This does not affect the sequencer tempo.



In the ARRANGER menu, patterns can be assigned individual tempo settings. Read more in the section "THE ARRANGER" on page 106.

9. TRACK RECORDERS AND PICKUP MACHINES

There are two ways to sample with the Octatrack. Either by using track recorder sampling, which can be performed manually or by using recorder trigs, or by using specialized machines called Pickup machines, which essentially work like loopers. Read more about track recorder sampling in the section “9.2 TRACK RECORDER SAMPLING METHODS” on page 47. Pickup machine sampling is covered in section “9.3 PICKUP MACHINE SAMPLING” on page 49.

When performing track recorder sampling or Pickup machine sampling, track recorders are always used. Each project features eight track recorders, one for each track, and they can be set up to record audio from the external inputs, from the main and cue outputs, from the internal tracks and from various combinations of these sources. Track recorders do not have to be assigned to the tracks as they always are available. The RECORDING SETUP menus, covered in section “9.1 RECORDING EDIT AND SETUP MENUS” on page 45., are used to control from which sources and in what way the track recorders should sample.

By default the track recorder memory is used when sampling, meaning each track recorder can sample for about 16 seconds. The reserved track recorder memory can however be increased or decreased. It is even possible for the track recorders to sample directly to the Flex RAM memory. Settings relating to RAM memory distribution is found in the MEMORY menu. For more information, please see “8.6.5 MEMORY” on page 37. Read more about the general handling of RAM memory in section “8.1 PROJECTS AND RAM MEMORY” on page 28.

Samples captured by the track recorders are stored in recorder buffers. The eight recorder buffers are located in the Flex sample slot list. To play back a sample captured via track recorder sampling, the corresponding recorder buffer needs to be assigned to a Flex machine of a track. Since track recorder sampling is independent from playback, the same track can be used for both sampling and playback of the sample. It is also possible to assign the same recorder buffer to several Flex machines of a pattern. Each Flex machine track can of course still contain individual settings and sequencer trigs. Read more about recorder buffers in section “9.2.3 PLAYBACK OF CAPTURED RECORDER SAMPLES” on page 48. Playback of recorded Pickup machine samples works a bit differently. If a Pickup machine is assigned to a track, it will be hard-linked to both the track recorder and recorder buffer of that track. No recorder buffers thus need to be assigned for Pickup machines to play back recorded samples. Samples captured by Pickup machines are still stored in the recorder buffers though, making it possible to save and edit these recordings.

Recorder buffer content is not automatically saved. If a recorder buffer contains a sample and the corresponding track recorder starts to sample, the original buffer sample will be overwritten by the new sample. Also, samples in the recorder buffers are not retained in memory after switching off the Octatrack or changing projects. If you want to keep recorder buffer samples they need to be saved to the Compact Flash card. This operation can be performed in the RECORDING SETUP EDIT menu, accessed by pressing [FUNCTION] + [BANK] while either RECORDING SETUP menu is active. Alternatively, saving can be done from within the audio editor. This is covered in the section “13.2.5 FILE” on page 85.



For tutorials on how to sample, see “9.2 TRACK RECORDER SAMPLING METHODS” on page 47.

Captured samples can be saved either directly in the audio pool or in the project folder. The setting controlling this is found in the PERSONALIZE menu. For more information, please see “8.5.4 PERSONALIZE” on page 33.

Recorded samples can immediately be time stretched or time compressed to match the BPM of the Octatrack. Note that TSTR in the PLAYBACK SETUP menu must be set to either AUTO, NORM or BEAT for this to function. If set to AUTO, make sure time stretch is activated for the recorder buffer. That is done in the ATTRIBUTES menu of the audio editor. For more information, please see “13.2.4 ATTRIBUTES” on page 83.


The samples captured by the track recorders can be opened directly in the audio editor for further editing. First select the track whose corresponding recorder buffer sample should be edited. Then press [AUDIO RECORD] + [BANK] to open the recorder buffer sample in the audio editor. Read more about the audio editor in section “13. THE AUDIO EDITOR” on page 79. The audio editor can also be accessed from the RECORDING SETUP EDIT menu. Access this menu by pressing [FUNCTION] + [BANK] while either RECORDING SETUP menu is active.

It is possible to sample even though the DIR parameters in the MIXER menu are set to 0.

It is possible to cue incoming audio by pressing [CUE] + [AUDIO RECORD] keys.

Each track recorder features two dedicated RECORDING SETUP pages, where settings relating to what and how the track recorder should sample are found. Placing recorder trigs on the step sequencer, which is needed for recorder trig sampling, is also carried out while either of the two menu pages is active. As track recorders are directly linked to the tracks, the track whose track recorder you wish to edit must be active.


While in either RECORDING SETUP menu, an EDIT menu can be opened by pressing **[FUNCTION]** + **[BANK]**. This menu offers various commands relating to the track recorder.



SAVE ALL RECORDINGS will save all recordings of all track recorders to the Compact Flash card.

GO TO MEMORY CONFIG will open the **MEMORY** menu, where the allocation of the RAM memory can be set. For more information, please see “8.6.5 MEMORY” on page 37.

Enter RECORDING SETUP 1 menu by pressing **[FUNCTION] + [AUDIO REC AB]**.

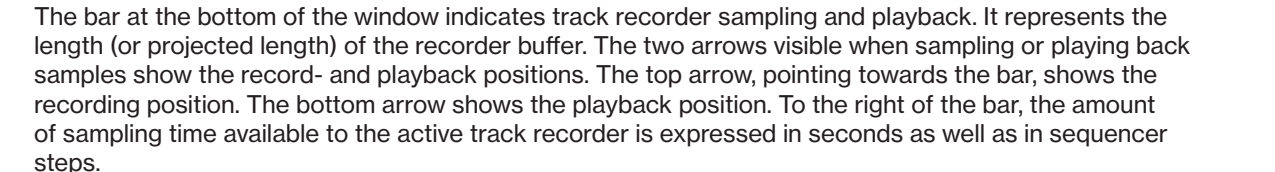

INAB selects which input or inputs of the input pair AB the recorder should sample from.

INCD selects which input or inputs of the input pair CD the recorder should sample from. Five options exist.

- - will make the recorder disregard input CD when sampling.
- **C D** will make the recorder capture a stereo file in which the signal from input C is panned hard left and the signal from input D is panned hard right. This is the default option.
- **C** will make the recorder sample from input C. The captured sample will be in stereo even though only one input is used.
- **D** will make the recorder sample from input D. The captured sample will be in stereo even though only one input is used.
- **C+D** will make the recorder capture a stereo file in which the signals from input C and input D are summed.

RLEN sets the duration of the recording once the track recorder starts to sample. This setting is dependent of the BPM of the sequencer but disregards any scale settings of the track. A setting of 16 will for example always record the equivalent of 16 1/16th notes with a scale setting of 1x. If **RLEN** is set to **MAX** the track recorder will sample for as long as the reserved sampling time allows. By default this is 16 seconds, but this can be increased in the **MEMORY** menu. For more information, please see “8.6.5 MEMORY” on page 37.

TRIG offers three different approaches to the sampling process. This setting also controls how a Pickup machine assigned to the track will work.

- **ONE** will make the recorder, once the sampling process is initiated either manually or by recorder trigs, sample according to the length set by **RLEN**. The sampling process is restarted when pressing **[TRACK] + [AUDIO RECORD]/[MIDI]**.
- **ONE-2** will make the recorder, once the sampling process is initiated either manually or by recorder trigs, sample according to the length set by **RLEN**. The sampling process can be stopped prematurely by pressing **[TRACK] + [AUDIO RECORD]/[MIDI]**.
- **HOLD** will make the recorder, once the sampling process is initiated, sample for as long as the **[TRACK] + [AUDIO RECORD]/[MIDI]** buttons are pressed and held, given they are not pressed longer than the time frame of the **RLEN** setting allows. The outcome of the sample depends on if manual sampling or recorder trigs are used.

When sampling through the use of a recorder trig, the trig will capture only silence as long as **[TRACK] + [AUDIO RECORD]/[MIDI]** are not manually pressed. An example: a recorder trig with an **INAB** setting of A+B, **TRIG** set to **HOLD** and with an **RLEN** setting of 16 is placed on the first step of the sequencer. **[PLAY]** is pressed to start the sequencer. When the sequencer reaches step 4 **[TRACK] + [AUDIO REC AB]** is pressed and held and just before the sequencer reaches step 6 the button combination is released. The recorded sample will then consist of 3 initial 1/16th notes of silence, 2 1/16th notes of audio and finally 11 1/16th notes of silence.

SRC3 chooses which internal source should be recorded. The source selection also defines how sample playback will work when a track recorder trig and a recorder buffer trig are placed on the same sequencer step. If **SRC3** is set to - and a track recorder trig records the audio inputs, the sound the sample trig will play back will be the sound that at the same time is being captured by the recorder trig. All other **SRC3** settings will in a similar scenario make the sample trig play back the sound recorded by the previous trig.

- - will make the recorder disregard any internal sources when sampling.
- **MAIN** will make the recorder sample the mix routed to the main outputs.
- **CUE** will make the recorder sample the mix routed to the cue outputs.
- **T1 - T8** will make the recorder sample the output of the selected audio track.


LOOP sets whether the captured sample will loop or not when played.



If a source is set to “-” and you try to sample from it, only silence will be recorded.

9.1.3 RECORDING SETUP 2 MENU

Enter **RECORDING SETUP 2** menu by pressing **[FUNCTION] + [AUDIO REC CD]**.

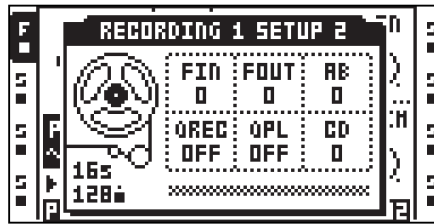

FIN applies a fade in when starting the recording. The value is expressed in sequencer steps. Applying a very short fade in can be used to avoid clicks that otherwise might occur when a recorded sample loops.

FOUT applies a fade out to the recording. The value is expressed in sequencer steps. The fade out is added after the recording stops. If for example recording occurs for 16 steps and **FOUT** is set to 2, the total length of the sample will be 18 sequencer steps. This parameter behaves differently for Pickup machines. In this scenario the fade out will be applied to the beginning of the captured loop.

AB sets the monitoring level of the signal coming from the input pair AB. The setting is only relevant when a Pickup machine is assigned to the track. The **INAB** setting, located in the RECORDING SETUP 1 page, decides which input or inputs that should be monitored. If different track recorders contain different **AB** settings, the setting made for the track recorder of active track is the one that will dictate the current Pickup machine monitoring level. The monitor signal is routed to the active track, meaning any track effects will affect the signal. It will also be routed to the output destination of the active track. This setting is useful if you want to monitor incoming audio a Pickup machine should sample, but don't want to use **DIR** parameter of the MIXER menu.

QREC makes it possible to time quantize manual sampling and Pickup machine sampling.

- **OFF** disables recording quantization.
- **PLEN** will, after pressing the keys initiating recording, start the recording process once the pattern has played its full length.
- **1...** will time the start of the sampling process according to the set number of sequencer steps. If for example 4 is selected, sampling will start on the next beat. If 8 is selected, sampling will start after half a bar.

QPL makes it possible to quantize manual triggering of the recorder buffers and Pickup machines. Manual triggering is done by for example pressing **[TRACK] + [PLAY]** or the last eight **[TRIG]** keys. This parameter has no effect on track recorders triggered by the sequencer. This parameter is a reflection of the **QUANTIZED TRIG** setting available in the ATTRIBUTES menu found in the audio editor. If the **QPL** parameter is changed, **QUANTIZED TRIG** will thus be changed as well, which can be seen when the recorder buffer of the track recorder is opened in the audio editor. For more information, please see "13.2.4 ATTRIBUTES" on page 83.

- **OFF** will make the recorder buffer immediately play back audio once it is triggered. This is the default option.
- **PLEN** will, once the recorder buffer has been triggered, start playback once the pattern has played its full length.
- **1...** will time the start playback of the recorder buffer according to the set amount of sequencer steps. If for example 4 is selected, playback will start on the next beat. If 8 is selected, playback will start after half a bar.

CD works just like the **AB** setting, but for inputs CD.



Setting **FIN** and **FOUT** to their lowest values will help avoid any unwanted clicks that might occur when a recorded sample loops.

9.2 TRACK RECORDER SAMPLING METHODS

Two main methods of sampling exist. Manual sampling is performed by manually pressing keys while recorder trig sampling is an automated process conducted by the use of recorder trigs.

9.2.1 MANUAL SAMPLING

Manual sampling is done through pressing button combinations. By setting **INAB**, **INCD** and **SRC3** of the RECORDING SETUP 1 menu appropriately both mono and stereo sources can be sampled.

[TRACK] + [AUDIO REC AB] will sample from the external input AB to the track recorder of the track.

[TRACK] + [AUDIO REC CD] will sample from the external input CD to the track recorder of the track.

[TRACK] + [MIDI] will sample internal sounds to the track recorder of the track.



If a recorder buffer contains a sample and the corresponding track recorder starts to sample, the original buffer sample will be overwritten by the new sample.



When sampling manually the Octatrack will make a qualified guess of both the BPM of the recorded sample and how many bars that have been sampled. This info can be seen, and changed if needed, when the recorder buffer is opened in the audio editor. For more information, please see “13.2.4 ATTRIBUTES” on page 83.

It is possible to simultaneously sample from several sources by pressing the appropriate button combinations.

By enabling the RECORD QUICK MODE setting, the [TRACK] keys don't need to be pressed to initiate sampling. Just pressing the [AUDIO RECORD] keys is then enough to make the track recorder of the active track start sampling. For more information, please see “8.5.4 PERSONALIZE” on page 33.

The QREC parameter is very useful when manually sampling external gear synced to the Octatrack. Perfect loops are then easy to capture. When manually triggering the loops, use QPL to ensure they are played in perfect sync with the Octatrack pattern.

9.2.2 RECORDER TRIG SAMPLING

Recorder trigs allow an automated sampling process as each recorder trig initiates sampling. Recorder trigs can be placed on the sequencer while being in either the RECORDING SETUP menus or in the TRACK TRIG EDIT menu. For more information, please see “12.9 TRACK TRIG EDIT MENU” on page 72. To be able to place recorder trigs on the sequencer GRID RECORDING mode must be active. Recorder trigs are entered by pressing the [TRIG] keys.

A recorder trig defaults to sampling from all three input sources, but the source selection can be changed for each recorder trig. When in the RECORDING SETUP 1 menu, the source a recorder trig samples from can be seen by pressing and holding the [TRIG] key of the recorder trig. The activated sources are indicated by inverted graphics in the LCD and by lit <AUDIO RECORD> and <MIDI> LEDs.

To activate or deactivate a sampling source for a recorder trig, keep the [TRIG] button of the recorder trig pressed while pressing either [AUDIO REC AB], [AUDIO REC CD] or [MIDI]. Subsequent recorder trigs being placed on the sequencer will default to the latest activated source selection.

Recorder trigs can be turned into one shot recorder trigs. They trig sampling only once, which can be very useful when for example sampling live and not wanting to have to remove a recorder trig once it has initiated sampling. One shot recorder trigs are entered by pressing [FUNCTION] + [TRIG] and are indicated by yellow <TRIG> LEDs. For more information, please see “12.4.4 ONE SHOT TRIGS” on page 66.



If a recorder buffer contains a sample and the corresponding track recorder starts to sample, the original buffer sample will be overwritten by the new sample.



When sampling using recorder trigs the captured sample will be assigned the same BPM as the current BPM setting of the Octatrack. In the ATTRIBUTES menu of the audio editor the BPM assignment of the sample can be changed. For more information, please see “13.2.4 ATTRIBUTES” on page 83.

9.2.3 PLAYBACK OF CAPTURED RECORDER SAMPLES

Each track recorder samples to a dedicated recorder buffer. The eight recorder buffers are located in the Flex sample slot list, directly above the first sample slot position.

MACHINE:FLEX			
	FREE MEM:63.9	BPM	SIZE
R4	RECORDING4		2.69
R5	RECORDING5		2.69
R6	RECORDING6		2.69
R7	RECORDING7		2.69
R8	RECORDING8		2.69
1	---		

A recorder buffer thus functions just like a Flex sample and needs, just like a regular Flex sample, to be assigned to a Flex machine before it can be triggered by the sequencer. However, when sampling with a Pickup machine, no buffer needs to be assigned since Pickup machines are hard-linked to the track recorders and recorder buffers. Read more how to assign samples to machines in section “11.3 ASSIGNING FLEX AND STATIC SAMPLES TO MACHINES” on page 56.



Recorder buffer samples are not retained in memory after the Octatrack has been switched off. If you want to keep them they need to be saved to the Compact Flash card. This is done either in the audio editor, described in the section “13.2.5 FILE” on page 85. or in the RECORDING SETUP EDIT menu, which is accessed by pressing [FUNCTION] + [BANK] while either RECORDING SETUP windows is active.




Before starting to sample using the track recorder sampling methods, it is often a good idea to first assign a recorder buffer to the Flex machine of a track. The recorder buffer should preferably correspond to the track recorder you are going to use when sampling. If for example track recorder 1 is used, recorder buffer 1 could be assigned to a Flex machine assigned to track 1. When sampling with track recorder 1 you will then immediately be able to play back the recorded sample.

9.3 PICKUP MACHINE SAMPLING

Pickup machines offer a specialized way of sampling and are oriented towards building loops. By using Pickup machines it is possible to capture loops, add overdubs, repeat looped sections, add new loops and even adjust the general Octatrack BPM to the BPM of captured loops. Pickup machines can be controlled with for example MIDI foot controllers, making them very well suited for live manipulation of audio.

Pickup machines are still dependent on track recorders and recorder buffers, but can be regarded as an alternate way of controlling them. As soon as a Pickup machine is assigned to a track, it is hard-linked to the both the track recorder and the recorder buffer of that track. Pickup machine behavior is thus controlled by the settings available in the RECORDING SETUP menus. The source they will sample from is set there and the same goes for recording length, fade in/out and so on. Since Pickup machines are linked to recorder buffers as well, no recorder buffer assignments need to be done for a Pickup machine to play back recordings. Note that for a Pickup machine to be able to sample, the track it is assigned to needs to be active.

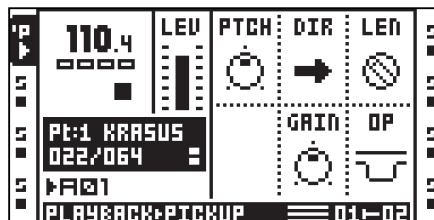

Given Pickup machines are focused on loops, their playback works very differently compared to Flex and Static machines. Pickup machines are not possible to sequence, nor parameter lock. The screen graphics for the Pickup machines also differ a bit compared to other machines. Where the sample name is normally shown, the playback position and loop length, expressed in sequencer steps, are shown instead. To the right of the loop length, information about which trig mode that has been chosen for the Pickup machine is shown. One block equals ONE, two blocks equal ONE2, a standing block equals HOLD.

9.3.1 MASTER AND SLAVE PICKUP MACHINES

The first Pickup machine that records a loop acts as the master. The BPM of the Octatrack will automatically change according to the calculated BPM of the recorded loop. If Pickup machines are assigned to other tracks, the loops they record will be slave loops. The length of these loops can be dependent of the length of the master loop. If the LEN parameter of a slave Pickup machine is set to X1, the loop that machine will record will have the same length as the master loop. It will also force the slave loop to be in phase with the master loop. If set to X2, the slave loop will be double the length of the master loop. If playback of all Pickup machines is stopped, the first Pickup machine that records a new loop will be the new master.

The master/slave relation is visualized by the track icons. Two pixels located at the top left side of the “P” indicate a master Pickup machine. Two pixels to the bottom left indicate a slave Pickup machine.



In the illustration above, the leftmost track icon depicts a master Pickup machine while the right icon shows a slave Pickup machine.

9.3.2 CONTROLLING THE PICKUP MACHINES

To suit a more looper oriented workflow, the function of the **[AUDIO RECORD]** keys is altered for tracks containing Pickup machines. They no longer correspond to the external inputs, but rather function as record and play keys. In general **[AUDIO REC AB]** controls the record function of the Pickup machine, while **[AUDIO REC CD]** controls the play function. However, how they work in more detail depends on the TRIG setting found in RECORDING SETUP 1 menu. A detailed diagram of Pickup machine states is found in the end of this chapter.

If ONE is selected, recording of a new loop will begin when pressing **[AUDIO REC AB]**, given that the track is currently stopped. The loop length is decided by the **RLEN** parameter of the RECORDING SETUP 1 menu. If **[AUDIO REC AB]** is pressed again, while still recording, the recording will restart, just like it does when sampling using a track recorder whose **TRIG** option is set to ONE. When the loop has been recorded the Pickup machine will automatically enter overdubbing mode, unless **[AUDIO REC CD]** was pressed during sampling, in which case it will start playing the loop without overdubbing. Toggle between overdubbing and replacing using the **[AUDIO REC AB]** key. To stop overdubbing, or replacing, press **[AUDIO REC CD]**. This will not stop the playback of the loop, only the sampling process. Toggle between stop and play using **[AUDIO REC CD]**. To overdub again, press **[AUDIO REC AB]** while the loop is playing.

ONE2 works very similar to the ONE mode. The difference is that the loop length may be actively defined by pressing **[AUDIO REC AB]** or **[AUDIO REC CD]** after sampling has started. If **[AUDIO REC AB]** is pressed overdubbing begins, if **[AUDIO REC CD]** is pressed playback begins. If none of the keys are pressed, the loop length will be defined by the **RLEN** setting and the Pickup machine will automatically start overdubbing when the set length has been recorded.

When HOLD is selected, sampling is made by pressing and holding **[AUDIO REC AB]**. When the key is released, the Pickup machine will start playing the loop. To make overdubs, just press and hold **[AUDIO REC AB]** again while the loop is playing. Replacing is not possible in this mode, but you can achieve the same results by setting the **GAIN** parameter of the PICKUP MAIN menu to -INF, given **OP**, found in the same menu, is set to DUB.

The Pickup machine track icons change depending on their current status.



The various Pickup machine states are illustrated above. From left: stopped, playing, recording, overdubbing, replacing.

Once a loop has been recorded it can be doubled by either pressing **[MIDI]** while in the RECORDING SETUP menus, or by pressing **[TRACK] + [MIDI]** at any time. Note that this operation makes a copy of the loop at that specific moment, so it is recommended not to do this while overdubbing.




For a step by step tutorial on how to sample with the Pickup machines, please see “17.1.4 PICKUP MACHINE SAMPLING” on page 104.

Use a MIDI foot controller for hands-free operation of the Pickup machines. The MIDI notes the Pickup machines respond to are outlined in “APPENDIX C: MIDI CONTROL REFERENCE” on page 136. A MIDI foot controller tutorial is found in section “17.1.5 CONTROLLING THE PICK UP MACHINES WITH A MIDI FOOT CONTROLLER” on page 105.

9.3.2 SEQUENCER TO PICKUP SYNC

The Octatrack sequencer can be tempo synchronized to a Pickup machine recording. This is useful if you want to mix pre-programmed tracks with Pickup machine loops and don't want the sync of the sequencer to drift.

Press **[TRACK] + [TEMPO]** to sync the sequencer to a Pickup machine loop. The BPM value normally shown in the top left corner of the LCD will at the same time be replaced with information about which Pickup machine that is controlling the sequencer BPM. To see the tempo of the loop the sequencer is locked to, open the TEMPO window.



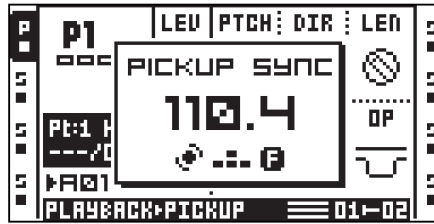


If Pickup sync is activated when the sequencer is stopped and Pickup machines are playing loops, pressing **[PLAY]** will make the sequencer start playing the next time the synced Pickup machine loop starts over. If no Pickup machine is playing, the sequencer will start playing immediately when **[PLAY]** is pressed.



If the Octatrack sequencer is playing, use the QPL setting, found in the **RECORDING SET-UP 2** menu, to start playing the Pickup machines in sync with the pattern.

[AUDIO RECORD] KEYS FUNCTIONALITY FOR VARIOUS PICKUP MACHINE TRIG SETTINGS

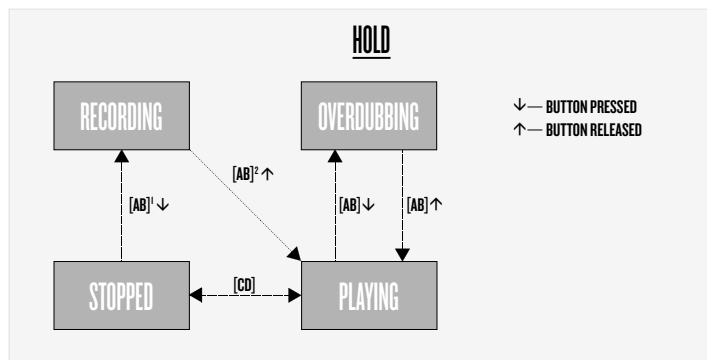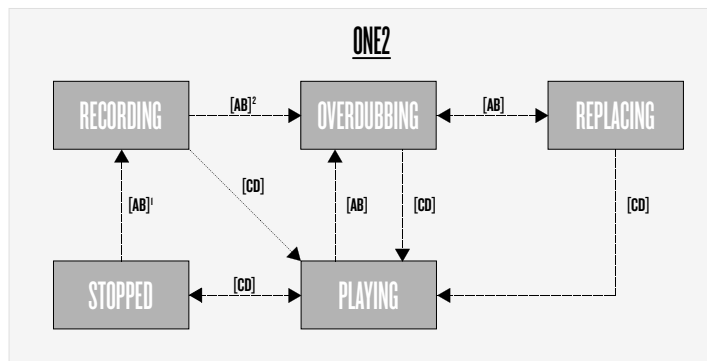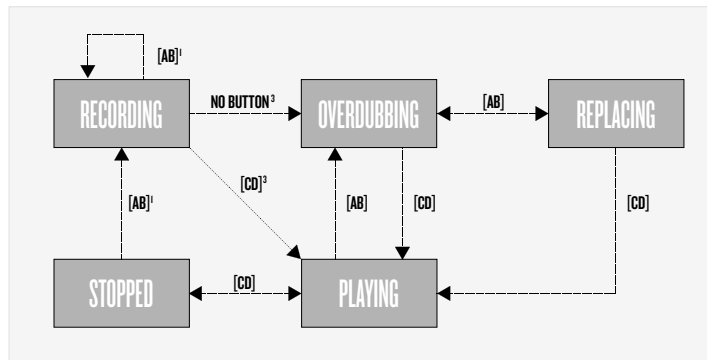

↓ — BUTTON PRESSED
↑ — BUTTON RELEASED

¹) THE OLD RECORDING IS ERASED

²) IF THE BUTTON IS NOT PRESSED (OR RELEASED), THE TRANSITION WILL OCCUR WHEN THE RECORDING POSITION HAS REACHED ITS DESIGNATED LENGTH

³) THE TRANSITION OCCURS WHEN THE RECORDING POSITION HAS REACHED ITS DESIGNATED LENGTH

10. BANKS, PARTS AND SCENES

Each project contains up to 16 banks. Banks contain:

- 16 patterns.
- 4 parts.

Each part contains:

- Information about which machines are assigned to the tracks.
- Information about which Flex and Static sample slots that are assigned to the machines.
- Track effects assignments.
- Track parameter settings.
- 16 scenes.

Scenes contain:

- Scene locks.

10.1 BANKS

An Octatrack project consists of 16 banks. Each bank hosts 16 patterns. Patterns in bank 1 are labeled A01-A16, patterns in bank 2 B01-B16 and so on.

Select a bank by pressing the **[BANK]** button plus one of the 16 **[TRIG]** keys. **[BANK]** + the first **[TRIG]** key will access the first bank, pressing **[BANK]** + **[TRIG]** key 2 will select the second bank and so on.

As soon as **[BANK]** is pressed a prompt saying “CHOOSE BANK” will appear. Banks with content are indicated by green <TRIG> LEDs. A red <TRIG> LED indicates the currently active bank. As soon as a bank is selected the prompt will change to “CHOOSE PATTERN”. Pressing a **[TRIG]** key now will select a pattern located in the selected bank. Patterns with content are indicated by green <TRIG> LEDs. A red <TRIG> LED indicates the currently active pattern. This method of pattern selection allows for quick changes of the active bank and pattern. If you don't wish to select a pattern, just release the button combination after the “CHOOSE PATTERN” prompt appears.



If you are not working within a project only the active bank will be retained in memory after the Octatrack has been switched off. If you have made changes to other banks, and want to keep them, it is very important to save the project. Use the **SAVE TO NEW** command for this. Read more about this command in section “8.4.1 PROJECT” on page 31.

10.2 PARTS

Parts are very useful for adding variations to the patterns of a bank. A part consists of machine, sample and effect assignments along with track parameter settings and up to 16 scenes. Each pattern is linked to a part and one part is thus always active. Each bank hosts 4 parts.

All patterns of a bank default to using part 1. If you for example want the machines of patterns A01 and A02 to use different sample slots or have different settings, it is important these patterns are linked to different parts.

10.2.1 PART QUICK SELECT

To link a part to the active pattern, press **[FUNCTION]** + **[MIDI]** to access the PART QUICK SELECT menu.



The part currently linked to the pattern is shown with inverted graphics. If a part has been altered but not saved it will be marked with an asterisk. Select the part that should be linked to the active pattern by pressing the appropriate **[ARROW]** keys. Press **[ENTER/YES]** to link it. It is possible to quick-link a part by keeping **[FUNCTION]** pressed when selecting the part.

10.2.2 PARTS EDIT

Use the [ARROW] keys to select the part that should be edited and then press [FUNCTION] + [BANK] to open the PARTS EDIT pop-up menu.



RENAME makes it possible to give each part a unique name. After selecting this option and pressing [ENTER/YES] a naming window will appear.

RELOAD makes a part revert to its saved settings. If performing this command and the part previously hasn't been saved a prompt will appear asking to do so.

SAVE saves the part. It is necessary to save a part to be able to perform the part reload command.

SAVE ALL saves all changes made to all parts.



Copy/paste/clear commands are available in the EDIT PARTS menu.

10.2.3 PART RELOAD

If the parameters of a part have been adjusted and you want to revert them to their saved state, press [FUNCTION] + [CUE]. This command can only be applied to parts that have been saved. Should an unsaved part be active when pressing the button combination a prompt stating "SAVE PART FIRST" will appear.



This command is great in a live setting if a lot of parameters has been tweaked and you want the part to sound as it originally did.

10.3 SCENES

Each part contains 16 scenes. A scene is a set of locked parameter values that can be assigned to the two scene slots of the crossfader. Scene locks function much like parameter locks, which are covered in "12.5 PARAMETER LOCKS" on page 67.

The scene assigned to slot A comes into full effect when the crossfader is at its leftmost position and the scene assigned to slot B comes into full effect when the crossfader is at its rightmost position. For all other crossfader positions interpolation between the locked scene parameters will occur. If only one of the assigned scenes contains locked parameters the crossfader will interpolate between those values and the general parameter values of the active part.

The currently assigned scenes are displayed in the lower right part of the LCD screen. Another way to see the assignments is by pressing one of the [SCENE] buttons. The scene already assigned to the scene slot of the pressed [SCENE] button is indicated by a red <TRIG> LED. The scene assigned to the other scene slot is indicated by a green <TRIG> LED. Scenes containing locks are indicated by half-bright green <TRIG> LEDs.



When moving the crossfader, locked scene parameters have priority over parameter locks. This ensures smooth transitions between scene parameters without the sudden changes that might be caused by parameter locks.

10.3.1 ASSIGNING AND ADJUSTING SCENES

To assign a scene to scene slot A, press [SCENE A] + a [TRIG] key. The chosen scene will now be assigned to scene slot A. The procedure is the same for assigning a scene to scene slot B, but instead press [SCENE B] + [TRIG]. It is possible to assign an empty scene to a scene slot, but note that if two empty scenes are assigned crossfader movements will have no effect.

Once a scene is assigned you can lock its parameters. The functionality is similar to assigning parameter locks to a sample trig. Press the [SCENE] button containing the scene you want to assign locks to and choose the value of the track parameters you want to lock by turning the **DATA ENTRY** knobs. The

graphics of the parameters will, just as for parameter locks, become inverted and their locked values displayed. Remove a scene lock by holding the **[SCENE]** button and pressing the corresponding **DATA ENTRY** knob.

To quickly see which tracks and TRACK PARAMETER pages that contain scene locks, press and hold a **[SCENE]** key. The <TRACK> LEDs of all tracks containing scene locks will turn half-bright green and/or start to blink. Selecting one of these tracks will show half-bright green and/or blinking <TRACK PARAMETER> LEDs. They indicate which TRACK PARAMETER pages that contain scene locks.

10.3.2 SCENE VOLUME LOCKING

Certain parameters specially made for volume fades are available exclusively to scenes. The **XLV**, **XVOL** and **XDIR** parameters can be regarded as a set of extra volume controllers on top of the **LEVEL**, **VOL** and **DIR** parameters. The difference lies in the way they handle volume fades. Locking them accordingly will make the crossfader fade between the volume of the tracks or inputs in an equal energy fashion. This way of locking volumes is suitable when wanting to avoid the volume dip that otherwise would occur when the crossfader is used to fade between two tracks and reaches the center position.

The parameters are only visible when keeping a **[SCENE]** button pressed. The **XLV** parameter is found as an overlay to the **LEVEL** parameter found in all TRACK PARAMETER pages. The **XVOL** parameter is found in the AMP MAIN menu. The **XDIR AB** and **XDIR CD** parameters are found in the MIXER menu.

The **XLV** parameter can be locked to two settings.

MIN will mute the signal, post track effects.

MAX will let signal through at the set **LEVEL** signal level.

The **XVOL** parameter can be locked to two settings.

MIN will mute the signal, pre track effects.

MAX will let signal through at the set **VOL** signal level.

The two **XDIR** parameters can each be locked to two settings.

MIN will mute the signal.

MAX will let signal through at the set **DIR** signal level.



Pressing the **LEVEL** knob while holding down the **[SCENE]** key pressed will remove the **LEVEL** lock. An **XVOL** lock is removed by pressing the corresponding **DATA ENTRY** knob while keeping the **[SCENE]** button pressed. An **XDIR AB** lock is removed by pressing knob **B** while keeping the **[SCENE]** button pressed. **XDIR CD** is removed by pressing knob **C** while keeping the **[SCENE]** button pressed.

10.3.3 SCENE MUTE

Mute a scene assigned to a scene slot by pressing **[FUNCTION] + [SCENE A]/[SCENE B]**. When muting a scene the locked parameters of assigned scene will be disregarded and instead the general parameter values of the active part will come into effect. This makes it possible, given the scene parameter values are locked accordingly and the position of the crossfader fully activates the scene, to for example apply washes of effects by unmuting a muted scene.

10.3.4 SCENE COPY

It is possible to copy a scene and paste it to a new scene location.

To copy a scene assigned to scene slot A or B, press and hold a **[SCENE]** key and press **[REC]**. A window saying "COPY SCENE" will appear. Paste a scene by holding a **[SCENE]** key and pressing **[STOP]**. A window showing "PASTE SCENE" will be shown. The copied scene will be pasted to the location of the scene assigned to the scene slot.

10.3.5 SCENE CLEAR

It is possible to clear all scene parameter lock data from a scene.

Hold a **[SCENE]** button and press **[PLAY]**. A window saying "CLEAR SCENE" will appear. The scene assigned to the scene slot will be cleared.

The clear scene operation can be undone by performing the operation one more time. The message "UNDO SCENE" will be shown in the display.

11. TRACKS

The Octatrack sequencer can control 8 audio stereo tracks and 8 MIDI tracks at the same time. This chapter will deal with the audio tracks. For an explanation of the MIDI tracks, see the section “15. THE MIDI SEQUENCER” on page 89.

Flex and Static machines are used to process samples. Thru and Neighbor machines offer various audio routing options. Pickup machines act as looper devices. Read more about the various machine types and the controls available to them in “APPENDIX A: MACHINE REFERENCE” on page 116.

Each track has 5 TRACK PARAMETER pages, each consisting of one MAIN page and one SETUP page. The parameters on these pages affect the behavior of the machine assigned to the track. Read more in section “11.4 TRACK PARAMETER PAGES” on page 57.



The parameters found in the **SETUP** menus open up for more in-depth control of a machine, track or effect. It is recommended that you first acquaint yourself with the parameters found in the **MAIN** pages before starting to experiment with the **SETUP** menu parameters.

The parameters found in the **PLAYBACK** and **EFFECT 1/EFFECT 2** pages differ depending on the machine and effects assigned to the track.

11.1 THE DIFFERENCE BETWEEN FLEX AND STATIC MACHINES

Apart from Flex samples being loaded to the RAM memory of the Octatrack and Static samples streamed from the Compact Flash card, a few other differences between the two machine types exist.

The track LFOs can not modulate the **STRT** parameter of a Static machine. The crossfader can, but if the modulation is too fast the Static machine will not be able to update the start point position correctly, resulting in the sample not being played. Once the Static machine catches up the sample will be played back from the correct start position. Parameter locking the **STRT** parameter will however make the sample play back exactly according to the locked position. Flex samples do not experience these limitations and will always play back from the correct position no matter how heavily modulated the **STRT** parameter is.

11.2 ASSIGNING MACHINES TO TRACKS

Machines can be assigned to a track in either the **QUICK ASSIGN** or **PLAYBACK SETUP** menus.

11.2.1 ASSIGNING MACHINES IN THE QUICK ASSIGN MENU

Open the **QUICK ASSIGN** menu by quickly double pressing the **[TRACK]** button of the track you wish to assign a machine to.

MACHINE:FLEX			
FREE	MEM	BPM	SIZE
R4	RECORDING4		2.69
R5	RECORDING5		2.69
R6	RECORDING6		2.69
R7	RECORDING7		2.69
R8	RECORDING8		2.69
1	RAGNAROK.WAV	120	2.69

If the track contained a Flex machine the Flex sample slot list will be opened. If the track contained a Static machine the Static sample slot list will be opened. Press the **[LEFT]** arrow key to access the machine list. In all other cases the machine list will be accessed directly when opening the **QUICK ASSIGN** menu.

MACHINE:FLEX	
SELECT MACHINE TYPE	
STATIC	
FLEX	
THRU	
NEIGHBOR	
PICKUP	


Select the machine that should be assigned to the track and press **[ENTER/YES]** to assign it.



After assigning a Flex or Static machine, pressing the **[RIGHT]** arrow key will access the sample slot list of the selected machine.

11.2.2 ASSIGNING MACHINES IN THE PLAYBACK SETUP MENU

Select the track you want to assign the machine to by pressing the corresponding [TRACK] button. Press [FUNCTION] + [PLAYBACK] to open the PLAYBACK SETUP menu. If the track contained a Flex machine with an assigned sample the Flex sample slot list will be opened. If the track contained a Static machine with an assigned sample the Static sample slot list will be opened. Press the [LEFT] arrow key to access the machine list. In all other cases the machine list will be accessed directly when opening the PLAYBACK SETUP menu.

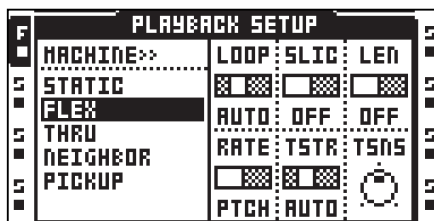

In the leftmost menu all machine types are available. With the cursor, highlight the machine you want to assign. Press [ENTER/YES] to assign it to the selected track.



After assigning a Flex or Static machine, pressing the [RIGHT] arrow key will access the sample slot list of the selected machine.

11.3 ASSIGNING FLEX AND STATIC SAMPLES TO MACHINES

Once samples have been loaded to the sample slot lists they can be assigned to the Flex and Static machines of the tracks. If no samples have been loaded, read how to do so in section “8.3 LOADING SAMPLES TO THE SAMPLE SLOTS” on page 29. Both the QUICK ASSIGN menu and the PLAYBACK SETUP menu can be used when assigning samples.

11.3.1 ASSIGNING SAMPLES IN THE QUICK ASSIGN MENU


Open the QUICK ASSIGN menu by quickly double pressing the [TRACK] button of a track containing a Flex or Static machine you wish to assign a sample to. The Flex sample slot list is displayed if the track contains a Flex machine. The Static sample slot list is displayed if the track contains a Static machine.



Select the sample that should be assigned to the machine of the track and press [ENTER/YES] to assign it.

11.3.2 ASSIGNING SAMPLES IN THE PLAYBACK SETUP MENU

To assign a Flex sample, select a track containing a Flex machine and press [FUNCTION] + [PLAYBACK] to open the PLAYBACK SETUP menu. The Flex sample slot list will appear. To assign a Static sample, open the PLAYBACK SETUP menu of a track containing a Static machine. The Static sample slot list will then appear.

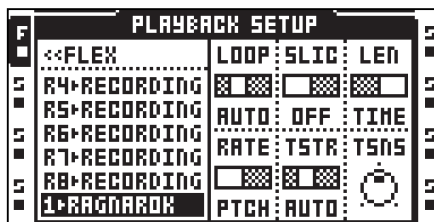

Select the sample that should be assigned to the machine of the track and press [ENTER/YES] to assign it.



Samples can be previewed in the sample slot lists. Select a sample and press [FUNCTION] + [ENTER/YES] to do so. This will preview the sample from the main outputs. Press [CUE] + [ENTER/YES] to preview from the cue outputs. When previewing, the sound is by default affected by the track effects. Samples can be previewed dry though. The setting controlling this is found in the PERSONALIZE menu covered in section “8.5.4 PERSONALIZE” on page 33.

11.4 TRACK PARAMETER PAGES

The five TRACK PARAMETER pages contain parameters that affect the assigned machine and effects. Each TRACK PARAMETER page is divided in two sub-pages. MAIN pages are accessed by simply pressing the [TRACK PARAMETER] keys and offer parameters that are possible to parameter lock, assign to scenes and modulate with the LFOs. Parameters located in the SETUP menus are accessed by either pressing [FUNCTION] + [TRACK PARAMETER] or by quickly double tapping a [TRACK PARAMETER] button. Setup parameters cannot be parameter locked, assigned to scenes or affected by the LFOs. They usually affect the behavior of the main parameters. All TRACK PARAMETER pages contain a shared LEVEL and CUE parameter.

11.4.1 TRACK MAIN LEVEL

All TRACK PARAMETER pages feature a **LEVEL** setting. It is adjusted by the **LEVEL** knob and controls the overall volume of the track, post effects. This setting only affects the level of signals routed to the main outputs. Signals routed to the cue outputs are not affected.

11.4.2 TRACK CUE LEVEL

When pressing [CUE] and turning the **LEVEL** knob the cue level for the track is set. Just like the main level it adjusts the volume of the track post effects. This setting only affects the level of signals routed to the cue outputs. Signals routed to the main outputs are not affected.




Pressing [FUNCTION] and turning the **LEVEL** knob will affect the MAIN parameter of the MIXER menu. This parameter controls the volume of the main outputs. Use this button and knob combination to quickly adjust the main volume of the Octatrack.

When STUDIO mode is activated, **LEVEL** and [CUE] + **LEVEL** control the sound sent to the two output pairs. This mode of routing overrides the default routing mode. For more information, please see “8.6.1 AUDIO” on page 35.


11.4.3 PLAYBACK MAIN

Open the PLAYBACK MAIN menu by pressing the [PLAYBACK] key. This menu will differ depending on the type of machine assigned to the track. Read more about the various machine types and their parameters in “APPENDIX A: MACHINE REFERENCE” on page 116.

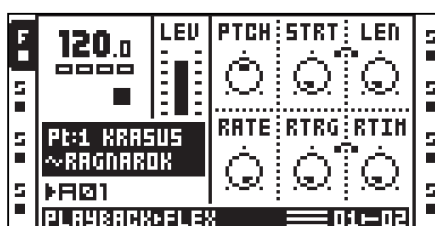






11.4.4 PLAYBACK SETUP

Open the PLAYBACK SETUP menu by either pressing [FUNCTION] + [PLAYBACK] or quickly double tapping [PLAYBACK]. Machines and samples can be assigned in this menu. Setup parameters of the chosen machine are controlled here as well. For more information on the procedure of loading samples to sample slots please see, “8.3 LOADING SAMPLES TO THE SAMPLE SLOTS” on page 29. For more information how to assign machines to tracks and samples to machines, please see “11.2 ASSIGNING MACHINES TO TRACKS” on page 55.

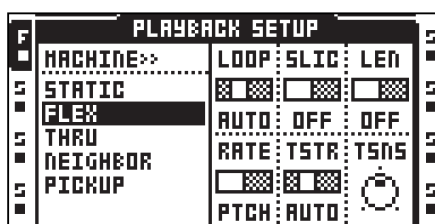

11.4.5 AMP MAIN

Access the AMP MAIN page by pressing [AMP]. Here settings affecting the amplitude and the stereo positioning of the track are found.

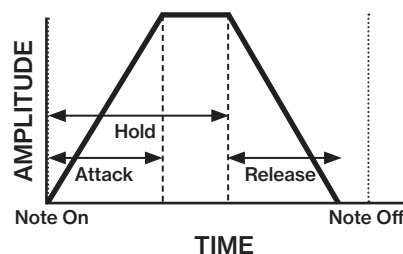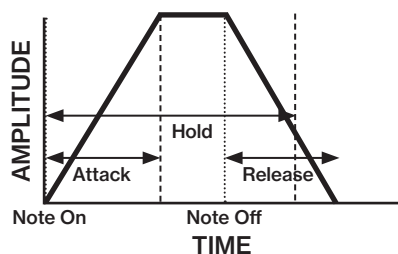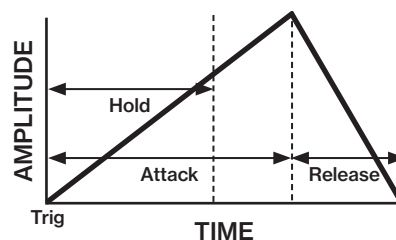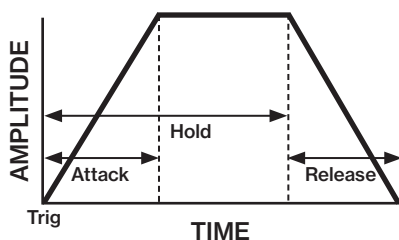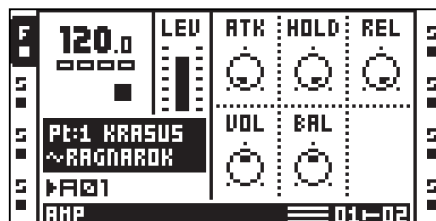

ATK (Attack) sets the time it will take for the amplitude envelope to reach its full level.

HOLD sets the hold time of the amplitude envelope. The signal will be held at during the duration of the hold phase. (From trig to end of hold time.) The Attack time is included in the hold phase. If the Attack length exceeds the hold time, then Release is delayed until the attack is completed.

If the envelope is triggered by a note signal, like from a keyboard, then releasing a key (Note Off) will initiate the release phase if the time between Note On and Note Off is shorter than the Hold time. If the Hold time is shorter than the time between Note On and Note Off, then the release phase will start when the Hold time reaches its end.

The hold phase is by default dependent on the BPM. The parameter is expressed in the amount of sequencer steps the hold phase will last.



If you set Hold to infinite length and use a keyboard to trigger the envelope, then the sound will be sustained for as long as you press a key on the keyboard (or until the sample ends).

REL (Release) sets the time it will take for the signal to fade out.


VOL sets the volume of the track, pre effects. This setting affects signals being sent to both the main and cue outputs.

BAL positions the sample in the stereo field.

XVOL is a setting that only will appear when pressing a [SCENE] key. This parameter can only be locked to scenes. For more information, please see "10.3 SCENES" on page 53.

11.4.6 AMP SETUP

Open the AMP SETUP menu by either pressing [FUNCTION] + [AMP] or quickly double pressing [AMP]. The graphical envelope shows which parameters control which aspect of the envelope. It is a static image and doesn't reflect the current envelope settings.

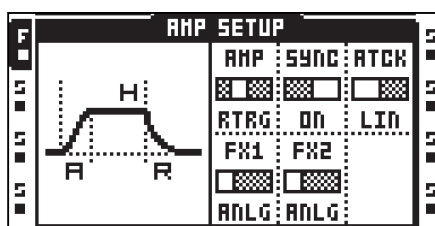

AMP controls the behavior of the amplitude envelope.

- **ANLG** will make the envelope attack start from the current envelope level when a sample is triggered.
- **RTRG** will make the amplitude envelope start from zero every time a sample is being triggered.
- **R+T** will make the amplitude envelope start from zero every time a sample trig or a trigless trig is activated by the sequencer.
- **TTRG** will make the envelope attack start from the current envelope level when a sample or a trigless trig is activated.

SYNC sets if the amplitude envelope should be synced to the Octatrack BPM or not.

ATCK sets how the attack of the envelope should behave.

- **LIN** will make the envelope attack work in a linear fashion.
- **LOG** will make the envelope attack work in an exponential fashion. This setting allows for more smooth fade ins.

FX1 controls how the envelope will affect the multi mode filter or the amplitude modulator when either of these effects are assigned to effect block 1.

- **ANLG** will, if the multi mode filter is assigned to effect 1, not necessarily make the filter envelope start from zero once a sample trig is being triggered. Instead, the filter envelope attack will start from the current envelope level. If the amplitude modulator is assigned to effect 1 the phase will be restarted each time a sample trig is triggered.
- **RTRG** will, if the multi mode filter is assigned to effect 1, make the filter envelope start from zero every time a sample trig is being triggered. If the amplitude modulator is assigned to effect 1 the phase will be restarted each time a sample trig is triggered.
- **R+T** will, if the multi mode filter is assigned to effect 1, make the filter envelope start from zero every time a sample trig or a trigless trig is activated by the sequencer. If the amplitude modulator is assigned to effect 1 the phase will be restarted each time a sample trig or a trigless trig is being activated.
- **TTRG** will, if the multi mode filter is assigned to effect 1, not necessarily make the filter envelope start from zero once a sample trig or a trigless trig is activated by the sequencer. Instead, the filter envelope attack will start from the current envelope level. If the amplitude modulator is assigned to effect 1 the phase will be restarted each time a sample trig or a trigless trig is being activated.


FX2 works just like FX1 parameter. It only affects the multi mode filter or amplitude modulator when either of these effects are assigned to the second effects slot.



FX1 and FX1 AMP SETUP parameters are the only TRACK PAGE parameters, apart from the EFFECT pages, that are available to a master track.

11.4.7 LFO MAIN

Here the speed and depth settings of the three track LFOs are found. LFOs are always synced to the tempo of the Octatrack. Press the [LFO] button to access this page.

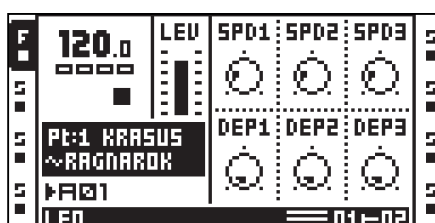

SPD1 sets the speed of LFO1. The higher the value the faster the LFO runs. For LFO speed synchronised to straight beats, try settings of 16, 32 or 64. Note that the **MULT** settings in the LFO SETUP menu affect the LFO speed settings. The **SPD1** setting is reflected by the **SPD** setting found in the LFO1 page of the LFO SETUP menu.

SPD2 sets the speed of LFO2. This setting is reflected by the **SPD** setting found in the LFO2 page of the LFO SETUP menu.

SPD3 sets the speed of LFO3. This setting is reflected by the **SPD** setting found in the LFO3 page of the LFO SETUP menu.


DEP1 sets the modulation depth of LFO1. This setting is reflected by the **DEP** setting found in the LFO1 page of the LFO SETUP menu. See page 71 for a more detailed description of the modulation depth parameters.

DEP2 sets the modulation depth of LFO2. This setting is reflected by the **DEP** setting found in the LFO2 page of the LFO SETUP menu.

DEP3 sets the modulation depth of LFO3. This setting is reflected by the **DEP** setting found in the LFO3 page of the LFO SETUP menu.

11.4.8 LFO SETUP

This page contains more detailed settings for the three LFOs. Open the LFO SETUP menu by either pressing **[FUNCTION]** + **[LFO]** or quickly double pressing **[LFO]**.

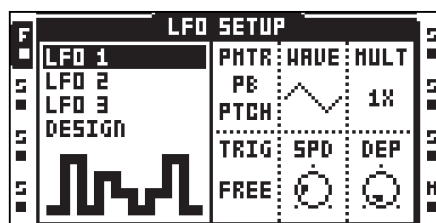

In the column to the left there are three identical pages for the three track LFOs, plus one LFO designer page.

To edit the behavior of an LFO, navigate to the corresponding page by using the **[UP]/[DOWN]** arrow buttons. The track LFOs feature six setup parameters.

PMTR chooses the parameter the LFO will modulate. LFOs can only modulate parameters found in the TRACK PARAMETER MAIN pages. When selecting the parameter that will be modulated the TRACK PARAMETER page it belongs to are shown above the parameter name.



If you use an LFO to modulate the speed and depth of the two other LFOs, note that an LFO only can modulate LFOs with a lower number. This means LFO 3 can modulate the speed and depth of LFO 1 and 2 while LFO 2 only can modulate the speed and depth of LFO 1.

WAVE selects the waveform shape of the LFO. Eleven basic waveforms plus eight LFO designer waveforms are available.

MULT multiplies the **SPD** parameter by the selected value.

TRIG sets how the LFO should react when a sample is triggered.


- **FREE** makes the LFO run continuously, never restarting or stopping.
- **TRIG** makes the LFO restart when a sample is triggered. After that it runs continuously until a new sample is triggered.
- **HOLD** makes the LFO run free in the background, but when a sample trig is encountered the output LFO level is latched and held still until the next sample trig.
- **ONE** will make the LFO restart when a sample is triggered, run for one cycle and then stop.
- **HALF** will make the LFO restart when a sample is triggered, run for half a cycle and then stop.
- **SYNC TRIG** will restart the LFO on track start. The LFO then plays continuously.
- **SYNC ONE** will restart the LFO on track start. The LFO will then play for one period.
- **SYNC HALF** will restart the LFO on track start. The LFO will then play for half a period.

SPD sets the base speed of the LFO. The speed is always synced to the BPM setting. As both speed and multiplier parameters exist the speed of an LFO can range from very slow to very fast. The **SPD** settings for all three LFOs are also reflected in the LFO MAIN page.

DEP sets the amount of modulation applied to the target parameter. Setting DEP to 127 allows for modulating a parameter to and from any extreme value. For example, if the target parameter is set to 64 a saw wave LFO DEP setting of 64 is sufficient for modulating the target value to its minimum (0) and maximum (127) values. The DEP settings for all three LFOs are also reflected in the LFO MAIN page.

11.4.9 LFO DESIGNER

The LFO designer allows you to draw customized LFO shapes. Such waveforms can in some instances almost be regarded as mini-sequencers as they for example can be used to make rhythmic track parameter changes. Each audio track hosts one LFO designer and all designer waveforms are available to all audio track LFOs. MIDI tracks can only use designer waveforms created in the MIDI LFO SETUP menu. The LFO designer waveforms are selectable by the **WAVE** parameter found in the LFO 1-3 pages of the LFO SETUP menu. They are represented by small visualizations of their waveform shapes and are labeled T1-T8. Access the LFO designer by navigating to the DESIGNER menu in the leftside column.

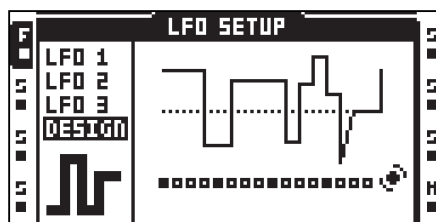

A custom LFO waveform consists of 16 steps where each step can have a unique value. The steps can either be stepped or interpolated. All changes made to the waveform are instantly visualized by the LFO waveform representation in the center of the LCD screen.

[TRIG] buttons in combination with the upper row of **DATA ENTRY** knobs are used to draw the LFO waveform.

To change a waveform step, press the corresponding **[TRIG]** button and turn one of the top-row **DATA ENTRY** knobs. While the **[TRIG]** pressed the <TRACK> LED above it will be dimmed. The first knob you turn will manipulate the selected step value and any knobs on its right and left side will affect the waveform step values to the right and left of the originally selected step. Press a **[TRIG]** button to see the value assigned to the corresponding waveform step.

More waveform steps than one can be manipulated simultaneously. To do that, just press down several **[TRIG]** buttons while turning a knob. All steps values will then be adjusted by the same amount.

To interpolate between two steps, select a waveform step by pressing and holding the corresponding **[TRIG]** key and then press the **[TEMPO]** key. Interpolation between the value of the selected waveform step and the value of the next waveform step will now occur. To remove an interpolation, just repeat the button press combination. Interpolated steps are indicated by yellow <TRACK> LEDs on the step sequencer and sloped curves in the LFO waveform visualization.

An EDIT menu is available while the LFO DESIGNER menu is active. Press **[FUNCTION]** + **[BANK]** to access it. Two commands are available.

- **RANDOMIZE** will create a random LFO waveform.
- **INVERT** will invert the created LFO waveform.



[FUNCTION]+**[LEFT]**/**[RIGHT]** can be used to rotate the LFO designer sequence.

Copy/clear/paste operations are available in the LFO DESIGNER menu. This makes it possible to copy LFO designer waveforms between tracks. When performing a clear operation, all waveform steps will be set to 0 and interpolation will be set to stepped.

11.4.10 EFFECT 1 AND EFFECT 2

Each track features two assignable effects. The selectable effects differ between the two effect pages. For a complete listing of all the effects and their main and setup parameters, see “APPENDIX B: EFFECTS REFERENCE” on page 121.

EFFECT 1 offers:


- 12/24dB Multi Mode Filter
- 2-band Parametric EQ
- DJ-style Kill EQ
- 2-10 Stage Phaser
- Flanger

- 2-10 tap Chorus
- Spatializer
- Comb Filter
- Dynamix Compressor
- Lo-fi Collection

EFFECT 2 offers:

- 12/24dB Multi Mode Filter
- 2-band Parametric EQ
- DJ-style Kill EQ
- 2-10 Stage Phaser
- Flanger
- 2-10 tap Chorus
- Spatializer
- Comb Filter
- Dynamix Compressor
- Lo-fi Collection
- Echo Freeze Delay
- Gatebox Plate Reverb
- Spring Reverb
- Dark Reverb

Assign an effect by either pressing **[FUNCTION] + [EFFECT 1]/[EFFECT 2]** or quickly double pressing **[EFFECT 1]/[EFFECT 2]** to open up the EFFECT 1/EFFECT 2 SETUP menu.

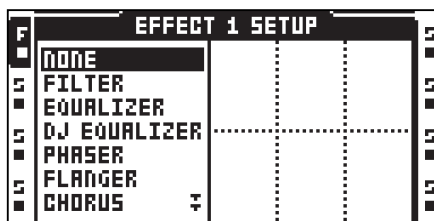

The effects available are listed in the left side column. Use the **[ARROW]** keys to select the effect you want to assign and then press **[ENTER/YES]** to assign it. The setup parameters of the assigned effect are visible to the right.

11.5 DIRECT TRACK MUTING

To directly mute a track, press **[FUNCTION] + the [TRACK]** button of the track that should be muted. The **<TRACK>** LEDs indicate the mute status. A muted and currently active track is indicated by a yellow **<TRACK>** LED. A muted and currently not selected track is indicated by an unlit **<TRACK>** LED.



If track 8 has been turned into a master track it won't be affected by mutes.

If Neighbor machines are used, muting the track or tracks preceding the last Neighbor machine will not have any effect. To mute the chain, mute the last Neighbor machine.



Tracks can be also be muted in the MIXER menu. For more information, please see “8.8 MIXER MENU” on page 42.

11.6 MAIN AND CUE OUTPUTS ROUTING

Tracks and audio inputs can be routed to either the main outputs or the cue outputs. Tracks and audio inputs are routed to the main outputs by default. Read more about different routing scenarios in section “16. OCTATRACK SETUP EXAMPLES” on page 95.

11.6.1 MAIN OUTPUT ROUTING

This is the default setting. All tracks and inputs are routed to the main outputs.

11.6.2 CUE OUTPUT ROUTING

Pressing **[CUE]** + **[TRACK]** will route the selected track to the cue outputs. A cued track will still be audible from the main outputs. When a track is cued the **<TRACK>** LED of the track will flash. Note that cue output is not available on track 8 if it is set to be the master track. By pressing **[CUE]** + the **[AUDIO RECORD]** buttons it is also possible to route the audio inputs to the cue outputs. Cued inputs are indicated by alternating **<AUDIO RECORD>** LEDs.

11.6.3 PARAMETERS AFFECTING MAIN AND CUE LEVELS

Different parameters affect the volume of the track or inputs depending on how they are being routed.

TRACK MAIN LEVEL is set by the **LEVEL** knob. It will affect the post effects signal of the track when it is being routed to the main outputs. It will not affect the cue level of a cued track. The LCD screen shows a graphic indicator of the level (and its numerical value while the knob is being turned).

TRACK CUE LEVEL is set by pressing and holding **[CUE]** while turning the **LEVEL** knob. It will affect the post effects signal of the track when it is being routed to the cue outputs. It will not affect the main level of a track. The cue level has a separate graphic level indicator which is shown instead of the main level indicator while **[CUE]** is pressed. This is not applicable to track 8, if it has been set to be the master track, in which case the cue output is unavailable and the level graphic indicator will be shown in gray.

VOL is found in the AMP MAIN menu of the track. It will affect the pre effects signal of a track, regardless of the track being routed to the main or cue outputs.

DIR is found in the MIXER menu. It affects the signal of incoming audio routed to the main outputs. It doesn't affect the cue level when the audio inputs are cued. When cueing the audio inputs, the cue level will be an equivalent of a **DIR** setting of 100.



By enabling the **STUDIO** mode, the default main and cue output routing behavior can be changed. **STUDIO** mode is handy when wanting to use the cue outputs as a pair of assignable outputs. For more information, please see “8.6.1 AUDIO” on page 35.

If a cued track is muted it will only be audible from the cue outputs.

When the **CUE MUTES TRACK** setting, found in the **PERSONALIZE** menu, is activated a track being cued will be muted at the same. Read more in the section “8.5 SYSTEM” on page 32.

The **XLV**, **XVOL** and **XDIR** parameters are available exclusively to scenes. They are useful for avoiding dips in volume when doing fades between tracks or inputs. Read more about these parameters in the section “10.3.2 SCENE VOLUME LOCKING” on page 54.

The **MIX** parameter in the **MIXER** menu sets how much of the main and cue signals that should be sent to the headphones output. Read more about the parameter in the section “8.8 MIXER MENU” on page 42.

12. PATTERNS

The sequencer of the Octatrack is incredibly powerful and plays an extremely important role in processing sounds and samples.

The sequencer stores information in patterns. Patterns consist of information about how the eight audio tracks and eight MIDI tracks should be played back. All adjustments made to patterns are automatically saved. If you wish to alter a pattern but keep the initial sample trig placements you will have to copy the pattern to a new location and then use the copied pattern as the basis for the new pattern. A pattern contains:

- Sample trigs for the eight audio tracks.
- Note trigs for the eight MIDI tracks.
- Track recorder trigs for the eight track recorders.
- Trigless trigs for the eight audio tracks and the eight MIDI tracks.
- Swing trigs for the eight audio tracks and the eight MIDI tracks.
- Slide trigs for the eight audio tracks.
- One shot trigs for the eight audio tracks.
- Information about which pattern is linked to a part.
- Parameter locks.
- Conditional locks
- Sample locks.
- Length and time signature of the tracks.

12.1 TRIG LED INDICATIONS

Depending on if the <REC> LED is lit or not the <TRIG> LEDs will display different information when the sequencer is playing.

If the <REC> LED is unlit the eight rightmost <TRIG> LEDs will indicate sample trigs being activated by the sequencer. <TRIG> LED 9 acts as an indicator for track 1, <TRIG> LED 10 acts as an indicator for track 2 and so on.

If the <REC> LED is lit the various trigs of the active track will be shown.

12.2 BASIC PATTERN OPERATIONS

The Octatrack can switch between patterns without any audible lag. This, plus the ability to chain patterns, are handy features when for example making live improvisations.

12.2.1 SELECTING A PATTERN

Each project hosts 16 banks each containing 16 patterns. Banks and patterns are selected using the **[BANK]** and **[PATTERN]** keys in combination with the 16 **[TRIG]** keys.

Patterns can be selected from the currently active bank or from one of the other banks. Press the **[PATTERN]** button in combination with one of the 16 **[TRIG]** keys to select a pattern located in the currently active bank. Patterns containing data are indicated by green <TRIG> LEDs. The currently active pattern is indicated by a red <TRIG> LED.

Select a pattern from another bank by first selecting the bank by using the **[BANK]** + **[TRIG]** keys. After the "CHOOSE PATTERN" prompt appears, press one of the **[TRIG]** keys to select a pattern located in the chosen bank.

12.2.2 PATTERN CONTROL

Pressing **[PLAY]** will start the playback of a pattern. Pressing **[STOP]** will stop the playback of all tracks, except tracks containing Thru machines. The sound will be cut off, but effects like the Echo Freeze Delay will continue to be audible until the delay repeats have faded out. When the sequencer is stopped, quickly pressing **[STOP]** + **[STOP]** will stop playback of all tracks containing Thru machines, kill the Echo Freeze Delay and send out an all notes off MIDI command on all MIDI tracks. After a pattern has been stopped, pressing **[PLAY]** will make the pattern start playing from the beginning.

When a pattern is playing and **[PLAY]** is pressed the playback will be paused. Press **[PLAY]** again to resume the playback.

12.2.3 PATTERN CHAINING

You can use pattern chaining to loop a sequence of patterns. It is only possible to chain patterns located in the same bank, and a chain can not contain the same pattern twice. Chain patterns by pressing and holding the **[PATTERN]** button and then press and hold the **[TRIG]** keys in the same order as you want the chained patterns to play. Chaining is indicated by a double arrow between the current pattern and the pattern that will play next. Several patterns can be chained.

Pressing **[STOP]** while a pattern chain is playing will stop playback and reset the pattern chain. Next time **[PLAY]** is pressed the pattern chain will start playing from the beginning. If **[STOP]** has been pressed, pressing **[STOP]** again will unlink all patterns in the chain.

12.3 RECORDING MODES

The Octatrack offers two main modes of inputting trigs when creating a pattern, GRID RECORDING mode and LIVE RECORDING mode.

12.3.1 GRID RECORDING MODE

GRID RECORDING is a method of composing where trigs are added by using the 16 **[TRIG]** keys. In the default state, the 16 **[TRIG]** keys represent 1 bar of 16th notes. This is however dependent on the SCALE SETUP settings.

Enter GRID RECORDING mode by pressing the **[REC]** key. A lit red <REC> LED indicates GRID RECORDING mode is active. Select the track to which you want to add trigs by pressing the relevant **[TRACK]** button. Place for example sample trigs on the sequencer by pressing the **[TRIG]** keys. Sample trigs are indicated by red <TRIG> LEDs. Several trig variants exist and they are covered in section “12.4 TRIG TYPES” on page 66.

If the pattern contains more than 16 steps, switch to the pattern page you want to edit by pressing the **[PATTERN PAGE]** key. The active pattern page is being indicated by a fully lit <PATTERN PAGE> LED.

Press **[PLAY]** to listen to the sequence. You can input sample trigs when the sequencer is playing as well.



All trigs of a track can be shifted forwards or backwards on the sequencer. While in GRID RECORDING mode, hold down **[FUNCTION]** while pressing the **[LEFT]** or **[RIGHT]** arrow keys to perform the trig shift.

12.3.2 LIVE RECORDING MODE

LIVE RECORDING mode is the second method of adding trigs to the tracks. In this recording mode, the **[TRIG]** keys can be played in real time to input trigs. It is also possible to enter parameter locks in real time. Trigs input in LIVE RECORDING mode will by default be quantized to full sequencer steps, hence not micro timed. This behavior can be changed in the PERSONALIZE menu. For more information, please see “8.5.4 PERSONALIZE” on page 33.

Hold **[RECORD]** while pressing **[PLAY]** to enter LIVE RECORDING mode. The sequencer will start to play and the <RECORD> LED will start to flash. You can now enter sample trigs in real time by pressing **[TRIG]** keys 9-16. Pressing **[TRIG]** key 9 will input a sample trig on track 1, pressing **[TRIG]** key 10 will input a sample trig on track 2 and so on. When in TRACKS mode or CHROMATIC mode, trigless trigs, instead of sample trigs, can be recorded if **[FUNCTION]** is held while pressing the **[TRIG]** keys. This is useful if you, for instance, want to use the CHROMATIC mode to live record pitch changes to a sample, but don't want the sample to restart on every pitch change. Read more about the TRACKS and CHROMATIC trig modes in the section “12.7 TRIG MODES” on page 68.

Turning a knob while in LIVE RECORDING mode will input parameter locks to the active track. The parameter locks will be input as trigless locks when no sample trigs are present. Sample trigs will be parameter locked accordingly.

To erase trigs in real time, press and hold **[EXIT/NO]** + the **[TRACK]** key of the track you wish to erase trigs from. All trigs hit by the running LED of the sequencer will be erased from the active track. The trigs of more than one track can be removed by pressing several **[TRACK]** keys simultaneously.

To remove only parameter locks in real time, press and hold **[FUNCTION]** + **[EXIT/NO]**. All trigs hit by the running LED of the sequencer will be erased from the active track. Sample locks will however not be erased.

Remove sample locks in real time by pressing **[EXIT/NO]** while pressing the **LEVEL** knob.

Remove specific parameter locks in real time by pressing **[EXIT/NO]** while pressing the **DATA ENTRY** knob corresponding to the parameter that should be removed.



To stop both the recording and the playback of the sequencer, press **[STOP]**. To exit LIVE RECORDING mode and keep the sequencer playing the pattern, press **[PLAY]**.

12.4 TRIG TYPES

The Octatrack sequencer accommodates a number of different trig types. Trigs can be entered while being in GRID or LIVE RECORDING mode and are, depending on the type of trig, indicated by red, green or yellow <TRIG> LEDs colors.

12.4.1 SAMPLE TRIGS

Sample trigs trig the machine of the track, making the sample assigned to the machine play. Enter by simply pressing a **[TRIG]** key. Sample trigs are indicated by red <TRIG> LEDs.

12.4.2 TRIGLESS LOCKS

Trigless locks do not trig machines, LFOs or FX envelopes. Enter them by pressing **[FUNCTION]** + **[TRIG]**.

Trigless locks are indicated by half-bright green <TRIG> LEDs. Already existing sample trigs can be turned to trigless locks by pressing **[TRIG]** + **[EXIT/NO]** twice. To turn a trigless lock to a trigless trig, press **[TRIG]** + **[ENTER/YES]**. When pressing the **[TRIG]** key of a trigless lock, it will turn into a sample trig. Press the **[TRIG]** key again to remove the sample trig altogether.

When in LIVE RECORDING mode and changing lockable parameters, trigless locks containing the locked parameters will be entered on the sequencer by default.

12.4.3 TRIGLESS TRIGS

Trigless trigs function similarly to trigless locks, but trig LFOs and FX envelopes. They can only be applied by converting sample trigs or trigless locks.

Trigless trigs are indicated by green full-bright <TRIG> LEDs. An already existing sample trig can be turned to a trigless trig by pressing **[TRIG]** + **[EXIT/NO]**. To turn a trigless lock to a trigless trig, press **[TRIG]** + **[ENTER/YES]**. When pressing the **[TRIG]** key of a trigless trig, it will turn into a sample trig. Press the **[TRIG]** key again to remove the sample trig altogether.

12.4.4 ONE SHOT TRIGS

One shot trigs trig a sample or a track recorder only once. They are especially useful when using the Octatrack as a backing track machine, as they for example can trig very long Static samples without retriggering them once the pattern loops. This trig type is also available to recorder trigs. One shot trigs are not available to MIDI tracks.

If a track contains several one shot trigs, all one shot trigs of that track will be disarmed once one of the one shot trigs has been activated by the sequencer. This extends to the tracks of other patterns as well. If a one shot trig has been triggered on track 1 of pattern A01, any one shot trigs on the first track of patterns A02-P16 will also be disarmed.

One shot trigs are entered by pressing **[FUNCTION]** + the **[TRIG]** key of an existing sample trig. The <TRIG> LED will change from red to yellow, indicating the trig now is now a one shot trig. One shot trigs that have been activated by the sequencer are indicated by alternating yellow and red <TRIG> LEDs. Quickly pressing **[STOP]** + **[STOP]** while the sequencer is stopped, power cycling the Octatrack or changing projects will re-arm all one shot trigs. The **[STOP]** + **[STOP]** behavior can be disabled in the PERSONALIZE menu. For more information, please see “8.5.4 PERSONALIZE” on page 33.

There exists several ways of arming and disarming one shot trigs. While in GRID RECORDING mode and either the RECORDING SETUP menus or the TRACK TRIG EDIT menu with REC TRIG chosen, is active, all one shot recorder trigs of the active track will be re-armed when pressing **[ENTER/YES]**. The text “ARM REC TRK” will be visible. The one shot recorder trigs will keep re-arming for as long as the key is held. Note that one shot sample trigs will not be affected. This way of arming and disarming can be disabled in the PERSONALIZE menu. For more information, please see “8.5.4 PERSONALIZE” on page 33.

Pressing **[TRACK]** + **[ENTER/YES]** will also re-arm all one shot recorder trigs of a track. The one shot recorder trigs will keep re-arming for as long as the key combination is held. Pressing **[TRACK]** + **[EXIT/NO]** will disarm all one shot recorder trigs of a track. These operations can be performed even if GRID RECORDING mode is not active. Nor do the RECORDING SETUP menus or the TRACK TRIG EDIT menu have to be open.

While in GRID RECORDING mode and no particular menu is open, all one shot sample trigs of the active track will be re-armed when pressing either **[ENTER/YES]** or **[FUNCTION]** + **[ENTER/YES]**. The text

“ARM TRK” will be visible. Pressing either **[EXIT/NO]** or **[FUNCTION] + [EXIT/NO]** will disarm one shot sample trigs of the active track. The text “DISARM TRK” will be visible. Note that one shot recorder trigs will not be affected. Arming and disarming by pressing **[ENTER/YES]** and **[EXIT/NO]** can be disabled in the PERSONALIZE menu. For more information, please see “8.5.4 PERSONALIZE” on page 33.

If GRID RECORDING mode is not active, all one shot trigs, both recorder and sample variants, of all tracks will be re-armed when pressing either **[ENTER/YES]** or **[FUNCTION] + [ENTER/YES]**. The text “ARM ALL” will be visible. Arming one shot trigs in this way can be done while the sequencer is running. Similarly, pressing either **[EXIT/NO]** or **[FUNCTION] + [EXIT/NO]** can be used to disarm all one shots trigs. Arming and disarming by simply pressing **[ENTER/YES]** and **[EXIT/NO]** can be disabled in the PERSONALIZE menu. For more information, please see “8.5.4 PERSONALIZE” on page 33.



In the PROJECT menu you can disable the arm/disarm functionality when pressing **[ENTER/YES]** or **[EXIT/NO]**. For more information, please see “8.4 THE PROJECT MENU” on page 31.

12.4.5 SWING TRIGS

Swing trigs affect the timing of the sample trigs. They are indicated by green <TRIG> LEDs. Swing trigs are entered in the TRACK TRIG EDIT menu, which is covered in section “12.9 TRACK TRIG EDIT MENU” on page 72.

12.4.6 SLIDE TRIGS

Slide trigs can make the parameter values of a sample trig slide to the parameter values of the subsequent sample trig. They are indicated by green <TRIG> LEDs. Slide trigs are entered in the TRACK TRIG EDIT menu, which is covered in section “12.9 TRACK TRIG EDIT MENU” on page 72. Slide trigs are not available to the MIDI tracks.

12.4.7 RECORDER TRIGS

Recorder trigs are used to initiate track recorder sampling. They are indicated by red <TRIG> LEDs. For more information, please see “9. TRACK RECORDERS AND PICKUP MACHINES” on page 44.


12.5 PARAMETER LOCKS

Parameter locks is a powerful feature that allows every trig to have its own unique parameter values. All sample trigs of a track could for example have different pitch or volume settings. Parameter locks can be applied to sample trigs, trigless trigs, trigless locks and one shot trigs. All parameter locks of a trig can either be removed by performing a TRIG LOCK CLEAR command, or by simply removing the trig and entering it again. For more information, please see “12.8.10 TRIG LOCK CLEAR” on page 72.

To apply parameter locks, GRID RECORDING mode should be active. Add locks to a trig by pressing and holding the **[TRIG]** key of the trig. Adjust the parameters you want to lock using the **DATA ENTRY** knobs. The graphics in LCD will become inverted for the locked parameter and the locked parameter value will be displayed. The <TRIG> LED of the locked trig will begin to flash rapidly, indicating the trig now contains a parameter lock. Remove a single parameter lock by holding **[TRIG]** + pressing the **DATA ENTRY** knob of the locked parameter.

12.6 SAMPLE LOCKS

Each sample trig of a track can play a different sample. To do this, open the SAMPLE LOCK menu by holding down a **[TRIG]** key and either pressing the **[UP]/[DOWN]** keys or turning the **LEVEL** knob.

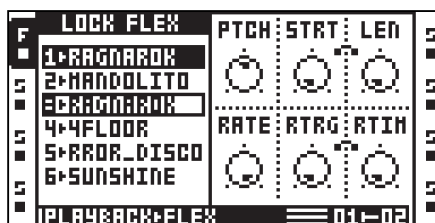

The sample slot list of the machine assigned to the track will appear. The sample already assigned to the machine is called TRK DEFAULT. While holding the **[TRIG]** key of the sample trig pressed, use the **[UP]/[DOWN]** arrow keys or the **LEVEL** knob to navigate in the list. Select the sample that should be locked to the sample trig and press **[ENTER/YES]** to lock it. Sample locks are indicated by a rapidly flashing red <TRIG> LED.

12.7 TRIG MODES

The various TRIG modes affect how the 16 [TRIG] keys are used when no RECORDING mode is active. Select which TRIG mode that should be active by pressing [FUNCTION] + [UP] or [DOWN].




The currently active TRIG mode is indicated in the lower right part of the LCD screen, to the left of the scene assignment graphics. Each TRIG mode has its own unique graphical representation.

12.7.1 TRACK


This is the default TRIG mode. When not in any RECORDING mode, [TRIG] keys 1-8 trig any disconnected audio tracks and [TRIG] 9-16 trig the machines of the eight tracks. Machines can also be triggered by pressing [TRACK] + [PLAY]. Stop playback of the machines by pressing [TRACK] + [STOP]. When in MIDI mode the last eight [TRIG] keys are instead used to trig disconnected MIDI tracks. Read more about how to disconnect tracks in section "12.10 PATTERN SETTINGS MENU" on page 73. Trigless trigs can also be triggered manually by pressing [FUNCTION] + [TRIG 9..16] when not in any RECORDING mode. The track corresponding to the [TRIG] key pressed will be affected. This is good when wanting to for example trig the filter or the LFO but not the sample.

While in LIVE RECORDING mode it is possible to real-time record [TRIG] key presses to place sample trigs on the sequencer. Trigless trigs, instead of sample trigs, can be recorded if [FUNCTION] is held while pressing the [TRIG] keys.

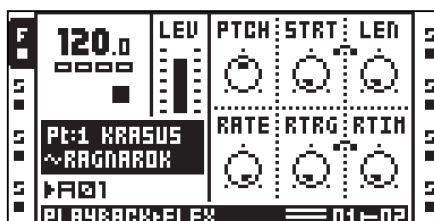

12.7.2 CHROMATIC

This mode enables chromatic playback of samples. When not in any RECORDING mode the [TRIG] keys, plus the [PATTERN PAGE] key function as a little mini-keyboard. [FUNCTION] + [TRIG] will manually trig trigless trigs instead of sample trigs. While in LIVE RECORDING mode it is possible to real-time record [TRIG] key presses to create melodic sequences. Trigless trigs, instead of sample trigs, can be recorded if [FUNCTION] is held while pressing the [TRIG] keys.

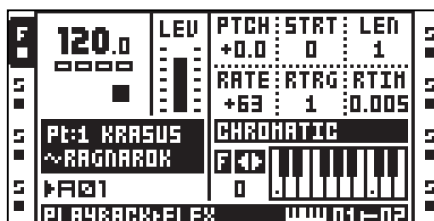


When a sample is triggered in this mode, the PTCH parameter of the PLAYBACK MAIN page will be temporarily adjusted to a semitone in a 2-octave range. The 2-octave range is only valid for audio tracks; on MIDI tracks notes can be played over a much wider octave range. Change the octave range of the [TRIG] keys by pressing [FUNCTION] + [LEFT]/[RIGHT]. The current octave is indicated to the left of the graphical keyboard representation.

The <TRIG> LEDs keys indicate the black and white keys. C notes are represented by yellow LEDs, white keys are indicated by red LEDs and black keys are indicated by unlit LEDs. The root note of the sample is found on octave 0 and located on [TRIG] key 13.

When in MIDI mode the [TRIG] keys send note on/off commands on the active MIDI track channel.

12.7.3 SLOTS


This mode gives quick access to the samples of the Flex and Static sample slot lists. Depending on the machine assigned to the active track, pressing a **[TRIG]** key when no RECORDING mode is active will trig a specific sample in either the Flex or Static sample slot list. While in LIVE RECORDING mode it is possible to real-time record the **[TRIG]** key presses to make different samples play back on the same track. Triggered samples will then be entered as sample locks on the active track.

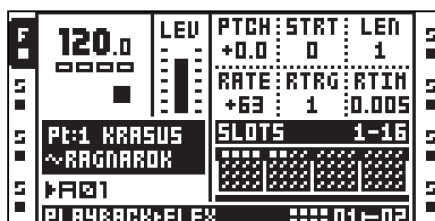

The sample slots are divided in 4 rows and each row represents 16 sample slots. Sample slots containing samples are indicated by small white squares. Sample slots not containing any samples are greyed out. Press the **[PATTERN PAGE]** to move between the rows. If samples are loaded to slot 65 or higher, an additional page containing four new rows will be accessed once the **[PATTERN PAGE]** key has been pressed a sufficient amount of times.

12.7.4 SLICES

If a sample contains slices, this mode can be used to trigger the individual slices. While in LIVE RECORDING mode it is possible to real-time record **[TRIG]** key presses to re-arrange sliced loops. The **STRT** parameter will then be locked accordingly.

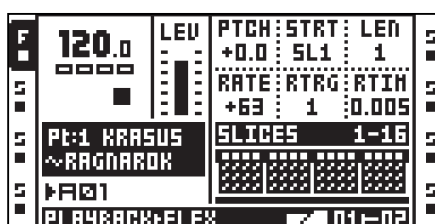


The slices are divided in 4 pages, each page containing 16 slices. Available slices are indicated by white squares. Toggle between the pages by pressing the **[PATTERN PAGE]** key.

Note that the **SLIC** parameter of the **PLAYBACK SETUP** page need to be set to ON for individual slices to be triggered. If **SLIC** is set to OFF, no slices will be triggered. Instead the sample of the active track will be triggered and the **[TRIG]** keys will affect the **STRT** value of the sample. Each **[TRIG]** key will start the sample from a different position. When pressing the first **[TRIG]** key of the first page the sample will be triggered as if **STRT** was set to 0. The **STRT** value then increases in increments of 2 for the consecutive **[TRIG]** keys.

12.7.5 QUICK MUTE


This mode works like the mute settings in the MIXER menu. The difference is that the various track parameters are still visible while in this mode.

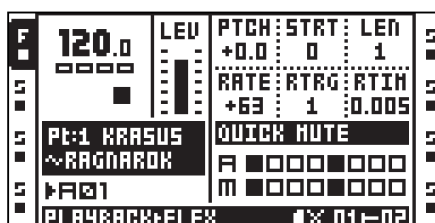

The eight leftmost **[TRIG]** keys mute the audio tracks, the eight rightmost **[TRIG]** keys mute the MIDI tracks. For detailed mute and solo functionality, see “8.8 MIXER MENU” on page 42.

12.7.6 DELAY CONTROL

When in this mode the **TIME** parameters of any Echo Freeze Delay effects can quickly be set.

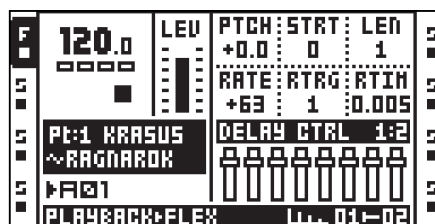

Green lit <TRIG> LEDs above the [TRIG] keys 9-16 indicate which tracks that contain the Echo Freeze Delay effect. Select one or more of these tracks by pressing and holding the corresponding [TRIG] keys. When doing so the eight [TRIG] keys to the left will adjust the **TIME** parameter of the selected delays. The lower the [TRIG] key number, the lower the **TIME** value.

Which values the eight leftmost [TRIG] keys will select depends on the chosen parameter scale. Two scales exist. 1:2, which is the default scale, and 1:3. The active scale is selected by pressing the [PATTERN PAGE] key. When 1:2 is selected [TRIG] keys 1-8 will select TIME values 1, 2, 4, 8, 16, 32, 64 and 128. When 1:3 is selected [TRIG] keys 1-8 will select TIME values 1, 3, 6, 12, 24, 48, 96 and 128.

In addition to setting TIME, a second parameter will be set depending on the current **LOCK** setting, which is found in the Echo Freeze Delay SETUP page. If **LOCK** is enabled the SEND parameter will be set to 0. If **LOCK** is disabled VOL will be set to 127. This is useful when the delays are functioning as repeaters.

12.8 SEQUENCER COPY, PASTE AND CLEAR OPERATIONS

To make it easier and quicker to compose using the Octatrack, a number of different copy, paste and clear operations are available. To avoid accidentally overwriting or deleting data, paste and clear operations can be undone.

12.8.1 PATTERN COPY

A pattern can be copied either to a location in the bank it belongs to or to a location in another bank. Before performing a pattern copy operation, make sure you are not in GRID RECORDING mode. If this mode is activated, press [REC] to deactivate it.

Select the pattern you want to copy, then press and hold [FUNCTION] while pressing [REC]. A message "COPY PATTERN" will be shown in the display. The pattern data being copied consists of trigs and parameter locks. Select the destination you wish to paste your pattern data to by using the [BANK], [PATTERN] and [TRIG] keys as needed. Paste the data by pressing the [FUNCTION] + [STOP] keys. The message "PASTE PATTERN" will be shown in the display. Pasting a pattern overwrites any previous trigs and parameter locks.

The pattern paste operation can be undone by pressing [FUNCTION] + [STOP] immediately after it has been performed. A message saying "UNDO PATTERN" will be shown in the display.



The part assigned to the pattern won't be copied when performing a pattern copy command. Should you paste the copied pattern to another bank and want the same part assigned, the part needs to be copied and pasted separately.

12.8.2 PATTERN CLEAR

Clearing a pattern will remove all trigs from all tracks. Before performing a pattern clear operation, make sure you are not in GRID RECORDING mode. If this mode is activated, press [REC] to deactivate it.

Select the pattern you want to clear. Press and hold [FUNCTION]. Then press [PLAY] to clear the pattern. A message "CLEAR PATTERN" will be shown in the display.

The clear pattern operation can be undone by pressing [FUNCTION] + [PLAY] directly after it has been performed. A message saying "UNDO PATTERN" will be shown in the display.

12.8.3 TRACK COPY

When copying a track, the copied information will consist of trigs, parameter locks, machine and FX assignments. Before performing a track copy operation, make sure you are in GRID RECORDING mode. If not, press [REC].

Select the track you want to copy by pressing the appropriate [TRACK] key. Press [FUNCTION] + [REC] to perform the copy operation. The message "COPY TRACK" will be shown in the display. Select the destination track to which you want to paste the copied content. Paste the data by pressing [FUNCTION] + [STOP]. A message saying "PASTE TRACK" will be shown in the display. Pasting a track overwrites any previous trigs, parameter locks, machine and FX assignments.

The paste track operation can be undone by pressing **[FUNCTION] + [STOP]** immediately after it has been performed. A message saying “UNDO TRACK” will be shown in the display.



If the track copy operation is performed when the **TRACK TRIG EDIT** menu is open, only trigs will be copied. Read more about this menu in section “**TRACK TRIG EDIT MENU**” on page 87.

12.8.4 TRACK CLEAR

Clearing a track will remove all trigs from the active track. Before performing a track clear operation, make sure you are in **GRID RECORDING** mode. If not, press **[REC]**.

When you have selected the track you wish to clear, press **[FUNCTION] + [PLAY]** to clear the track. The message “**CLEAR TRACK**” will appear.

The clear track operation can be undone by pressing **[FUNCTION] + [PLAY]** directly after it has been performed. The message “**UNDO TRACK**” will be shown in the display.

12.8.5 TRACK PAGE COPY

A track page is one of the up to four pages of sequencer steps a pattern can contain. Copying a track page includes all trigs and parameter lock settings of the track page. Before performing a track page copy operation, make sure you are in **GRID RECORDING** mode. If not, press **[REC]**.

Select the track containing the data you want to copy, then select the track page you want to copy by pressing the **[PATTERN PAGE]** key. Hold the **[PATTERN PAGE]** key and press **[REC]** to copy the track page. A message saying “**COPY PAGE**” will appear. Select the track page you want to paste the copied page to by pressing the **[PATTERN PAGE]** key. Paste the data by holding **[PATTERN PAGE]** while pressing the **[STOP]** key. A message saying “**PASTE PAGE**” will be shown in the display. Pasting a track page overwrites any previous trigs, parameter locks, machine and effects assignments.

The paste track page operation can be undone by pressing **[PATTERN PAGE] + [STOP]**. The message “**UNDO PAGE**” will be shown in the display.



The copied data can be pasted to another track. After having performed the track page copy command, select the new track and, if needed, the track page. Then paste.

12.8.6 TRACK PAGE CLEAR

It is possible to clear all trigs from a track page. Before performing a track page clear operation, make sure you are in **GRID RECORDING** mode. If not, press **[REC]**.

Select the track page you want to clear by pressing the **[PATTERN PAGE]** key. Clear the track by pressing **[PATTERN PAGE] + [PLAY]**. The message “**CLEAR PAGE**” will appear.

The clear track page operation can be undone by pressing **[PATTERN PAGE] + [PLAY]**. The message “**UNDO PAGE**” will be shown in the display.

12.8.7 TRACK PARAMETER PAGE COPY

The settings of the **TRACK PARAMETER** pages can be copied and pasted. The content of both the **MAIN** and **SETUP** pages will be copied when performing this operation.

Select the **TRACK PARAMETER** page you wish to copy and press **[TRACK PARAMETER] + [REC]**. A message saying “**COPY PAGE**” will appear. Paste the copied content by pressing **[TRACK PARAMETER] + [STOP]**.

The **TRACK PARAMETER** page paste operation can be undone by pressing **[TRACK PARAMETER] + [STOP]**. The message “**UNDO PAGE**” will be shown in the display.

12.8.8 TRACK PARAMETER PAGE CLEAR

A **TRACK PARAMETER** page can be initialized to its default settings.

Select the **TRACK PARAMETER** page you wish to clear and press **[TRACK PARAMETER] + [PLAY]**. A message saying “**CLEAR PAGE**” will appear. Undo the operation by pressing **[TRACK PARAMETER] + [PLAY]** one more time.

12.8.9 TRIG COPY

It is possible to copy a trig of any type, complete with all parameter lock settings, and paste it to another sequencer step. First make sure you are in **GRID RECORDING** mode. If not, press **[REC]**.

Press and hold the trig you want to copy and press the **[REC]** key. A window saying “**COPY TRIG**” will appear. Hold the **[TRIG]** key corresponding to the location you want to paste the trig to and press the

[STOP] key to complete the paste operation. A window showing “PASTE TRIG” will be shown.

12.8.10 TRIG LOCK CLEAR

Instead of removing parameter locks one by one from a trig you can use the clear trig locks command. First make sure you are in GRID RECORDING mode. If not, press [REC].

Hold and press the [TRIG] key of the trig whose content you want to clear. Then press [PLAY] to clear the trig. The message “CLEAR TRIG LOCKS” will appear.

The trig lock clear operation can be undone by performing the operation one more time. The message “UNDO TRIG” will be shown in the display.

12.9 TRACK TRIG EDIT MENU

This menu is opened by pressing [FUNCTION] + [BANK] when the GRID RECORDING mode is active. The TRACK TRIG EDIT menu offers both an overview of all the trigs belonging to the selected track and the possibility to place a wide variety of trigs on the sequencer. The visible trigs belong to the currently selected pattern page. Toggle between the pages by pressing the [PATTERN PAGE] key. If the track page consists of less than 16 steps, that will be reflected in the graphics of the menu.



It is possible to perform copy, paste and clear commands while the TRACK TRIG EDIT menu is opened. Only trigs will be copied, no other settings.

The menu is available while in MIDI mode as well. When accessed from there the trigs reflect trigs placed on the selected MIDI track. Slide and recorder trigs are not available to MIDI tracks.

12.9.1 TRIGS

Shows the sample trigs, trigless locks, trigless trigs and one shot trigs of the active track page and their location on the step sequencer. When this alternative is selected and the [TRIG] keys or [FUNCTION] + [TRIG] keys are pressed, sample trigs, trigless locks, trigless trigs and one shot trigs can be placed on the sequencer. Trigless locks and trigless trigs are indicated by shorter trig symbols.



Pressing [ENTER/YES] while in this menu can be used to quantize trigs to approximately 50 percent of their original micro timing value. Use this operation when you want to tighten up a track where micro timing has been used, but not fully quantize it. Quickly perform the operation 6 times in a row to have the micro timing cleared for all trigs. Read more about micro timing in the section “12.11 MICRO TIMING” on page 75.

12.9.2 SLIDE

Shows the slide trigs of the active track and their location on the step sequencer. When this alternative is selected and the [TRIG] keys are pressed, slide trigs will be placed on the sequencer. A slide trig offers the possibility to make the parameter values of a trig to gradually slide to the parameter values of the subsequent trig.



For a parameter value to slide between two trigs, it needs to be locked on one of the trigs. A locked parameter value will slide to the unlocked value and vice versa. To make the parameter value slide, place a slide trig on the same sequencer step as trig you want to slide from. The speed of the slide is relative to the current tempo and the slide is completed when the next trig is reached. Several parameter values can slide at the same time.



Parameters cannot slide to or from unlocked trigless locks.

12.9.3 SWING

Shows the swing trigs of the active track and their location on the step sequencer. When this alternative is selected and the [TRIG] keys are pressed, swing trigs will be placed on the sequencer.



Swing will only affect trigs located on the same sequencer steps as the swing trigs. Select the amount of swing that should be applied to the swing trigs by turning the **LEVEL** knob. The higher the value, the more swing will be applied. A setting of 50 equals no swing.

By pressing [FUNCTION] and turning the **LEVEL** knob the swing amount for all tracks will be changed.

12.9.4 RECORDER TRIGS

Shows the recorder trigs of the active track and their location on the step sequencer. When this alternative is selected and the [TRIG] keys are pressed, recorder trigs will be placed on the sequencer. When pressing and holding a recorder trig, the source or sources the recorder trig samples from are indicated by lit <AUDIO RECORD> and <MIDI> LEDs.




This is an alternative way of placing recorder trigs compared to the RECORDING SETUP menu method. Read more about recorder trigs in section “9.2.2 RECORDER TRIG SAMPLING” on page 48.



Just like in the RECORDING SETUP menus, recorder trigs can in the TRACK TRIG EDIT menu be assigned to different sampling sources. Keep a [TRIG] key pressed and depending on the source you wish to sample from either press [AUDIO REC AB], [AUDIO REC CD] or [MIDI]. The different sampling sources are covered in section “9. TRACK RECORDERS AND PICKUP MACHINES” on page 44.


12.10 PATTERN SETTINGS MENU

This menu is opened by pressing [FUNCTION] + [BANK] when GRID RECORDING mode is not active. Here settings relating to how the tracks of the active pattern should behave are found. Each pattern can have unique settings and the active pattern is visible in the header of the menu. The settings and choices of the main alternatives are accessed by selecting a main alternative and pressing the [RIGHT] arrow key.

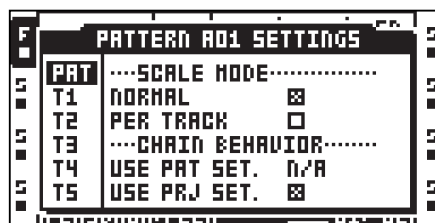

12.10.1 PATTERN

Contains settings related to the patterns. Change the various settings by selecting them and either pressing [ENTER/YES] or turning the **LEVEL** knob.

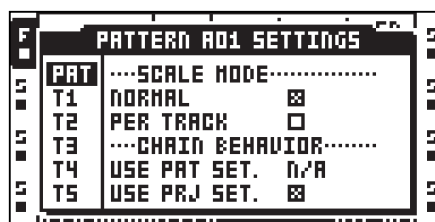

SCALE MODE NORMAL is the default setting. In this mode all tracks of the pattern share the same length and time signature. Step length and time signature settings are changed in the SCALE SETUP menu, which is covered in section “12.14 SCALE SETUP” on page 77.

SCALE MODE PER TRACK allows every track in a pattern to have unique length and time signature settings. Complex poly rhythms are easy to obtain when this mode is active. For more information how to set individual track lengths and time signatures, see section “12.14 SCALE SETUP” on page 77.

USE PAT SET. CHAIN BEHAVIOR specifies for how long the active pattern will play before a cued pattern will start playing. To be able to change this setting, the USE PRJ SET. setting below must be unchecked. If PLEN is selected, the pattern will, depending on if NORMAL or PER TRACK mode is active for the pattern, play either according to the total step length of the pattern or the set master length before a chained pattern will begin playing. The other values possible to set are indicated in pattern step lengths. If the chosen value starts to blink that indicates the value exceeds the length of the pattern. The pattern will then play as if PLEN would have been selected.

USE PRJ SET. CHAIN BEHAVIOR will when checked use the chain behavior specified in the CHAIN AFTER menu. For more information, please see “8.6.3 SEQUENCER” on page 36.

TRACK 1-TRACK 8

Here various playback settings for the tracks of the currently active pattern are found. Each track can contain different settings. Change the settings by selecting them and either pressing [ENTER/YES] or turning the **LEVEL** knob. When in MIDI mode the settings will only affect the MIDI tracks. It is thus possible to have different settings for audio and MIDI tracks.



START SILENT controls whether the track of a previous pattern linked to a different part should keep on sounding or not when the currently active pattern starts playing. Three settings exist. Select between them using the **LEVEL** knob.

- **AUTO** will make the chosen track act according to the **SILENCE TRACKS** setting made in the PROJECT menu. Read more about this setting in section “8.6.3 SEQUENCER” on page 36.
- **NO** will make the track from a previous pattern linked to a different part continue to sound when the currently active pattern starts playing. The track of the previous pattern will however stop sounding once a trig on the track of the active pattern is activated by the sequencer. If for example track 1 is the chosen track, then track 1 of the previous pattern will continue to sound until a trig occurs on track 1 of the currently active pattern. This setting overrides the **SILENCE TRACKS** setting.

- **YES** will make the track of a previous pattern linked to a different part stop making sound once the currently active pattern starts playing. If for example track 1 is the chosen track, then the sample of track 1 of the previous pattern will enter its release phase, set in the AMP menu, once the currently active pattern starts playing. This setting overrides the **SILENCE TRACKS** setting.

PLAYS FREE controls the behavior of the tracks. When activated the chosen track will be disconnected from the sequencer. When **[PLAY]** is pressed the track will not start playing. To start the playback of for example audio track 1, it needs to be triggered manually by pressing the first **[TRIG]** key. To trig MIDI track 1, press **[TRIG]** key 9 while in MIDI mode. Disconnected tracks will be stopped when **[STOP]** is pressed. Read more about track triggering in the section “TRACK” on page 81.

ONESHOT TRACK controls whether the track will loop or not. When the setting is activated the track, once it has started playing, will stop after it has reached its full length. This setting is only available when the **PLAYS FREE** setting is activated.

TRIG MODE controls how the track should react when it is being triggered. This setting is only available when the **PLAYS FREE** setting is activated.


- **ONE** will make the track start playing once the **[TRIG]** key initiating triggering of the track is pressed. The playback of the track will be restarted when pressing the button again. To stop the playback of the track **[STOP]** needs to be pressed.
- **ONE2** will make the track start playing once the **[TRIG]** key initiating triggering of the track is pressed. The playback of the track can be stopped either by pressing the button again or by pressing **[STOP]**. Please note that pressing stop will also stop the sequencer.
- **HOLD** will make the track play for as long as **[TRIG]** key initiating track playback for the chosen track is pressed and held. Playback of the track will stop when the button is released.

TRIG QUANT is only available when the **PLAYS FREE** setting is activated. It allows both quantized start and stop of the playback of the tracks. Note that the sequencer needs to be playing for this setting to have any effect. The **TRIG MODE** setting, covered above, also affects the how the **[TRIG]** keys will control the playback. Choose between the **TRIG QUANT** settings with the **LEVEL** knob.

- **DIRECT** will make a disconnected track start playing as soon as the corresponding **[TRIG]** key initiating track playback is pressed.
- **TR. LEN** will quantize the start and stop of the disconnected track according to the total length of the track.
- **1/16...** will quantize the start and stop of the disconnected track according to set step length. If the chosen value starts to blink that indicates the value, depending on whether **NORMAL** or **PER TRACK** scale is active, exceeds either the length of the pattern or the set master length. The track quantization will then will then be set either according to the pattern length or the master length, again depending on active scale mode.

12.11 MICRO TIMING

The **MICRO TIMING** menu allows for precise and detailed trig editing. To be able to access this menu **GRID RECORDING** mode must be active. Open this menu by pressing and holding the **[TRIG]** key of the trig you want to micro edit, then press either the left or right **[ARROW]** key.

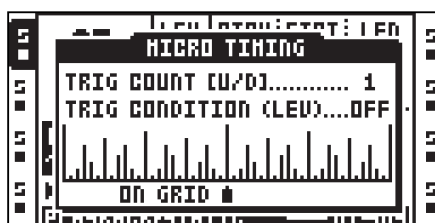

TRIG COUNT sets the number of times the sample trig should be triggered. A setting of 2–8 adds additional trig repeats of the original trig. The additional trigs are evenly distributed between the original trig and the next step in the sequencer. Adjust this setting with the **[UP]** and **[DOWN]** keys.

You can set the **TRIG OFFSET** which controls where the trig should be placed on the 1/384 step resolution micro timing grid, illustrated the bottom of the screen. While keeping the **[TRIG]** key pressed, use the **[ARROW]** keys **[LEFT]** and **[RIGHT]** to move the trig on the grid. A trig can be nudged both forwards and backwards in time in relation to the step it is placed on.


If a trig placed on the first sequencer step is nudged backwards, it will be activated at the end of the pattern. Setting the tempo to 2x in the **SCALE SETUP** menu will double the resolution of the micro timing grid.

Micro timed trigs can be quantized in the **TRACK TRIG EDIT** menu. For more information please see “12.9 TRACK TRIG EDIT MENU” on page 72.

12.12 CONDITIONAL LOCKS

On the MICRO TIMING menu, there is a parameter called **TRIG CONDITION** with which a set of conditional rules can be applied to sample/note trigs, lock trigs, trigless trigs, and one shot trigs, using a parameter lock. Each setting is a logical condition that will determine whether a trig set in the sequencer is triggered or not. If the condition is true then the trig will become active and affect the sequence. You must first place a trig to where you want to apply a conditional lock.

To be able to access this menu GRID RECORDING mode must be active. Open this menu by pressing and holding the **[TRIG]** key of the trig you want to add a conditional lock to, then press either the left or right **[ARROW]** key. While keeping the **[TRIG]** key pressed, use the **LEVEL** knob to select trig condition.

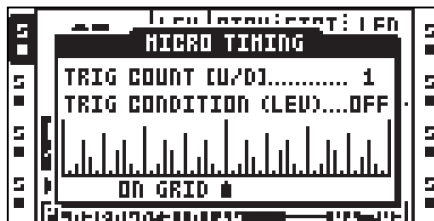

The **TRIG CONDITION** parameter can set the following trig conditions:

FILL is true (will activate the trig) when fill mode is active (see below).

$\overline{\text{FILL}}$ is true when FILL is not.

PRE is true if the most recently evaluated trig condition on the same track was true.

$\overline{\text{PRE}}$ is true when PRE is not.

NEI is true if the most recently evaluated trig condition on the neighbor track was true. The neighbor track is the track before the one being edited. For example, the neighbor track of track 4 is track 3. If no conditions exist on the neighbor track, the condition is false.

$\overline{\text{NEI}}$ is true when NEI is not.

1ST is only true the first time the pattern play (when looped).

$\overline{\text{1ST}}$ is true when 1ST is not.

X% is a probability condition. There is an x% chance of it being true.

A:B A sets how many times the pattern plays before the trig condition is true. B sets how many times the pattern plays before the count is reset and starts over again. This then repeats indefinitely. For example, with a setting of 2:4, the trig condition will be true the second time the pattern plays and then the sixth, the tenth, and so on. If you have the setting 3:5 the trig condition will be true the third time the pattern plays and then the eighth, the thirteenth, and so on.





- The sequencer needs to be in **FILL** mode to activate the conditional lock called **FILL**. For more information, please see “12.13 FILL MODE” on page 76.
- Conditional parameter locks are a great way to add variety to a pattern. To set up a grid of mutually exclusive or conclusive sample trigs across any of the audio tracks, and throwing some probability locks in there as well, is a neat way to make the most minimal of compositions come alive with randomness.
- Note that random or arbitrary variety is not the only way of using conditional trigs. They may also be used, for example, to have two different melodic or percussive sequences on the same track, one of which is activated only when **FILL** mode is active.

12.13 FILL MODE

FILL mode can be used to create a temporary variation, such as a drum fill, to a pattern. The trig condition **FILL** is affected depending on if the **OCTATRACK MKI** is in **FILL** mode or not.

Press **[DOWN]** + **[PATTERN PAGE]** to activate **FILL** mode for one pattern cycle. It will become active when the pattern loops, and remain active until it loops again. You can also activate **FILL** mode at any time, and for any duration, by pressing and holding the **[UP]** + **[PATTERN PAGE]** keys when the pattern is playing. The **FILL** mode is active for as long as the keys are held. If you want to latch **FILL** mode, press **[UP]** + **[DOWN]** + **[PATTERN PAGE]**. Press **[UP]** + **[PATTERN PAGE]** to unlatch **FILL** mode.

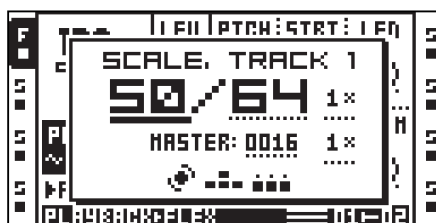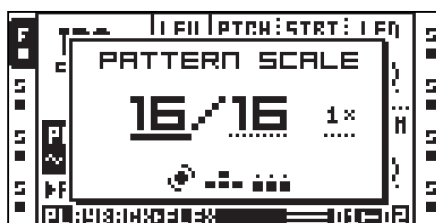



If INF is selected you need to specify either a CHAIN AFTER length or a USE PAT. SETTING length, otherwise no other patterns can be chained when the pattern with the INF setting is playing. The INF pattern will just go on playing infinitely. Read more about CHAIN AFTER in section “8.6.3 SEQUENCER” on page 36. Read more about USE PAT. SETTING in section “12.10.1 PATTERN” on page 74.

MASTER SCALE sets the general time signature of the pattern. This setting is completely independent of the individual track tempo multiplier settings. It is used to define the overall time signature of the pattern, which affects MIDI clock if sent out by the Octatrack. When an Octatrack arrangement is being controlled from an external MIDI device, the song pointer position will be affected as well.



Press the [PATTERN PAGE] key for quickly changing the total length of the track. Press the [TRIG] keys to quickly change the number of steps of the track.

Press [FUNCTION] + [UP]/[DOWN] to set the MASTER LENGTH in increments of 16.

13. THE AUDIO EDITOR

The audio editor is where editing of imported or recorded samples takes place. A number of tasks can be carried out here.

13.1 ACCESSING THE AUDIO EDITOR

The audio editor can be accessed in numerous ways.

13.1.1 ACCESS FROM THE QUICK ASSIGN MENU

Open the QUICK ASSIGN menu by double-clicking a [TRACK] key. In the Flex or Static sample slot list, select the sample you wish to edit and press [FUNCTION] + [BANK] to open it in the audio editor.

13.1.2 ACCESS FROM THE PLAYBACK SETUP MENU

Open the PLAYBACK SETUP menu of a track containing a Flex or Static machine by either double-clicking the [PLAYBACK] key or pressing [FUNCTION] + [PLAYBACK]. Then navigate to the Flex or Static sample slot list, select the sample you wish to edit and press [FUNCTION] + [BANK] to open it in the audio editor.

13.1.3 ACCESS FROM TRACKS AND TRACK RECORDERS

By pressing [TRACK] + [BANK] the sample assigned to the machine of the track will be opened in the audio editor. Note that the track must contain a Flex or Static machine for this shortcut to work.

Samples captured by the track recorders can be opened directly in the audio editor. First select the track whose recorder buffer should be edited by pressing the relevant [TRACK] button. Then press any of the [AUDIO RECORD] keys + [BANK] to open the recorder buffer sample in the audio editor.

The audio editor can also be accessed from the RECORDING SETUP EDIT menu. Access this menu by pressing [FUNCTION] + [BANK] while either RECORDING SETUP menu is active.

13.2 AUDIO EDITOR FUNCTIONALITY

The audio editor contains five subpages. While in the audio editor the [TRACK PARAMETER] keys function as soft keys for selecting the subpages. At the top of the menu window the name of the sample being edited is shown.

13.2.1 TRIM

This is the default page when opening the audio editor. Otherwise, access by pressing [PLAYBACK] while in the audio editor. In this subpage samples are trimmed and loop points set.



Trim and loop point settings are by default not linked to samples per se, but to sample slots. It is possible to load the same sample to two separate slots and trim them completely differently. Any trim and loop point information will, unless linked to the sample using the save commands found in the FILE menu, be lost when assigning a new sample to the sample slot location of the active sample.

Navigate in the waveform using the **LEVEL** knob or the [LEFT]/[RIGHT] keys. Turning this knob will move the waveform marker. Its sample exact position will be shown at the bottom of the LCD screen.

Set the start point with the **A** knob. A start point is indicated by an "S" marker. The sample will start to play from this position. Moving a start point will also move the end point. When moving the start point marker the sample exact position of the start point, changes to the BPM of the sample as well as changes to the bar length of the sample will be visible at the bottom of the screen.

A loop is indicated by an "L" marker. Move the loop point by turning the **B** knob. When moving the loop point marker the sample exact position of the loop point and the loop length expressed in bars will be visible at the bottom of the screen. If a loop point is set, the sample will play from the start point to the end point, then loop from the loop point to the end point. When the **RATE** parameter of the PLAYBACK MAIN page is set to a negative value, the sample will be played from the end point to the loop point and looped from there.

Set the end point with the **C** knob. An end point is indicated by an “E” marker. The sample will stop playing when reaching the end point given no loop point is set. When moving the end point marker the sample exact position of the end point, changes to the BPM of the sample as well as changes to the bar length of the sample will be visible at the bottom of the screen.

Zoom the y-axis of the waveform with the **D** knob. The slider to the right of the waveform indicates the zoom level.

Scroll the waveform with the **E** knob. The black bar over the waveform visualization shows the size of the current visible section in relation to the total waveform length.

Zoom the x-axis of the waveform with the **F** knob. The black bar over the waveform visualization shows the size of the current visible section in relation to the total waveform length. The **[UP]** or **[DOWN]** arrow keys also perform zoom in/out functions.

The sample can be previewed from the main outputs by pressing **[FUNCTION] + [YES]**. If the sample is previewed, sample playback will start from the start point position. Press **[CUE] + [ENTER/YES]** to preview from the cue outputs.

Pressing **[FUNCTION] + [BANK]** or **[ENTER/YES]** will open the TRIM EDIT menu. Different options exist here.

SET START HERE will set the start point at the position of the waveform marker. The same functionality can be obtained by turning the A knob.

SET LOOP HERE will set the loop point at the position of the waveform marker. The same functionality can be obtained by turning the B knob.

SET END HERE will set the end point at the position of the waveform marker. The same functionality can be obtained by turning the C knob.

RESET TO DEFAULT resets the start, end and loop points to their default positions. The start and loop points will be located at the absolute beginning of the sample, the end point at the absolute end of the sample.

CHANGE VIEW changes the waveform visualization if a stereo sample is used. It is possible to visualize the left, right or both the left and right waveforms simultaneously.



Hold **[FUNCTION]** while moving the waveform, loop, start or end points to snap the selected point to a zero amplitude crossing. Zero crossings are indicated by a small rectangle in the middle of the marker. On very large Static samples there might be a short delay before the zero cross search is completed and the marker snaps in place. To select a zero crossing on both channels, you need to select both channels in **CHANGE VIEW**.

13.2.2 SLICE

Access by pressing **[AMP]** while in the audio editor. Here slice points are handled. Both Flex and Static samples can be sliced.



A slice is a section of a sample. A total of 64 slices can be placed out anywhere in a sample. Slices can be of different lengths and even overlap each other. Once a sample has been sliced, individual slices can be played back by using the **[TRIG]** keys or the Octatrack sequencer.

Slices does not need not be linked to samples, the default behavior is for them is instead to be linked to sample slots. It is therefore possible to load the same sample to two separate sample slots and slice them in completely different ways. Slice point information will, unless linked to the sample by using the save commands of the **FILE** menu, be lost when assigning a new sample to the sample slot location the sliced sample resides in.

The **SLIC** parameter, found in the **FLEX** and **STATIC SETUP** menus, needs to be set to **ON** for the sequencer to be able to play back individual slices. The **STRT** parameter of the **PLAYBACK MAIN** page then selects which slices that should be played. The selected slice will be played from its start point. Read more about how these settings work in “APPENDIX A: MACHINE REFERENCE” on page 116.

Pressing **[FUNCTION] + [BANK]** or **[ENTER/YES]** opens the **SLICE EDIT** menu. Different options will

appear, depending on whether the SLICE EDIT menu is opened while a slice is highlighted or not.

ADD SLICE HERE adds a slice. The marker must be on a non-sliced area of the waveform for this alternative to appear.

DISABLE LOOP will delete the loop point of the selected slice. This alternative only appears when the waveform marker is positioned on a slice.

DELETE SLICE will delete the selected slice. This alternative only appears when the waveform marker is positioned on a slice.

REVERSE SLICE will reverse the audio content of the selected slice.

NORMALIZE SLICE will apply normalization to the selected slice.

DELETE ALL SLICES will delete all slices.

CREATE SLICE GRID will create a number of slices spread out between the start and end points set in the TRIM menu. The slice grid can consist of 2, 3, 4, 6, 8, 12, 16, 24, 32, 48 or 64 slices. After creating the slice grid a prompt will appear asking "ALIGN MARKERS TO ZERO-CROSSES?". If **[ENTER/YES]** is pressed the slices in the grid will be adjusted to the nearest zero amplitude crossings. If **[EXIT/NO]** is pressed the slices will be spread out evenly and all slices will have the exact same length.

CREATE LINEAR LOCKS will, given the active track contains a Flex or Static machine, automatically set the **SLIC** parameter in the PLAYBACK SETUP menu to ON and lock the **STRT** parameter of sample trigs already present on the active track. The **STRT** parameter of the first sample trig will be locked to SL1, the **STRT** parameter of the second sample trig locked to SL2 and so on. The locked **STRT** values are dependent on the amount of slices in the sample. If only one slice exist all sample trigs will for example be locked to SL1. If **SLIC** is turned off, the value of the **STRT** locks will revert to approximations of the slice start points:

SLIC set to ON, **STRT** set to SL1 = **STRT** 0 when **SLIC** is set to OFF

SLIC set to ON, **STRT** set to SL2 = **STRT** 2 when **SLIC** is set to OFF

SLIC set to ON, **STRT** set to SL3 = **STRT** 4 when **SLIC** is set to OFF

SLIC set to ON, **STRT** set to SL4 = **STRT** 6 when **SLIC** is set to OFF

Note that turning off **SLIC** may change the structure of a sample completely.

CREATE RANDOM LOCKS works just like the CREATE LINEAR LOCKS command, but randomizes the locked **STRT** parameters of the sample trigs.

CHANGE VIEW changes the waveform visualization if a stereo sample is used. It works just like the same command found in the TRIM EDIT menu.

Use the waveform marker or press the **[RIGHT]** or **[LEFT]** arrow keys to navigate between the slices. A slice needs to be active, which is indicated by inverted graphics, for slice start, loop and end points to be set. When a slice is active knob A sets the start point, knob B sets the loop point and knob C sets the end point. When moving the start, loop or end points, their sample exact position will be shown at the bottom of the screen.



Due to the nature of Compact Flash cards, Static sample slices might not be played back correctly when modulating the **STRT** parameter with the crossfader or the track LFOs. The start point of the slices might then be off. This problem is avoided when using parameter locks. Flex samples don't have this problem because of them being stored in the RAM memory.

STRT values exceeding the amount of slices will select the last slice. If the sample contains for example 16 slices, **STRT** values ranging from SL17 - SL64 will select slice 16.



Hold **[FUNCTION]** while moving the waveform, loop, start or end markers to snap the selected marker to a zero amplitude crossing. Zero crossings are indicated by a small rectangle in the middle of the marker. On very large Static samples there might be a short delay before the zero cross search is completed and the marker snaps in place.

The active slice can be previewed from the main outputs by pressing **[FUNCTION] + [YES]**. If no slice is selected the preview listening will start from the location of the waveform marker. Press **[CUE] + [ENTER/YES]** to preview from the cue outputs.

13.2.3 EDIT

Access by pressing **[LFO]** while in the audio editor. Here various sample editing commands can be performed. For Static samples, considerably less menu options are available.



The **A** and **C** knobs are used to select the section of the audio file that will be edited. The selection does not alter any set start or end points set in the TRIM or SLICE menus. When working inside the TRIM or SLICE pages though, the selected sample span will automatically be copied over to the EDIT page. Therefore, to apply operations to for example a slice, simply select the slice in the SLICE page and then open the EDIT page.

Press **[FUNCTION] + [BANK]** or **[ENTER/YES]** to open a window displaying the available edit commands.



Any operations applied to a Flex sample is remembered for the current session only. If the Octatrack is rebooted or another project loaded, all applied sample edits will be lost. It is thus important samples are saved if you want to keep the any applied edits. In the Flex sample slot list, a blinking star next to the sample name will indicate edited and unsaved samples.

SELECT ALL will select the whole file.

CROP TO SELECTION removes all audio data outside the selection, and resets the trim points so they span across the selected section. Any slices located outside the selection will be moved inside the selection prior to the crop operation. A warning will pop up should this happen. To quickly crop a sample according to the set trim points, simply go from the TRIM menu to the EDIT menu. The trim section will then be pre-selected.

DELETE SELECTION can only be used in the beginning or at the end of a sample. The audio within the selection will be deleted.

SAVE SELECTION AS SAMPLE saves the audio inside the selection as a new sample. The format of the sample will be the same as that of the sample being edited. This operation is useful for saving cuts or slices from a loop as individual samples.

REVERSE SELECTION will reverse the selected section.

FADE IN SELECTION will apply a linear fade in to the selected section.

FADE OUT SELECTION will apply a linear fade out to the selected section.

NORMALIZE SELECTION will raise the amplitude of the selected section until the loudest peak hits 0 dBfs.

SELECTION +3dB will boost the volume of the selected section with 3 dB. Note that clipping might occur if the sample is already very loud.

SELECTION -3dB will attenuate the volume of the selected section with 3 dB.

SELECTION TO SILENCE replaces the selection with silence. It is also possible to press **[FUNCTION] + [PLAY]** to perform this operation.

COPY SELECTION will copy the selected section. It is also possible to copy the selection by pressing **[FUNCTION] + [REC]**. Note that it is possible to copy a selection from one Flex sample and paste it to another Flex sample.

PASTE SELECTION will paste a copied section at a position set by the A knob. It is also possible to perform a paste command by pressing **[FUNCTION] + [STOP]**. The length of the sample will not be altered. Please note it is not possible to paste audio which overlaps with the copied data. The paste operation can work in different ways depending on the **CHANGE PASTE MODE** setting.

DUPLICATE SELECTION -> will copy the selected section and paste it right after the end of the

selection. The total length of the sample will not be altered. This mode works like an automated copy/paste function and is therefore also affected by the **CHANGE PASTE MODE** setting. This command is handy when creating rolling/stutter effects.

DUPLICATE SELECTION <- will copy the selected section and paste it right before the start of the selection. The total length of the sample will not be altered. This mode works like an automated copy/paste function and is therefore also affected by the **CHANGE PASTE MODE** setting.

CHANGE PASTE MODE offers several settings. The setting chosen here affects both the **PASTE SELECTION** command and the two **DUP SELECTION** commands.

- **PASTE 0dB** is the default selection. Pasted content will replace the content already present.
- **PASTE -6dB** will attenuate pasted content by 6 dB.
- **MIX 0dB** will mix pasted content with the content already present.
- **MIX -6dB** will mix pasted content with the content already present. The mixed audio will at the same time be attenuated by 6 dB.

ROTATE POS TO START rotates the audio data so that the cursor position becomes the new start position of the sample.

MIX CHANNELS offers several settings.

- **ADD CH L+R** will merge the left and right channels of the selected section and distribute the merged audio to both the left and right channels.
- **SUBTRACT CH L-R** will subtract the right channel from the left channel and distribute the result to both the left and right channels.
- **SUBTRACT CH R-L** will subtract the left channel from the right channel and distribute the result to both the left and right channels.
- **SWAP CH L/R** will swap the left channel with the right and vice versa.

INVERT CHANNEL applies phase inversion to the selected section.

- **INVERT CH L&R** applies phase inversion to both the left and right channel of the selected section.
- **INVERT CH L** applies phase inversion to the left channel of the selected section.
- **INVERT CH R** applies phase inversion to the right channel of the selected section.

CAL BPM FROM SELECTION will calculate the BPM of the selection by assuming it contains a musical length like 0.5 bars, 1 bar, 2 bars etc. The calculated BPM will be applied to the **ORIGINAL TEMPO** setting found in the **ATTRIBUTES** menu. Useful when calculating the BPM of a complete track. Select for example 1 bar and perform this command.

CHANGE PREVIEW MODE selects between preview listening modes. Preview listen through the main outputs by pressing **[FUNCTION] + [ENTER/YES]**. Preview listen through the cue outputs by pressing **[CUE] + [ENTER/YES]**.

- **PLAY ONCE** will preview the selected section once.
- **LOOP SELECTION** will continuously loop the selected section when preview listening.

CHANGE VIEW selects how the audio file will be displayed on the LCD screen. This setting is only relevant for stereo samples.

- **CH L VIEW** displays only the left channel of the audio file.
- **CH R VIEW** displays only the right channel of the audio file.
- **STEREO VIEW** displays both the left and the right channels.

13.2.4 ATTRIBUTES

Access by pressing **[EFFECT 1]** while in the audio editor. Here general information about the selected or active sample is found. The settings made here can be permanently linked to a sample using the save commands found in the **FILE** menu. For more information, please see "13.2.5 FILE" on page 85.



GAIN allows you to amplify or attenuate each individual sample without affecting any track parameters or locks. On recorder buffers this setting defaults to +12 dB to compensate for the attenuation the headroom of the audio engine inflicts. Please note that this value is applied only when a sample is being triggered. If the sample being edited is long, adjusting this parameter during playback of the sample will thus introduce no gain changes until it is retriggered.

LOOP MODE controls the loop behavior of the sample. Three settings exist.

- **OFF** disregards all set loop points. The sample or slice will not loop.
- **ON** will loop a sample or sample slice containing a loop marker. Sample slices without loop points will not be looped. Read more about loop points in section “13.2.1 TRIM” on page 79.
- **PINGPONG** makes the sample loop from the loop point to the end point, then play from the end point to the loop point. The sample will thus alternate between playing forwards and backwards.



If the **LOOP** parameter in the **FLEX/STATIC PLAYBACK SETUP** menu is set to **AUTO**, different loop settings can be applied to different samples used in a track.

TIMESTRETCH sets whether timestretch should be applied to the sample or not. Different timestretch algorithms exist.

- **OFF** does not apply timestretch to the sample.
- **NORMAL** is an algorithm suitable for most material.
- **BEAT** is a timestretch algorithm especially useful for rhythmic material.



If the **TSTR** parameter in the **FLEX/STATIC PLAYBACK SETUP** menu is set to **AUTO**, different timestretch settings can be applied to different samples used in a track.

ORIGINAL TEMPO displays the calculated BPM of the sample. If it is not correct, it can be changed using the **LEVEL** knob. This setting will affect the sound of a timestretched sample. For correct results it should be set to match the original BPM of the sample. Altering this setting will alter the **TRIM LEN (BARS)** and **LOOP LEN (BARS)** settings. An arrow will appear next to the **ORIGINAL TEMPO** setting, indicating this setting has priority. If the sample being edited consists of an unknown amount of bars, but you know its BPM, it might be wise to use this setting as the prioritized one.



The tempo discerning algorithm analyzes the sample filename for tempo figures, checking if the initial estimation is off by a factor 0.5 or 2.0. The “normal” BPM range the Octatrack uses to make its initial BPM guess is 85 BPM-170 BPM. If you have loops with tempos outside this range, it might be a good idea to put the BPM value in the filename. Typically, a 70 BPM loop is initially loaded as 140 BPM loop, but if the number 70 is found anywhere in the filename, the octatrack will use 70 BPM instead. Similarly, if 280 is found in the filename, the BPM of the sample will be 280.

TRIM LEN (BARS) shows the length of the sample in bars. Altering this setting will alter the **ORIGINAL TEMPO** and **LOOP LEN (BARS)** settings. An arrow will appear next to the **TRIM LEN (BARS)** setting, indicating this setting has priority. If the sample being edited consists of a certain amount of complete bars, it might be wise to use this setting as the prioritized one.

LOOP LEN (BARS) displays the amount of bars the looped section of the sample consists of. Altering this setting will alter the **ORIGINAL TEMPO** and **TRIM LEN (BARS)** settings. An arrow will appear next to the **LOOP LEN (BARS)** setting, indicating this setting has priority.

QUANTIZED TRIG makes it possible to quantize manual triggering of recorder buffers, Pickup machines and Flex and Static samples and slices. Manual triggering is done by for example pressing **[TRACK] + [PLAY]** or the last eight **[TRIG]** keys. Samples initiated by the sequencer will not be quantized. Use the **LEVEL** knob to alter this setting. If a recorder buffer is being edited and this parameter is changed, the **QPL** setting, found in the **RECORDING SETUP 2** menu, will be set to the same value. The **QPL** setting can thus be regarded as a mirror of the **QUANTIZED TRIG** parameter.


- **DIRECT** will make the sample play back immediately once it is triggered. This is the default option.
- **PAT.LEN** will, after the sample has been triggered, start sample playback once the pattern has played its full length.
- **1/16...** will start the sample playback after the set amount of sequencer steps.



Quantized triggering is a powerful way of keeping manually triggered samples in sync with the other tracks of a pattern. This is especially useful when manually triggering fill-in loops or recorder buffers.

13.2.5 FILE

This commands in this menu varies depending on if a Flex or a Static sample is being edited. Access by pressing [EFFECT 2] while in the audio editor.

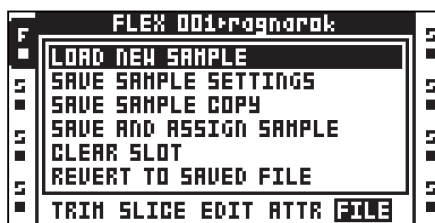

LOAD NEW SAMPLE will open the file browser, making it possible to replace the sample currently residing in the sample slot.

SAVE SAMPLE SETTINGS will save the trim, slice and attribute settings in a separate file and link it to the sample currently being edited. Next time the sample is loaded to a Flex or Static sample slot it will be loaded together with the saved sample settings. This will occur even if the sample is loaded in another project. Hence this command is very useful if you for example want a loop to always contain the same slice settings when being loaded.

SAVE SAMPLE COPY will save the complete sample to the Compact Flash card as a new file. Audio outside the trim section will also be included. Both mono and stereo samples can be saved, in either 16 bit or 24 bit format, depending on the original sample format. Recorder buffer content is always saved as stereo samples, and the bit depth of the saved file depends on the settings made in the MEMORY menu. For more information, please see “8.6.5 MEMORY” on page 37. Note that if you have chosen to load Flex samples in 16 bit, a 24 bit sample will be saved in 16 bit if you choose to overwrite the original file. Saving a sample automatically saves the sample settings as well. It is therefore not necessary to use the **SAVE SAMPLE SETTINGS** operation right after the **SAVE SAMPLE COPY** operation to fully save all sample properties. This option is not available to Static samples.

SAVE AND ASSIGN SAMPLE works just like the **SAVE SAMPLE COPY** command, but also assigns the new file either to the same sample slot, or to a free Flex or Static sample slot. The assignment choice is made immediately after the sample has been successfully saved. This option is not available to Static samples.

CLEAR SLOT clears the sample slot. This is similar to highlighting a sample slot in the Flex or Static sample slot list and pressing [FUNCTION] + [CLEAR].


REVERT TO SAVED FILE will revert the sample to its original state, undoing any off line changes applied to the sample like cropping, reversing, fades etc. After reloading a cropped sample you might need to alter the BPM setting found in the ATTRIBUTES menu to accommodate for the new sample length. Any trim points will be reset and will span across the whole sample length after this command is performed. If saved sample settings exist, they will also be reloaded. Any unsaved sample attribute changes will therefore be lost. This option is not available to Static samples.



If you want to save a sample captured by a track recorder, open the recorder buffer in the audio editor and use the **SAVE TRIM AS NEW SAMPLE** or the **SAVE TRIM AND AUTO-ASSIGN** commands. It is also possible to save recorder buffers from the **RECORDING SETUP** menus. Press [FUNCTION] + [BANK] to open the **RECORDING SETUP EDIT** menu, where the save command is found.

14. THE ARRANGER

An arrangement is basically a number of patterns played in sequence. Each row in an arrangement can have settings for pattern offset and length, scene assignments, tempo and mute. You can also loop segments of an arrangement or jump between arrangement rows. All this makes for a very powerful way of arranging your patterns. An arrangement can be up to 256 rows of length and each project can host 8 arrangements.

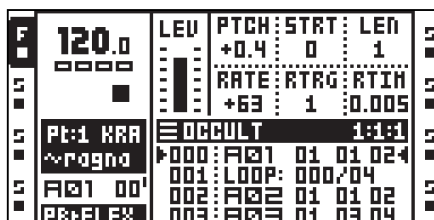

Enter ARRANGEMENT mode by pressing **[FUNCTION] + [PATTERN]**. The <ARRANGER> LED will be lit and the screen will change to reflect the currently active arrangement.

Start the arrangement by pressing **[PLAY]**. The row currently playing is indicated by two black arrows on each side of the row. The name of the arrangement is displayed in the arrangement header and to the right a counter showing the number of bars and beats played is located.

The **[UP]** and **[DOWN]** keys can be used to control the two indicators. When they are located on any other row apart from the one currently playing they will be colored white. Navigating to a new row and pressing **[ENTER/YES]** will make the selected row play once the currently playing row has finished playing.

When a row contains repeats the number of repetitions is indicated to the right of the row. For more information please see "14.1.1 EDIT" on page 86.


Pressing **[STOP]** stops the playback and another press moves the position pointer to the beginning of the arrangement.



The Octatrack arranger both sends and receives MIDI song pointer position.


14.1 THE ARRANGER MENU

While ARRANGER mode is active, press **[FUNCTION] + [BANK]** to open the ARRANGER menu. Here the current arrangement can be edited and various arrangement operations carried out.

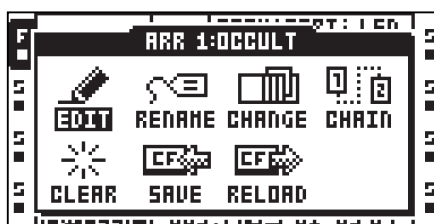

14.1.1 EDIT

The arrangement editor is where the arrangement is built. In the ARRANGER menu, choose EDIT and press **[ENTER/YES]** to open this menu.

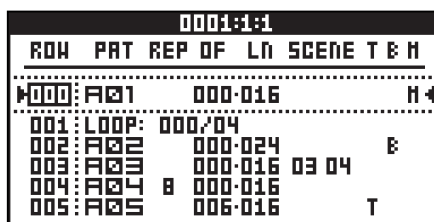

The two filled arrows on each side of one of the rows are the position pointers. They indicate which arrangement row the sequencer currently is playing. It is possible to start playback from any row position. Move the editing focus to the row you wish to start the playback from and press the **[ENTER/**

YES button. If the arrangement is currently playing when you select another row, you will see two hollow arrows on each side of the newly selected row. They indicate that the selected row will start playing once the current row finishes playing.

When playing the arrangement the header of the menu will display a counter indicating how many bars and beats have played.

Insert an arrangement row by pressing **[FUNCTION] + [DOWN]**. Remove a row by pressing **[FUNCTION] + [UP]**. Use the **[UP]** and **[DOWN]** keys to select the arrangement row you wish to edit. The **[LEFT]** and **[RIGHT]** keys move the focus between the columns.

ROW lists the available arrangement rows. An arrangement can consist of a maximum of 256 rows. The arrangement is played from row 0 to the end row.

PAT displays which patterns are assigned to the rows. Move the focus to this column using the **[ARROW]** keys. Set the pattern you want to be played on the arrangement row either by using the **LEVEL** knob or by pressing the appropriate **[BANK]/[PATTERN]+[TRIG]** key combinations. Several special commands are available in the **PAT** column.

- **HALT** forces the arrangement to stop at a given row. Turn the **LEVEL** knob anti-clockwise until the location before pattern A01 is reached. "HALT:" will be displayed.
- **LOOP** makes a selection of the arrangement loop either infinitely or a fixed amount of times. Turn the **LEVEL** knob anti-clockwise until the location before pattern A01 is reached. When "HALT:" appears, move the focus to the value located after "HALT:". Turn the **LEVEL** knob one step anti-clockwise and "LOOP:" will appear. The arrangement section will now loop infinitely between row 000 and the row containing the loop command. To set a fixed amount of loop cycles, move the focus to the infinity symbol and use the **LEVEL** knob to set the value. The arrangement section will loop the specified number of times and once finished the arrangement row located below the loop point will start playing. Loops can be nested.
- **JUMP** makes the arrangement jump to a new position. Turn the **LEVEL** knob anti-clockwise until the location before pattern A01 is reached. When "HALT:" appears, move the focus to the value located after "HALT:". Turn the **LEVEL** knob clockwise and "HALT:" will change to "JUMP:". Set the row number the arrangement should jump to by using the **LEVEL** knob.
- **REM** adds text to the arrangement. This is only a visual cue and will not affect the timing of the arrangement. Turn the **LEVEL** knob anti-clockwise until the location before pattern A01 is reached. When "HALT:" appears, turn the knob one more step anti-clockwise and "REM:" will be displayed. Press the **[RIGHT]** arrow key and then press **[YES]**. The naming window will open. Enter your text here.

REP is the column where the amount of times the arrangement row will be repeated is set. Move the focus to this column by using the **[ARROW]** keys. Use the **LEVEL** knob to alter the number of repeats.

OF sets the offset of the pattern. The pattern will start playing from the set step.

LN can be used to override the pattern length of the row. The default length is derived from the scale setup settings of the pattern. Move the focus to this column by using the **[ARROW]** keys. Use the **LEVEL** knob to alter the pattern length setting. If **PER TRACK** mode is used **LN** controls the **MASTER LENGTH** setting. For more information please see "12.14 SCALE SETUP" on page 77.

SCENE consists of two columns where scenes can be assigned on a per row basis. The first column sets the scene for the scene A slot. The second column sets the scene for the scene B slot. Move the focus to these columns by using the **[ARROW]** keys. Use the **LEVEL** knob or press **[SCENE A]/[SCENE B] + [TRIG]** to assign the scenes. The scenes are chosen from the part linked to the pattern of the arrangement row.

T is where transpose values for the MIDI tracks of a pattern are set. Move the focus to the **T** column and press **[ENTER/YES]** to open the MIDI TRANSPOSE window. Navigate between the MIDI tracks using the left and right **[ARROW]** keys. Use the **LEVEL** knob to set the transpose value. If MIDI track transpose is set for a row, it is indicated by a "T" in the **T** column.

B allows individual BPM settings for the arrangement rows. Move the focus to the **B** column and press **[ENTER/YES]** to open the ROW TEMPO window. Set the BPM with the **LEVEL** knob. Rows with dedicated BPM settings are indicated with a "B". If no setting is made in this column the pattern will play according to the main BPM setting.

M offers mute settings per arrangement row. Move the focus to the **M** column and press **[ENTER/YES]** to open the ROW MUTE window. Enter mutes by pressing the **[TRIG]** keys. The first eight keys mute audio tracks, the last eight the MIDI tracks. Rows with mute settings are indicated with an "M".



Copy, paste, clear and undo functions are available in the ARRANGEMENT EDIT menu.

14.1.2 RENAME

Selecting this command and pressing **[ENTER/YES]** will bring up a naming window where it is possible to rename the arrangement.

14.1.3 CHANGE

Selecting this command and pressing **[ENTER/YES]** will bring up a menu where all the arrangements of the project are visible. Select the arrangement you want to change to and press **[ENTER/YES]**. The active arrangement is always displayed in the header of the ARRANGEMENT menu. An asterisk next to an arrangement means the arrangement contains unsaved settings.

14.1.4 CHAIN

Will make the arrangement selected in this menu start play immediately after the currently playing arrangement has finished playing. It has a similar function to pattern chaining, with the exception that no more than one arrangement at a time can be chained. The chained arrangement will be visible in the default arrangement screen, located after the last row of the currently active arrangement.

14.1.5 CLEAR

Selecting this command and pressing **[ENTER/YES]** will erase the active arrangement.

14.1.6 SAVE

The save command saves the active arrangement to the active arrangement slot. Selecting this command and pressing **[ENTER/YES]** will bring up a naming menu. Once the arrangement has been named, press **[ENTER/YES]** to save it.

14.1.7 RELOAD

Selecting this command and pressing **[ENTER/YES]** will reload the active arrangement to the state it was saved in.

15. THE MIDI SEQUENCER

The Octatrack MIDI sequencer consists of 8 dedicated MIDI tracks. It is used to control external, MIDI equipped, gear. Each MIDI track can trigger a chord of up to 4 notes with adjustable velocity and length, control pitch bend and aftertouch as well as 10 freely assignable control change parameters. Any MIDI channel can be assigned to the MIDI tracks and several tracks can share the same channel. If several tracks are assigned to the same MIDI channel the track with the lowest number has priority in regard to parameter collisions.

The MIDI tracks function almost exactly the same way as the audio tracks. Parameter locks, LFO modulation, copy and paste commands are available. Each MIDI track also features micro timing, conditional locks, individual track length and time signature settings. The main difference is that no sound is being generated by the MIDI tracks, data is only transmitted through the MIDI OUT port. MIDI track parameters cannot be assigned to scenes.



When in MIDI mode and neither **GRID RECORDING** or **LIVE RECORDING** mode is active, the **[TRIG]** keys can be used to trig tracks that are disconnected from the sequencer. **[TRIG 1-8]** keys trig the audio tracks and **[TRIG 9-16]** keys trig the MIDI tracks.

When pressing **[STOP]** a note off command will be sent for any MIDI notes still playing. If the sequencer is stopped, quickly pressing **[STOP] + [STOP]** will send an all notes off command, resend CC parameter values as well as any program change values for all tracks to which a MIDI channel has been assigned.

Two pixels in the upper left corner of the LCD indicates MIDI port activity. The left pixel blinks when MIDI data is received, the right pixel blinks when MIDI data is being sent out.

15.1 ACCESSING THE MIDI SEQUENCER

Access the MIDI mode by pressing the **[MIDI]** key. The **<MIDI>** LED will light up and the tracks will now reflect the MIDI tracks and the sequencer data belonging to them.

1	120.0	LEV	NOTE	VEL	LEN	5
2	□□□□	■	C 3	100	1/16	6
3	Pt:1 KARASUS		NOT2	NOT3	NOT4	7
4	MIDI CH:01		0	0	0	8
	FF01		-	-	-	
	MIDI NOTE				01-02	

Under the name of the active part, the MIDI channel the active track sends out MIDI data to is visible. The track icons to the left and right also indicate the assigned MIDI channels for each track. An "X" means the track doesn't send data to any MIDI channel.

15.2 HOW MIDI IS ROUTED

If an audio track and a MIDI track share the same MIDI channel, the MIDI track will block the audio track from sending out data while the audio track will block the MIDI track from receiving data. In the **PROJECT** menu you can see which MIDI channels are assigned to which audio tracks. Read more in the section "MIDI" on page 41.

In MIDI mode, notes received on the auto channel or the MIDI channel of the active track are mixed with the MIDI data sent by the track. Incoming notes will also be arpeggiated according to any arpeggiator settings made to the MIDI track. Depending on the **CC DIRECT CONNECT** setting, incoming MIDI messages will be handled differently.

If the setting is activated, MIDI CC messages sent to the auto channel or the MIDI channel of the active MIDI track will be sent straight to the MIDI output port. When in **LIVE RECORDING** mode, specified CCs in the **CTRL 1** and **CTRL 2 SETUP** pages can be recorded by the sequencer.

If the setting is deactivated, the MIDI tracks listen to MIDI CC messages according to the **MIDI MODE MAPPINGS** table found in "Appendix C: MIDI CONTROL REFERENCE". Note that MIDI CCs 36-45 sent on the auto channel will be remapped according to the CC messages specified in the **CTRL 1** and **CTRL 2 SETUP** pages. The only exception to this is if MIDI CC messages are sent to the MIDI channel of the active track. In that case, the Octatrack will behave as if **CC DIRECT CONNECT** was activated.

15.3 MIDI MODE LIVE RECORDING AND PARAMETER LOCKING

While in MIDI mode note data and CC values can be recorded in real time to the active MIDI track. Activate LIVE RECORDING mode by pressing **[REC]** + **[PLAY]**. For the MIDI track to register incoming MIDI data, the note or CC data needs to be sent either to the auto channel, which is set in the CHANNELS menu, or to the MIDI channel of the active track.

When recording note data, chords consisting of up to four notes can be recorded. Note length, velocity and aftertouch will be recorded as well.

When recording CCs using the auto channel, two different scenarios exist. When **CC DIRECT CONNECT** is enabled, only CCs which have been specified in the CTRL 1 and CTRL 2 SETUP menus can be recorded. All other MIDI messages will be sent straight to the MIDI OUT port. When **CC DIRECT CONNECT** is disabled, CC messages 16-45 can be recorded. Note that CC messages 36-45 are directly linked to the ten available CTRL 1 and CTRL 2 SETUP parameters. Sending for example CC message 36 to the Octatrack will affect the CC#1 parameter of the CTRL 1 SETUP menu. The CC message will be converted to the CC value specified by CC#1 and then sent to the MIDI OUT port. Read more on how to set the auto channel in the section "8.7 MIDI" on page 39. Read more about **CC DIRECT CONNECT** in section "8.6.4 MIDI SEQUENCER" on page 37..

To add MIDI notes and MIDI parameter locks on the Octatrack sequencer on a per trig basis, select the track you want to input data to, keep a **[TRIG]** key pressed and send the note data or CC messages to the auto channel or the MIDI channel of the active track. The **CC DIRECT CONNECT** setting will affect the reception of the CCs in the same way as when live recording, described above.



If several MIDI tracks have been assigned the same MIDI channel, only the active track will record notes or CC data.

Messages received on the MIDI channel of the active MIDI track always behave as if **CC DIRECT CONNECT** is activated.



When **CC DIRECT CONNECT** is enabled the Octatrack can record and play back knob tweaks made directly on an external MIDI device. Connect for example a synthesizer, which preferably has been set to local off, to both the MIDI IN and OUT ports of the Octatrack. Make sure the synth knobs send CCs and that those CC messages are sent either to the auto channel or to the MIDI channel of the active track. Also make sure the CC values of the knobs that should be recorded have been set in the CTRL 1/CTRL 2 SETUP menus. The MIDI CC learn functionality, which can be performed in these menus, is a quick way of setting the CCs. When LIVE RECORDING mode is active and a knob, sending a CC value specified in one of the CTRL 1/CTRL 2 SETUP menus, is turned on the synthesizer, the knob turn will be recorded by the Octatrack sequencer. This behavior also applies when setting parameter locks. Press a **[TRIG]** key, turn a synth knob that has been specified in one of the CTRL 1/CTRL 2 SETUP menus, and the synth parameter will be locked accordingly.

For a tutorial how the Octatrack can be set up with external MIDI devices when **CC DIRECT CONNECT** is activated please see "16.5 OCTATRACK AS A MIDI CONTROL CENTER" on page 101.

15.4 MIDI TRACK PARAMETER PAGES

Just like the audio tracks, each MIDI track contains 5 TRACK PARAMETER pages, each consisting of one MAIN page and one SETUP page. While in MIDI mode the MAIN pages are accessed by simply pressing the **[TRACK PARAMETER]** keys. MAIN page parameters are possible to parameter lock and modulate with the MIDI LFOs. Parameters located in the SETUP menus are accessed by either pressing **[FUNCTION]** + **[TRACK PARAMETER]** or by quickly double pressing a **[TRACK PARAMETER]** button. Setup parameters cannot be parameter locked or affected by the LFOs and usually affect the behavior of the MAIN menu parameters.

15.4.1 NOTE MAIN

Here the MIDI notes, plus their velocity and length, are set.

1	120.0	LEV	NOTE	VEL	LEN	5
2	0000		C 3	100	1/16	6
3	Pt:1 KRASUS		NOTE2	NOTE3	NOTE4	7
4	MIDI Ch:01		0	0	0	8
	PA01		-	-	-	
	MIDI NOTE					

NOTE sets the root note that should be sent by the MIDI track. When pressing and holding a **[TRIG]** key a mini-keyboard will appear in the lower part of the LCD screen. Turning knob A while holding the **[TRIG]** key pressed will visualize the root note on the keyboard.


VEL controls the velocity of the notes the MIDI track sends out. A setting of 0 equals a NOTE OFF command.

LEN sets the duration of the notes. When a note has finished playing a NOTE OFF command will be sent. A max setting equals infinite note length. This setting also controls the length of an arpeggio. When the set time has elapsed the arpeggio will be cut off.

NOT2-NOT4 will add more notes, offset from the root note by the selected values, to a note trig. This makes it possible for a MIDI track to send out chords consisting of up to 4 notes. If the root note is changed the offset notes will transpose accordingly. When a **[TRIG]** key is pressed and held the added notes can be seen on the mini-keyboard. A value of 0 will remove an offset note.

15.4.2 NOTE SETUP

Here the MIDI channel that the MIDI track should send data to is specified. Bank and program change values are set here as well. When selecting a value in this menu the graphics of the parameter will become inverted. This indicates the parameter value hasn't been activated yet. Press the corresponding **DATA ENTRY** knob or **[ENTER/YES]** to activate the parameter change.

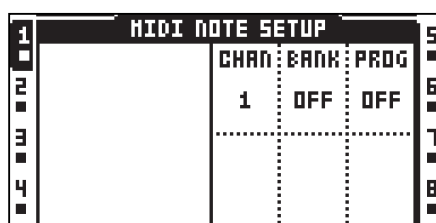


CHAN sets the MIDI channel the track will send MIDI data to. When set to OFF the track will not send data to any MIDI channel.

BANK can be used for sending out a bank change message. Bank 0 to 127 can be sent. The maximum parameter value is OFF, which will make the track not send out any bank change message. The setting made here is sent every time a pattern linked to another part becomes active.

PROG can be used for sending out a program change message. Program 0 to 127 can be sent. The maximum parameter value is OFF, which will make the track not send out any program change message. The setting made here is sent every time a pattern linked to another part becomes active.

15.4.3 ARPEGGIATOR MAIN

An arpeggiator is a device that generates rhythmical note progressions.

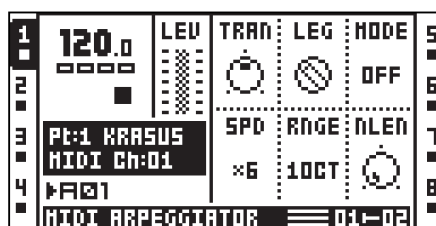

TRAN is used to transpose the arpeggio up or down in the specified amount of semitones. This setting will affect the note trigs of the track even if the **MODE** setting is set to OFF.

LEG controls the legato of the arpeggiator. This setting will affect the note trigs of the track even if the **MODE** setting is set to OFF.

- **ON** will play overlapping notes legato, releasing the old note after the new one. The **NLEN** setting adjusts the length of the notes when the arpeggiator is activated. If not activated the **LEN** setting will adjust the length of the notes.
- **OFF** will send out a MIDI note off message before the start of each arpeggiated note.

MODE activates the arpeggiator and controls how the arpeggiated notes will be sorted.

- **OFF** will deactivate the arpeggiator.
- **TRUE** will play the notes in the same order as they were inserted.
- **UP** will play the notes in an ascending order, from the lowest note to the highest, on a per octave basis.

- **DOWN** will play the notes in a descending order, from the highest note to the lowest, on a per octave basis.
- **CYCL** will play the notes first in an ascending order, then in an descending order.
- **SHFL** will play the notes randomly on an octave range basis. If the arpeggio for example has a **RNGE** setting of 2OCT, the notes of the first octave range will be played randomly and once all notes have been played, all the notes of the second octave will be played in a new random order.
- **RANDOM** will randomize the playback of the arpeggiated notes.


SPD sets the speed of the arpeggiator. It is synchronized to the BPM of the project. A setting of 6 equals 16th notes, a setting of 12 equals 8th notes and so on.

RNGE sets the octave range of the arpeggiator. After each finished arpeggiator cycle the arpeggiated notes will be transposed one octave up. When the notes has reached the octave offset specified by the **RNGE** setting the notes will be reset to their initial values. From there the octave transpose will be started all over again.

NLEN controls the length of the arpeggiated notes.

15.4.4 ARPEGGIATOR SETUP

Here the length, the note progression and the scale of the arpeggio are set.

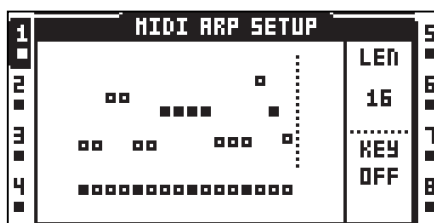

While in this menu lit <TRIG> LEDs reflect the length of the arpeggio. An arpeggio can be up to 16 steps and the length is set by the **C** knob. When turning the knob the <TRIG> LEDs will change accordingly to reflect the length. Active arpeggiator steps are indicated by green <TRIG> LEDs. Arpeggiator steps can be deactivated by pressing the corresponding [**TRIG**] keys. Deactivated arpeggiator steps are indicated by red <TRIG> LEDs.

Note offsets to the arpeggio can be inserted by pressing a [**TRIG**] key and turning the **LEVEL** knob or pressing the [**UP**]/[**DOWN**] arrow keys. By pressing several [**TRIG**] keys simultaneously it is possible to adjust the note offset values of more than one arpeggiator step at a time.

Arpeggiated notes and any note offsets can be forced to play according to a given key scale. The **F** knob sets the key scale. When set to OFF all notes and note offsets will play according to the set notes. This setting will affect the note trigs of the track even if the **MODE** setting found in the **ARPEGGIATOR MAIN** menu is set to OFF




[**FUNCTION**]+[**LEFT**]/[**RIGHT**] can be used to rotate the arpeggiator sequence.

The arpeggiator sequence settings can be copied, cleared and pasted.


15.4.5 MIDI LFO MAIN

The MIDI LFOs work more or less the same way as the audio LFOs. The difference is that they are exclusive to the MIDI tracks. For info about how the LFO parameters work, please see “LFO MAIN” on page 70.

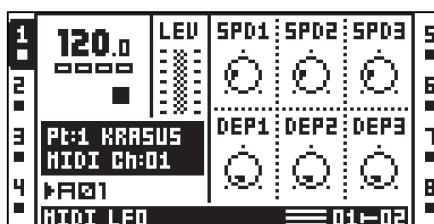

15.4.6 MIDI LFO SETUP


The MIDI LFO SETUP pages function just like the LFO SETUP pages for the audio LFOs. For more information, please see “11.4.8 LFO SETUP” on page 60.

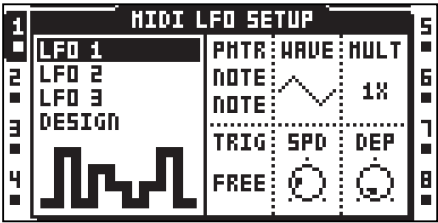

The MIDI LFO designer waveforms are only available to the MIDI tracks.

15.4.7 CTRL 1 MAIN

Here pitch bend, after touch and the values of up to four assignable CC commands are set. The default value of the parameters is OFF, meaning they are disabled and won't send out any data. Holding **[FUNCTION]** and pressing the **DATA ENTRY** knobs will enable them. Parameter values can then be set as usual by using the **DATA ENTRY** knobs. Disable the parameters again by repeating the enabling procedure.

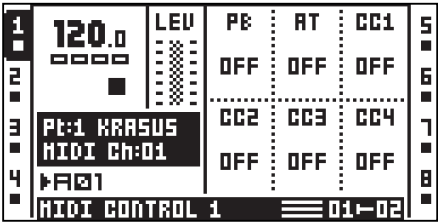


PB controls the pitch bend setting.

AT controls the after touch setting.

CC1-CC4 controls the values that should be sent for the CC commands specified in the CTRL 1 SETUP page.

15.4.8 CTRL 1 SETUP

Here the CC commands whose values are controlled in the CTRL 1 MAIN page are selected. When selecting a CC command in this menu the graphics of the parameter will become inverted. This indicates the parameter value hasn't been activated yet. Press the corresponding knob or **[ENTER/YES]** to activate the parameter change.

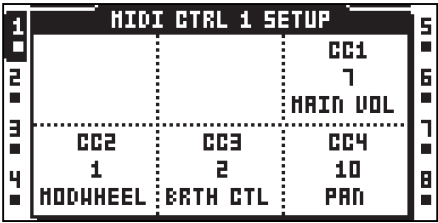

CC1-CC4 specifies the CC commands that will be controlled on the CTRL 1 MAIN page. By pressing **[FUNCTION]** + knob C-F MIDI CC LEARN mode is activated. The next CC message sent to the MIDI autochannel or the MIDI channel of the active track will be assigned to the selected parameter.



MIDI CC LEARN mode is very handy when wanting to control for example the cutoff parameter of an external synth. Initiate MIDI CC LEARN mode and turn the cutoff knob of the synthesizer. Given the knob sends out a CC message to either the auto channel or the MIDI channel assigned to the active track, the CC of the knob will be automatically assigned to chosen CC 1-4 parameter.

15.4.9 CTRL 2 MAIN

Here the values of up to six assignable CC commands are set. The default value of the parameters is OFF, meaning they are disabled and won't send out any data. Holding **[FUNCTION]** and pressing the **DATA ENTRY** knobs will enable them. Parameter values can then be set as usual by using the **DATA ENTRY** knobs. Disable the parameters again by repeating the enabling procedure.

1	120.0	LEV	CC5	CC6	CC7	5
2	■■■■	■■■■	OFF	OFF	OFF	6
3	Pt:1 KARASUS		CC8	CC9	CC10	7
4	MIDI Ch:01		OFF	OFF	OFF	8
	PA01					
	MIDI CONTROL 2				01-02	

CC5-CC10 controls the values that should be sent for the CC commands specified in the CTRL 2 SETUP page.

15.4.10 CTRL 2 SETUP

Here the CC commands whose values are controlled in the CTRL 2 MAIN page are selected. Settings in this menu are adjusted just like when in CTRL 1 SETUP.

1	MIDI CTRL 2 SETUP						5
2	CC5	CC6	CC7				6
	71	72	73				
3	SNDCTRL2	SNDCTRL3	SNDCTRL4				7
4	CC8	CC9	CC10				8
	74	75	76				
	SNDCTRL5	SNDCTRL6	SNDCTRL7				

CC5-CC10 specifies the CC commands that will be controlled on the CTRL 2 MAIN page. MIDI CC LEARN is available here as well.

16. OCTATRACK SETUP EXAMPLES

The flexibility of the routing of the Octatrack makes it easy to integrate the machine in a lot of various studio and live setups. Here are a few examples of how it can interact with external audio sources.

16.1 OCTATRACK AS A PERFORMANCE HUB


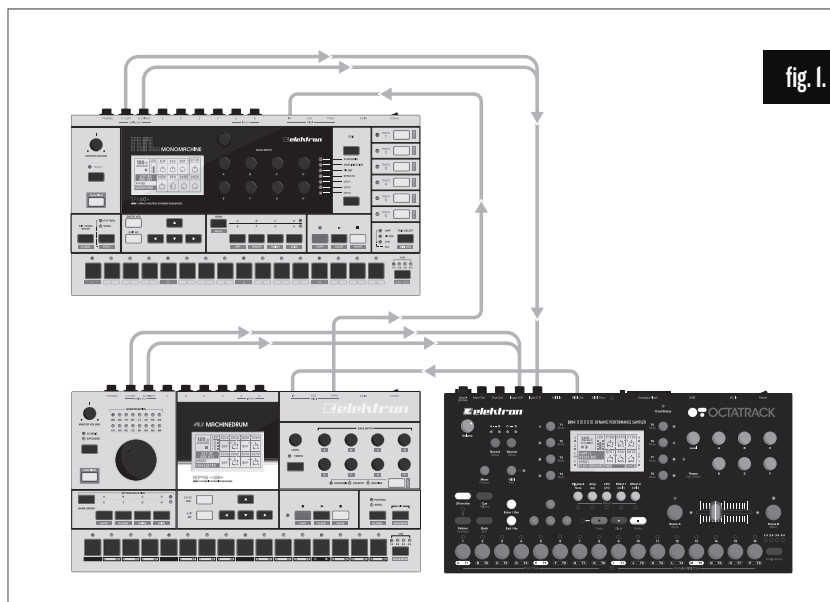


Fig 1. A Machinedrum and a Monomachine are MIDI slaved and connected to the two input pairs of the Octatrack. The Octatrack acts like a super mixer. It adjusts the levels of the incoming signals, applies effects and samples the other machines in real time. Two main methods setting up the Octatrack exist. It can either listen to the incoming audio by using the DIR parameters of the MIXER menu or by using Thru machines.


16.1.1 DIR METHOD

To set up the Octatrack for use with the DIR method, follow these instructions.

1. Connect the outputs of the Machinedrum and Monomachine to the input pairs of the Octatrack. We will assume the Machinedrum is being connected to input A/B and the Monomachine to input C/D
2. Connect a MIDI cable from MIDI OUT of the Octatrack to MIDI IN of the Machinedrum. Connect a MIDI cable from MIDI THRU of the Machinedrum to the MIDI IN of the Monomachine. Make sure the Machinedrum and Monomachine listen to external MIDI clock and that they respond to external transport commands.
3. Open the PROJECT menu by pressing **[FUNCTION] + [MIXER]**. Select MIDI and then SYNC. Press **[ENTER/YES]**. Enable both TRANSPORT SEND and CLOCK SEND. The Machinedrum and Monomachine will now be slaved to the BPM and the sequencer transport controls of the Octatrack.

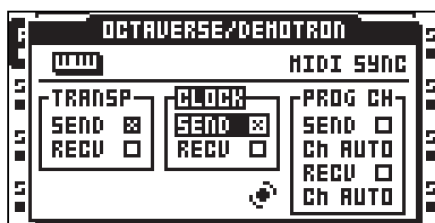

4. Open the MIXER menu by pressing **[MIXER]**. Make sure **DIR** for both AB and CD is set to 127. This will route the incoming sound to the Octatrack main outputs at full volume.

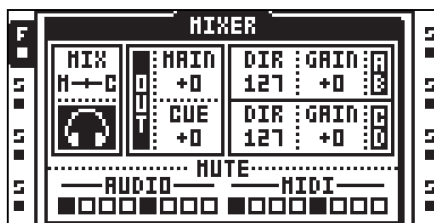

5. Press **[PLAY]** on the Octatrack. The other Machines should start playing as well and their audio will be heard through the Octatrack main outputs. Incoming sounds is indicated by the <AUDIO RECORD> LEDs lighting up. You can sample the incoming audio with track recorders and use the recorder buffers to play back the recorded samples.



Make sure the MIDI channels assigned to the Octatrack audio tracks aren't colliding with the MIDI channels the Machinedrum and Monomachine listen to as this could lead to unintentional triggering of sounds. MIDI channel assignments to the audio tracks are made in the CHANNELS menu.




Turn track 8 into a master track to affect the incoming audio with the master track effects.


16.1.2 THRU MACHINES METHOD

In the next example the Thru machines will be used instead of the DIR method. Thru machines offer more possibilities when it comes to adding effects to the incoming audio, but at the same time each Thru machine will occupy a track.

1. Connect the outputs of the Machinedrum and Monomachine to the input pairs of the Octatrack. We assume the Machinedrum is being connected to input AB and the Monomachine to input CD.
2. Connect a MIDI cable from MIDI OUT of the Octatrack to MIDI IN of the Machinedrum. Connect a MIDI cable from MIDI THRU of the Machinedrum to the MIDI IN of the Monomachine. Make sure the Machinedrum and Monomachine listen to external MIDI clock and that they respond to external transport commands.
3. Open the PROJECT menu by pressing **[FUNCTION] + [MIXER]**. Select MIDI and then MIDI. Press **[ENTER/YES]**. Enable both TRANSPORT SEND and CLOCK SEND.

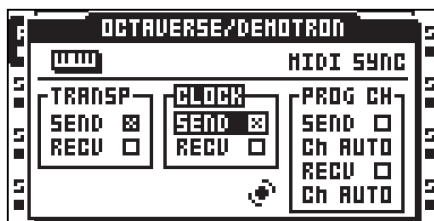

4. Open the MIXER menu by pressing **[MIXER]**. Make sure **DIR** for AB and CD is set to 0. This will make incoming sound available to only Thru machines.

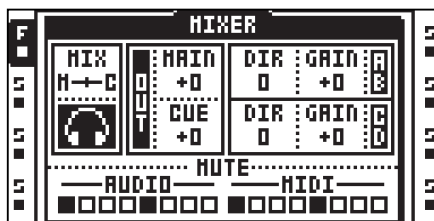

5. Assign a Thru machine to track 1. Set **INAB** to A B. This will make the machine listen to input A/B, which is the input pair the Machinedrum is connected to. Assign a Thru machine to track 2. Set **INCD** to C D. This will make the machine listen to input CD, which is the input pair the Monomachine is connected to.
6. Select track 1. Place a sample trig on the first step of the sequencer. Do the same for track 2. Triggering the Thru machines is necessary for them to start passing through incoming audio.
7. Press **[PLAY]** on the Octatrack. The other Machines should start playing as well and their audio will

be heard through the Octatrack main outputs. Incoming sounds is indicated by the <AUDIO RECORD> LEDs lighting up. You can sample the incoming audio with track recorders and use the recorder buffers to play back the recorded samples.



Because Thru machines are used, the Machinedrum can be muted by muting track 1. The Monomachine is muted by muting track 2. You can also add track effects to the Thru machine tracks and assign the LFOs to various effect or AMP menu parameters. Thru machines used in this way make it possible to greatly change the incoming sounds.

16.2 OCTATRACK WITH EXTERNAL EFFECTS


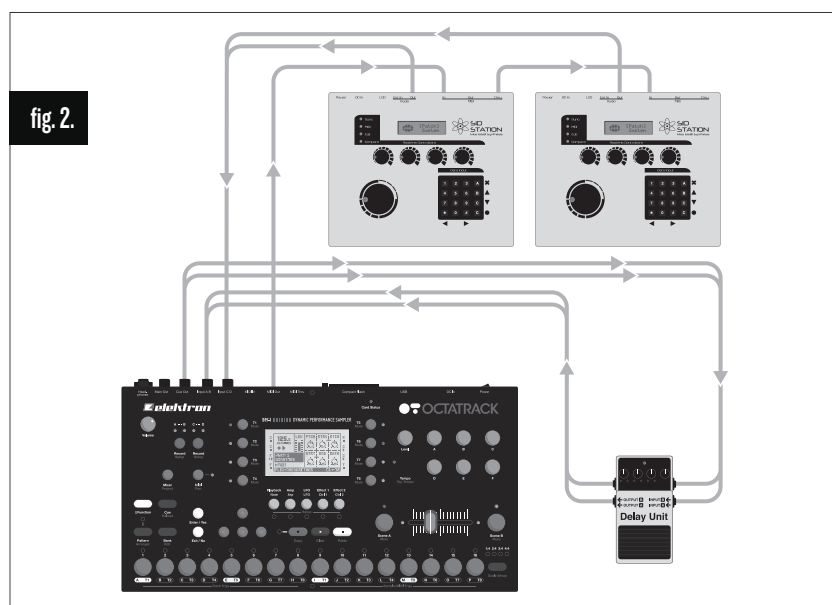


Fig 2. The Octatrack output pair is connected to an external effects device. The outputs of the external effects are connected to input pair AB. The input pair is routed to the Octatrack main out. Cueing a track will send it to the external effects and the affected signal can then be treated further by the Octatrack. The two Sidstations are ready to be sampled and processed. They are controlled by the MIDI sequencer of the Octatrack and their outputs, since they are in mono, are connected to input C and D.

1. Connect the outputs of the Sidstations to one of the input pairs of the Octatrack. We assume the first Sidstation is connected to input C and the second one to input D. Connect the Octatrack cue outputs to the inputs of the external effects device. Connect the outputs of the external effects device to input A/B.
2. Connect a MIDI cable from MIDI OUT of the Octatrack to MIDI IN of the first Sidstation. Connect a MIDI cable from MIDI THRU of the first Sidstation to the MIDI IN of the second Sidstation.
3. Open the MIXER menu by pressing **[MIXER]**. Make sure **DIR** for AB is set to 127 and that CD is set to 0. This will route the sounds from the effects device directly to the Octatrack main outputs at full volume, while the audio from the Sidstations only will be available to Thru machines.

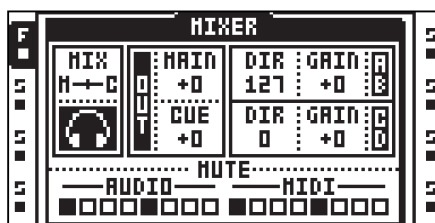


4. Access the MIDI sequencer mode by pressing **[MIDI]**. Select MIDI track 1 and quickly double press **[PLAYBACK]** to open the NOTE SETUP menu. Set the MIDI channel so Sidstation 1 responds to MIDI data sent from track 1. Set up MIDI track 2 so Sidstation 2 responds to MIDI data sent from track 2. Place a few note trigs on MIDI track 1 and 2. Exit MIDI mode by pressing the **[MIDI]** button.
5. Assign a Thru machine to track 3. Set **INCD** to C. This will make the machine listen to input C, which is the input the first Sidstation is connected to. Assign a Thru machine to track 4. Set **INCD** to D. This will make the machine listen to input D, which is the input the second Sidstation is connected to.

6. Assign recorder buffer 1 to track 1 and recorder buffer 2 to track 2. These buffers will play back the sampled audio from the Sidstations.
7. Select track 1 and press **[FUNCTION] + [AUDIO REC AB]** to open the RECORDING SETUP 1 menu. Set track recorder 1 to listen to input C.



8. Set the track recorder on track 2 to listen to input D.

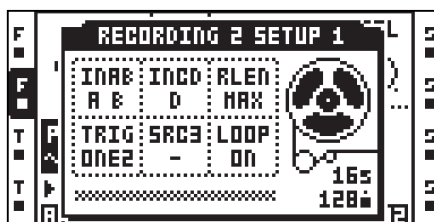

9. Exit the RECORDING SETUP 1 menu by pressing **[EXIT/NO]**. Select track 3. Press **[REC]** and place a trig on the first step of the sequencer. Do the same for track 4. Triggering the Thru machines is necessary for them to start passing through incoming audio.
10. Press **[PLAY]** on the Octatrack. The other Sidstations should start playing and audio from them will be heard through the Octatrack main outputs. Incoming sounds is indicated by the <AUDIO RECORD> LEDs lighting up. You can sample the incoming audio with the track recorders and use the recorder buffers on track 1 and 2 to play back the recorded samples. To send audio from a track to the external effects device, press **[CUE] + [TRACK]**. The **DIR AB** parameter in the MIXER menu effectively works as an aux return level setting. If the signal from the external effects device is too prominent, adjust **DIR AB** to taste.

16.3 OCTATRACK PROCESSING LIVE INSTRUMENTS


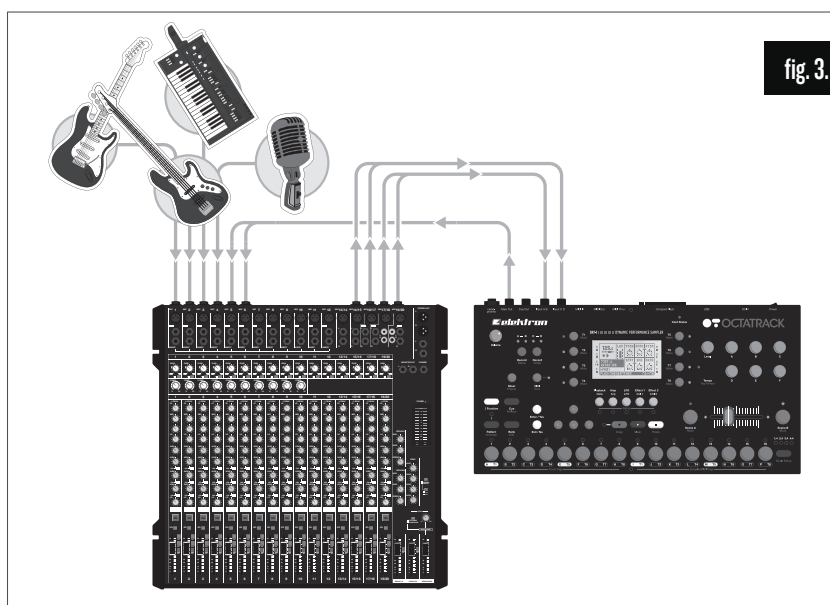


Fig 3. Four mixer aux sends are connected to the inputs of the Octatrack. Each aux send sends a different signal. The Octatrack applies effects, reconstructs the incoming audio and sends back the real-time processed audio to the stage mixer.

1. Connect four aux sends from the mixer to the four inputs of the Octatrack. The guitar is being sent to input A, the bass to input B, the synth to input C and the vocals to input D. Connect the Octatrack main outputs to the mixer.

- Open the MIXER menu by pressing **[MIXER]**. Make sure **DIR** for both AB and CD is set to 0. This will stop the incoming sound from being sent to the Octatrack main outputs.

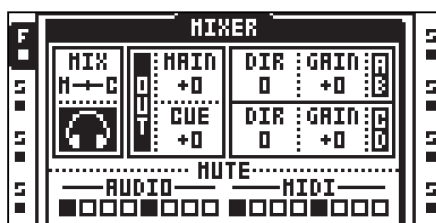

- Press **[CUE]** + **[AUDIO REC AB]** and **[CUE]** + **[AUDIO REC CD]** to route the incoming audio directly to the cue outputs. Cueing like this will prevent the incoming audio from being sent to the main outputs. This is necessary as only the sampled and processed audio should be sent back to the stage mixer. If the incoming audio were directly routed to the main Octatrack outputs and hence back to the stage mixer, phasing issues might occur.
- Select track 1 by pressing the first **[TRACK]** key. Open the RECORDING SETUP 1 menu for track 1 by pressing **[FUNCTION]** + **[AUDIO REC AB]**. Set **INAB** to A. When **[TRACK]** key 1 + **[AUDIO REC AB]** are pressed, the track recorder will start recording the guitar. Repeat the procedure for track 2, but set **INAB** to B. This will record the bass guitar. Likewise, set up track recorders 3 and 4 so the synth and the vocals can be sampled and processed.
- Assign recorder buffer 1 to track 1. Assign recorder buffer 2 to track 2. Do likewise for tracks 3 and 4. Now guitar, bass, synth and vocals can be sampled and immediately played back.

You can now listen to the incoming sounds using a pair of headphones connected to the Octatrack headphones output. The incoming sounds will not be heard on the main outputs as they are cued. Once you have sampled the sounds and applied effects, parameter locks etc, they can be played back by the recorder buffers which are routed to the Octatrack main outputs. The processed audio will thus be sent to the stage mixer and mixed with the other sounds.

16.4 OCTATRACK AS A DJ MIXER AND SAMPLER


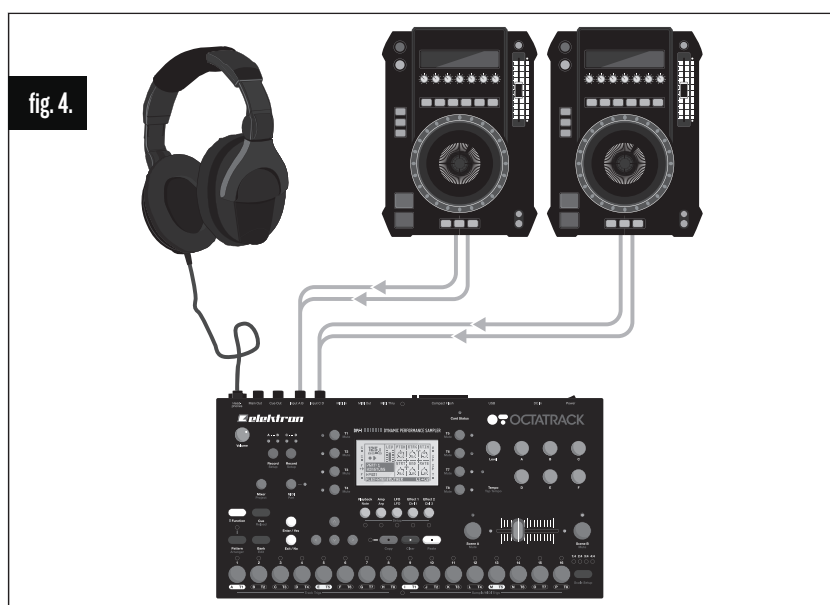


Fig 4. Two DJ decks are connected to the Octatrack inputs. The headphones output is set to monitor both the main and cue outputs. The crossfader is assigned to control the main output balance between the two incoming signals. The Octatrack can mix between the DJ decks by either using the DIR method or the Thru machines method.

16.4.1 DJ MIXING USING THE DIR METHOD

- Connect the first DJ deck to Octatrack input pair AB. Connect the second DJ deck to input pair CD.
- Assign a Scene to Scene A by pressing **[SCENE A]** + a **[TRIG]** key. Assign a Scene to Scene B by pressing **[SCENE B]** + a **[TRIG]** key. We assume scene 1 was assigned to Scene A and scene 2 to Scene B.

- Open the MIXER menu by pressing **[MIXER]**. Make sure **DIR** for both AB and CD is set to 127. This will route the incoming sound to the Octatrack main outputs at full volume.

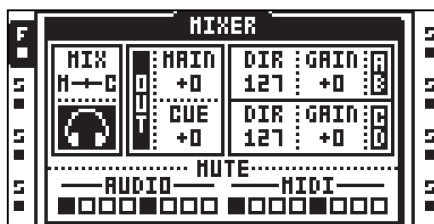

- Press and hold **[SCENE A]**. Note how the **DIR** parameters change to **XDIR**. While keeping **[SCENE A]** pressed, turn knob **B** so **XDIR AB** is set to MAX. Then turn knob **E** so **XDIR CD** says MIN. Release **[SCENE A]** and press and hold **[SCENE B]**. Turn knob **B** so **XDIR AB** is set to MIN. Then turn knob **E** so **XDIR CD** says MAX. When the crossfader is at its leftmost position only the audio from DJ deck 1 will be routed to the main outputs. When it is at its rightmost position only the audio from DJ deck 2 will be routed to the main outputs. Any other crossfader position will mix the audio from DJ deck 1 and 2.
- Set the crossfader to its leftmost position and start playing a song on DJ deck 1. The audio will be heard from the Octatrack main outputs.
- When it is time to mix in a track from DJ deck 2, first press **[CUE]** + **[AUDIO REC CD]** to cue listen to DJ deck 2 using the headphones. Adjust the playback of DJ deck 2 so both decks play in sync.
- Un-cue DJ deck 2 by pressing **[CUE]** + **[AUDIO REC CD]** and move the crossfader to its rightmost position. The Octatrack will now mix between DJ deck 1 and 2.




Turn track 8 into a master track to affect the incoming audio from the DJ decks with the master track effects.

Don't forget that it is possible to sample the DJ decks, even ones that are cued.

16.4.2 DJ MIXING USING THE THRU METHOD

- Connect the first DJ deck to Octatrack input pair AB. Connect the second DJ deck to input pair CD.
- Open the MIXER menu by pressing **[MIXER]**. Make sure **DIR** for AB and CD is set to 0. This will make incoming sound available to only Thru machines.

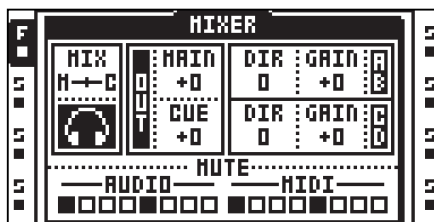

- Assign a Thru machine to track 1. Set **INAB** to A B. This will make the machine listen to input A/B, which is the input pair DJ deck 1 is connected to. Assign a Thru machine to track 5. Set **INCD** to C D. This will make the machine listen to input C/D, which is the input pair DJ deck 2 is connected to. Assigning Thru machines this way will make it easier to remember which DJ deck is connected to which track.
- Assign a Scene to Scene A by pressing **[SCENE A]** + a **[TRIG]** key. Assign a Scene to Scene B by pressing **[SCENE B]** + a **[TRIG]** key. We assume scene 1 was assigned to Scene A and scene 2 to Scene B.
- Select track 1 and press and hold **[SCENE A]**. Note how the **LEV** parameter changes to **XLV**. While keeping **[SCENE A]** pressed, turn the **LEVEL** knob so **XLV** is set to MAX. Release **[SCENE A]** and press and hold **[SCENE B]**. Turn the **LEVEL** knob so **XLV** is set to MIN.
- Select track 5 and press and hold **[SCENE A]**. While keeping **[SCENE A]** pressed, turn the **LEVEL** knob so **XLV** is set to MIN. Release **[SCENE A]** and press and hold **[SCENE B]**. Turn the **LEVEL** knob so **XLV** is set to MAX. When the crossfader is at its leftmost position only the audio from DJ deck 1 will be routed to the main outputs. When it is at its rightmost position only the audio from DJ deck 2 will be routed to the main outputs. Any other crossfader position will mix the audio from DJ deck 1 and 2.
- Select track 1. Place a trig on the first step of the sequencer. Do the same for track 5. Triggering the Thru machines is necessary for them to start passing through incoming audio.

8. Press **[PLAY]** to start playing the Octatrack and triggering the Thru machines. Set the crossfader to its leftmost position and start playing a song on DJ deck 1. The audio will be heard from the Octatrack main outputs.
9. When it is time to mix in a track from DJ deck 2, first press **[CUE] + [TRACK 5]** to cue listen to DJ deck 2 using the headphones. Adjust the playback of DJ deck 2 so both decks play in sync.
10. Un-cue DJ deck 2 by pressing **[CUE] + [AUDIO REC CD]** and move the crossfader to its rightmost position. The Octatrack will now mix between DJ deck 1 and 2.



Because Thru machines are used you can affect the DJ decks with track effects. For effects dependent on tempo, like the Echo Freeze Delay, tap the tempo of the Octatrack so it is in sync with the DJ deck currently playing.

Don't forget that it is possible to sample the DJ decks, even the one that is cued.

16.5 OCTATRACK AS A MIDI CONTROL CENTER


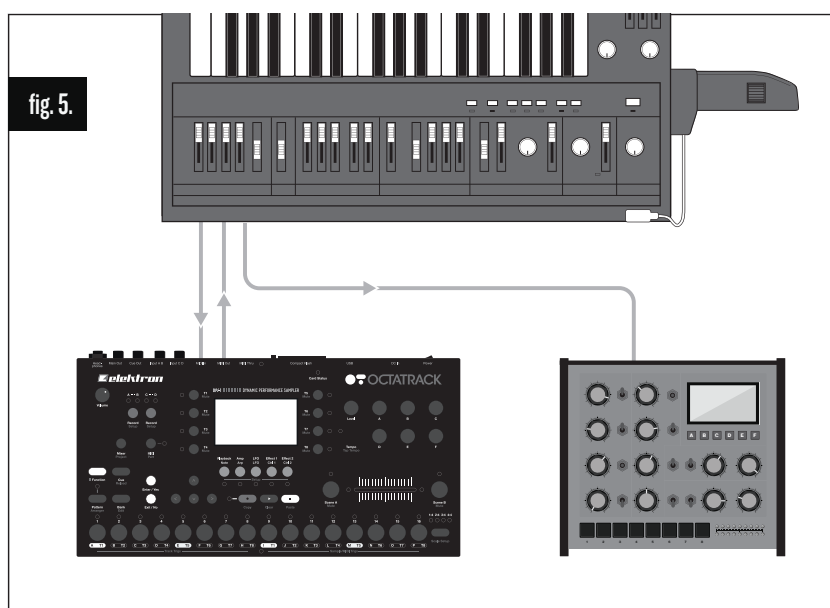


Fig 5. The MIDI OUT of an external synthesizer is connected to the Octatrack MIDI IN. The Octatrack MIDI OUT is connected to the MIDI IN of the synthesizer. A synth module is connected to the MIDI THRU of the synthesizer. The Octatrack can MIDI control both the synthesizer and the synth module. At the same time the keyboard of the synthesizer can be used to play Octatrack samples, play the synthesizer itself as well as the synth module.


16.5.1 MIDI CONTROL USING CC DIRECT CONNECT AND THE AUTO CHANNEL

By taking advantage of the CC DIRECT CONNECT feature, easier and more intuitive MIDI sequencing is possible. It allows the Octatrack MIDI sequencer to live record and parameter lock knob CC values of the synthesizer by turning the knobs directly on the synth itself.

1. Set the synthesizer so it receives MIDI data on MIDI channel 1. The synth module should listen to MIDI channel 2. The knobs of the synthesizer should be able to transmit MIDI CCs and the synth keyboard should be able to transmit MIDI note on/off messages. All synthesizer MIDI messages should be sent on channel 16. The synthesizer should be set to local off. The channel assignments can of course be made differently and are only used in this tutorial as a suggested MIDI setup.
2. Open the PROJECT menu by pressing **[FUNCTION] + [MIXER]**. Select CONTROL and MIDI SEQUENCER. Press **[ENTER/YES]**.
3. Make sure CC DIRECT CONNECT is activated.

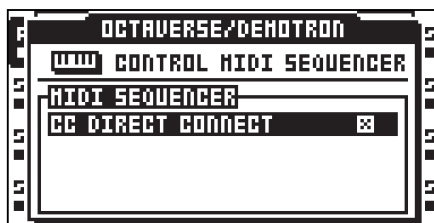

4. Exit the menu and open the PROJECT>MIDI>CHANNELS menu. Set the auto channel to 16. Now the active track, regardless if it is an audio or MIDI track, will always respond to messages sent on this channel.
5. Press **[MIDI]** to access the MIDI mode of the Octatrack.
6. Select track 1 and either double-tap the **[PLAYBACK]** key or press **[FUNCTION]** + **[PLAYBACK]** to open the NOTE SETUP page. Turn knob **A** to set **CHAN** to 1. Press the knob to confirm the choice. MIDI track 1 now sends out data on MIDI channel 1. This track will control the synthesizer.

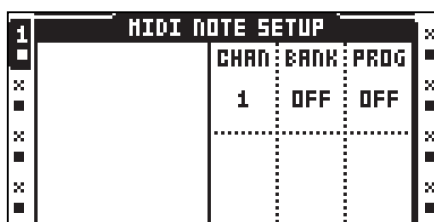

7. Repeat the procedure for MIDI track 2, but set the MIDI channel to 2. This track now controls the synth module.
8. Now it is time to set the CC messages that will be possible to record and lock by the Octatrack MIDI sequencer. In this tutorial the filter cutoff parameter of the synthesizer will be set so it is recordable by turning the cutoff knob of the synthesizer directly. Select track 1 and open the CTRL 1 SETUP menu by either double-tapping **[EFFECT 1]** or pressing **[FUNCTION]** + **[EFFECT 1]**.
9. To avoid having to assign the CC value of the cutoff knob of the synthesizer manually, the MIDI learn functionality can be used. Press **[FUNCTION]** + knob **C** to initiate the MIDI learn function.



10. Turn the cutoff knob of the synthesizer. That CC value will automatically be assigned to the CC1 SETUP parameter.
11. For track 2, the cutoff CC value of the synth module needs to be assigned manually. Open the CTRL 1 SETUP menu of track two, look up the CC value for the cutoff knob in the synth module manual and assign this value to the **CC1 SETUP** parameter.
12. The Octatrack can now sequence the two synths using the MIDI sequencer. When entering LIVE RECORDING mode, selecting track 1 and turning the cutoff knob of the synthesizer, the knob movements will be recorded by the Octatrack MIDI sequencer. Parameter locks can also be applied in the same way. Press and hold a **[TRIG]** key, turn the cutoff knob of the synthesizer and the chosen value will be locked to the step. It is of course also possible to sequence the cutoff knob by turning the **C** knob when the CTRL 1 MAIN page is active. To control the cutoff parameter of the synth module, select MIDI track 2, make the CTRL 1 page active and turn the **C** knob.

The keyboard of the synthesizer can now control both the audio tracks of the Octatrack as well as play melodies on both the synthesizer itself and the synth module. To make the synthesizer play itself, simply make MIDI track 1 active. Use the keyboard to play the synthesizer module by selecting MIDI track 2. Incoming notes from the keyboard can be real time recorded on the MIDI tracks when in LIVE RECORDING mode.

17. OCTATRACK TUTORIALS

The Octatrack is capable of many things. Here a few tutorials highlighting the most prominent features are presented.


17.1 TRACK RECORDER SAMPLING

With the Octatrack two main methods of track recorder sampling exist. Manual sampling is performed by manually pressing buttons, while recorder trig sampling samples using recorder trigs. Sampling is performed by the track recorders, covered in section “9. TRACK RECORDERS AND PICKUP MACHINES” on page 44.

17.1.1 MANUAL SAMPLING

Recording samples manually with the Octatrack is a straight forward process.

1. If you are sampling from the external inputs, make sure audio from an external device is being sent to the Octatrack inputs. The <AUDIO RECORD> LEDs indicate the strength of the signal sent to the inputs. If you hear sound but see no LED activity, try increasing the volume of the external audio by either increasing the **GAIN** parameter in the MIXER menu or by increasing the volume on the external device itself. If you don't hear any sound, make sure the **DIR** parameter in the MIXER menu is not set to zero.
2. Select the track whose recorder you want to use by pressing the relevant **[TRACK]** button.
3. If you want to make detailed source settings, open up the RECORDING SETUP 1 menu by pressing **[FUNCTION] + [AUDIO RECORD AB]**. Select from which source or sources the recorder should sample from by setting **INAB**, **INCD** and **SRC3** as needed. If needed, make **RLEN** and **TRIG** settings. This step is however not necessary to start sampling.

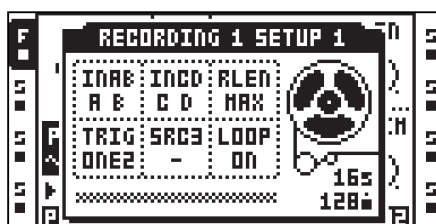

4. To sample from input A/B, press the **[TRACK] + [AUDIO REC AB]** buttons. Depending on the **INAB** setting the recorder will sample from either input A, B, A/B or nothing at all.

To sample from input C/D, press the **[TRACK] + [AUDIO REC CD]** buttons. Depending on the **INCD** setting the recorder will sample from either input C, D, C/D or nothing at all.

To sample internal sounds, press the **[TRACK] + [MIDI]** buttons. The recorder will, depending on the **SRC3** setting, sample either the main output mix, the cue output mix, an audio track or nothing at all.




In the RECORDING SETUP 2 menu, the **FIN** and **FOUT** parameters are found. By setting these parameters to their lowest values, a very short fade will be applied to the beginning and the end of the sample. This helps to avoid unwanted clicks and pops when the recorded sample loops.

17.1.2 SAMPLING USING RECORDER TRIGS

The use of recorder trigs offers a considerably more powerful method of sampling. They offer automated sampling. To use recorder trigs when sampling, please follow these steps.

1. If you are sampling from the external inputs, make sure audio from an external device is being sent to the Octatrack inputs. The <AUDIO RECORD> LEDs indicate the strength of the signal sent to the inputs. If you hear sound but see no LED activity, try increasing the volume of the external audio by either increasing the **GAIN** parameter in the MIXER menu or by increasing the volume on the external device itself. If you don't hear any sound, make sure the **DIR** parameter in the MIXER menu is not set to zero.
2. Select the track whose recorder you want to use by pressing the relevant **[TRACK]** button.
3. Open up the RECORD SETUP 1 menu by pressing **[FUNCTION] + [AUDIO RECORD AB]** buttons.
4. Select from which source or sources the recorder should sample from by setting **INAB**, **INCD** and **SRC3** as needed. If needed, make **RLEN** and **TRIG** settings.

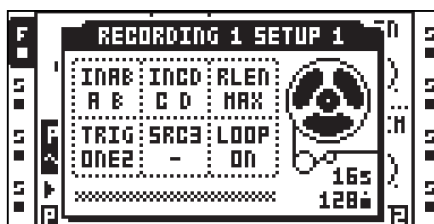

5. Make sure GRID RECORDING mode is active. If not, press **[REC]** to activate it. Place out a recorder trig by pressing a **[TRIG]** button. Note that the sequencer while in the RECORD SETUP menus only reflects recorder trigs.
A recorder trig defaults to sampling from all input sources. When in the RECORDING SETUP 1 menu, the source a recorder trig samples from can be seen by pressing the **[TRIG]** key of the recorder trig. The activated sources are indicated by inverted graphics in the LCD and by lit <AUDIO RECORD> and <MIDI> LEDs. Deactivate a recording source by pressing **[TRIG] + [AUDIO RECORD AB]/[AUDIO RECORD CD]/[MIDI]**.
6. Press **[PLAY]** to start the playback of the sequencer. Once a record trig has been triggered by the sequencer the track recorder will start to sample.



Recorder trigs can be turned into one shot recorder trigs. They trig sampling only once, which can be very useful when for example sampling live and not wanting to have to remove a recorder trig once it has initiated sampling. One shot recorder trigs are entered by pressing **[FUNCTION] + [TRIG]** and are indicated by yellow <TRIG> LEDs. Read more about one shot recorder trigs in section “9.2.2 RECORDER TRIG SAMPLING” on page 48.

17.1.3 PLAYBACK OF CAPTURED RECORDER SAMPLES


The samples captured by the track recorders are stored in the recorder buffers located in the Flex sample slot list. A sample located in a recorder buffer functions just like a Flex sample.

1. To assign a recorder buffer to a track, follow the instructions how to assign a sample to a machine covered in section “11.3 ASSIGNING FLEX AND STATIC SAMPLES TO MACHINES” on page 56.
The eight recorder buffers are located above the first Flex sample in the Flex sample slot list. Press the **[UP]** arrow key to access them.
2. Any recorder buffer can be assigned to any track. To make it easier to remember the recorder buffer track assignments, it is recommended to assign the recorder buffer to the track whose track recorder will be used when sampling. For example, if the track recorder 1 should be used, assign recorder buffer 1 to track 1.

17.1.4 PICKUP MACHINE SAMPLING


Pickup machine sampling are conducted by using Pickup machines. These machines essentially work as looper devices, allowing for loop based jamming and experimentation. In this tutorial two Pickup machines will be used to sample a synth connected to input AB.

1. Begin by assigning a Pickup machine to track 1. Double tap the **[TRACK 1]** key and select the Pickup machine option.
2. Assign a Pickup machine to track 2 as well.
3. Next, set up what - and how - the Pickup machines should sample. Select track 1 and press **[FUNCTION] + [AUDIO REC AB]** to open RECORDING SETUP MENU 1.
4. Set **INAB** to A B, **INCD** to -, **RLEN** to MAX, **TRIG** to ONE2, **SRC3** to - and **LOOP** to ON. By eliminating audio inputs CD and the internal tracks as sampling sources, the risk for accidentally sampling the wrong source is reduced.

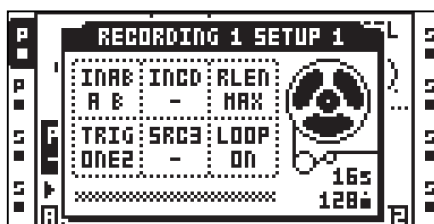


5. Press **[FUNCTION] + [AUDIO REC CD]** to open RECORDING SETUP MENU 2. Set **FIN** to 0.063 and **FOUT** to 0.063. This will add a very short fade in and out to the loop to be recorded, reducing the risk


of experiencing clicks and pops when the sample loops. **AB** should be set to 127. This will enable direct monitoring of the input pair AB when the Pickup machine is active. **QREC** and **QPL** should be set to OFF. Press **[EXIT/NO]** to exit the menu.

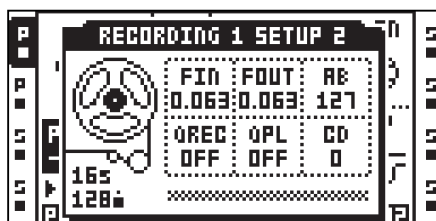

6. Select track 2 and make the exact same settings as above in both RECORDING SETUP menus. When done, press **[EXIT/NO]** to exit.
7. Press **[PLAYBACK]** to open the PLAYBACK MAIN menu of the Pickup machine assigned to track 2. Set **LEN** to X2. This Pickup machine will record the slave loop, which now will be twice the length of the master loop. Make sure **PTCH** is set to 0, **DIR** to FWD, **GAIN** to 0 and **OP** to DUB.

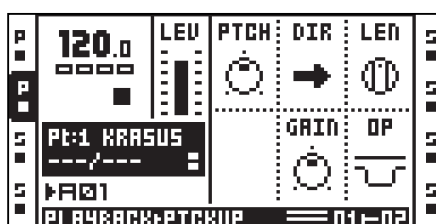

8. Press the **[TRACK 1]** key to access the PLAYBACK MAIN menu of the Pickup machine assigned to track 1. Set **PTCH** to 0, **DIR** to FWD, **GAIN** to 0 and **OP** to DUB. As this Pickup machine will be used to capture the master loop, the LEN parameter will no function and can thus be set to any value, preferably to OFF.

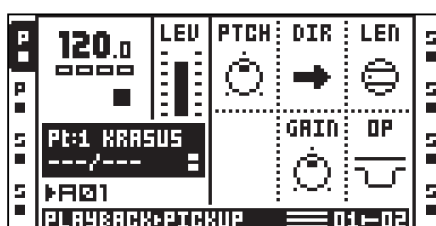

9. Play the synth.
10. Press **[AUDIO REC AB]** to start sampling with the Pickup machine of track 1. Press **[AUDIO REC CD]** to stop recording. The recorded sample will start to loop. Add overdubs by pressing **[AUDIO REC AB]**, exit overdub mode by pressing **[AUDIO REC CD]**. If not satisfied with the loop, press **[AUDIO REC CD]** while in playback mode to stop the playback. Then initiate sampling again by pressing **[AUDIO REC AB]**. Once a loop has been recorded, note how the BPM of the Octatrack will change to the BPM of the recorded loop.
11. Press **[TRACK 2]** to make the Pickup machine of track 2 active. Record a new loop, which automatically will be twice the length of the original loop, by following the instructions outlined in the step above.



Reverse a recorded loop by setting **DIR** to REV. If **DIR** is set to PIPO, the loop will play in a ping pong fashion.

Use a MIDI foot pedal connected to the Octatrack for foot control of the Pickup machines. See the NOTE MAPPINGS chart, for information about which notes the Pickup machines respond to. For more information, please see section "APPENDIX C: MIDI CONTROL REFERENCE" on page 136.

17.1.5 CONTROLLING THE PICK UP MACHINES WITH A MIDI FOOT CONTROLLER


Using a MIDI foot controller to control the Pickup machines is great when using the Octatrack in a hands-free way. In this tutorial we assume we are going to sample a guitar connected to input A.

1. Connect the MIDI OUT of the foot controller to the MIDI IN of the Octatrack.
2. Make sure the foot controller sends MIDI messages on the Octatrack auto channel.

3. Assign Pickup machines to track 1 and 2.
4. Open the RECORDING SETUP 1 menu by selecting track 1 and pressing **[FUNCTION] + [AUDIO REC AB]**.
5. Set **INAB** to A, **INCD** to -, **RLEN** to MAX, **TRIG** to ONE2, **SRC3** to - and **LOOP** to ON.



6. Open the RECORDING SETUP 2 menu **[FUNCTION] + [AUDIO REC CD]**. Set **FIN** to 0.063, **FOUT** to 0.063, **AB** to 127, **QREC** to OFF, **QPL** to OFF and **CD** to 0.

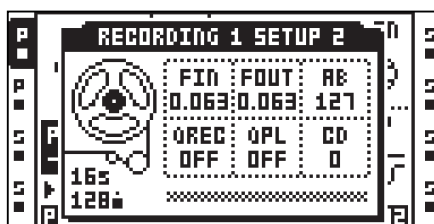

7. Make the same settings for the Pickup machine on track 2.
8. On the foot controller, five pedals are going to be used. Set pedal 1 so it transmits MIDI note 60, a C note. This will initiate the combo recording, meaning the Pickup machine will sample from both input pairs as well as the internal source. As **INCD** and **SRC3** has both has been set to -, only audio from input pair AB will be recorded. Pedal 1 thus fills the same function as the **[AUDIO REC AB]** key does when controlling the Pickup machine from the Octatrack panel.
9. Pedal 2 should transmit MIDI note 64, an E note. This will toggle between Pickup machine play and stop. This pedal fills the same function as the **[AUDIO REC CD]** key does when controlling the Pickup machine from the Octatrack panel.
10. Set pedal 3 so it transmits MIDI note 71, a B note. This will sync the sequencer to the active Pickup machine and make the sequencer start playing once the synced loop starts over again.
11. Set pedal 4 so it transmits MIDI note 69, an A note. This will move the focus of the active track to the previous track. If for example track 2 is active, pressing this pedal will make track 1 active.
12. Set pedal 5 so it transmits MIDI note 68, a G# note. This will move the focus of the active track to the next track. If for example track 2 is active, pressing this pedal will make track 3 active.
13. Make sure track 1 is active. Play the guitar.
14. Now you can initiate Pickup machine sampling by pressing pedal 1. Press pedal 2 to stop sampling. The recorded sample will at the same time start looping. Move to track 2 by pressing pedal 5. Move back to track 1 by pressing pedal 4. If you want to sync the Octatrack sequencer to a Pickup machine loop and make it start playing the next time the loop starts over, press pedal 3.



MIDI CCs can be used instead of MIDI notes when working with Pickup machines. If the foot pedal only sends out MIDI CCs, send CC 59 to the autochannel. That CC message will be interpreted as a note on command by the Octatrack. The CC values correspond to MIDI notes. To initiate for example combo recording, send CC 59 with a value of 60.


17.2 LOOP REMIXING

Remixing loops is easy and rewarding. The tutorial assumes the set and project found on the bundled Compact Flash card is loaded. See "MOUNTING A SET AND LOADING A PROJECT" on page 17 for more information on how to load this set and project. This is of course not necessary as any sample can be used.

17.2.1 LOOP REMIXING USING SLICES

1. Make sure pattern A01 is loaded. Mute all tracks except track 1, containing the Flex sample ACDRUM. Select track 1 by pressing the corresponding **[TRACK]** key.
2. Press **[FUNCTION] + [PATTERN PAGE]** to open the SCALE SETUP menu. Set the track length to 16/16.

3. Activate the GRID RECORDING mode by pressing [REC]. Make sure the <REC> LED lights up. Then press [FUNCTION] + [PLAY] to clear all trigs of the track.
4. Place out new sample trigs on every step of the sequencer. Step 1, 2, 3 and so on.
5. Double press the [PLAYBACK] key to open the PLAYBACK SETUP menu. Set **SLIC** to ON. This will activate the slice playback functionality.

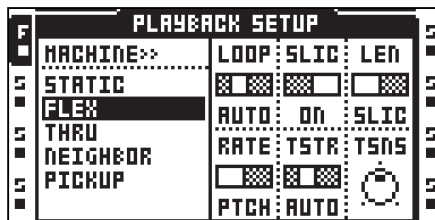


6. Press [TRACK 1] + [BANK] to open the sample in the audio editor. Open the TRIM menu by pressing the [PLAYBACK] key. Make sure the start point is located at the absolute beginning of the sample and the end point at the absolute end.
7. Open the SLICE menu by pressing the [AMP] key. Press [ENTER/YES] to open the SLICE EDIT menu. Select CREATE SLICE GRID and press [ENTER/YES]. Select 16 SLICES and press [ENTER/YES]. The drum loop will be divided in 16 slices.



8. Press [ENTER/YES] to open the SLICE EDIT menu once again. Select CREATE RANDOM LOCKS and press [ENTER/YES]. The prompt "ALTER TRIGS? SURE?" appears. Press [ENTER/YES] to proceed with randomizing the locks. The sample trigs will now play back the slices of the loop randomly.
9. Press [PLAY] to listen to the result. If you are not satisfied, repeat the CREATE RANDOM LOCKS command until a rhythm you like has been created.

17.2.2 LOOP REMIXING USING THE CROSSFADER

1. Make sure pattern A01 is loaded. Mute all tracks except track 1, containing the Flex sample ACDRUM. Select track 1 by pressing the corresponding [TRACK] key.
2. Press [FUNCTION] + [PATTERN PAGE] to open the SCALE SETUP menu. Set the track length to 16/16.
3. Activate the GRID RECORDING mode by pressing [REC]. Make sure the <REC> LED lights up. Then press [FUNCTION] + [PLAY] to clear all trigs of the track.
4. Place out new sample trigs on every step of the sequencer. Step 1, 2, 3, 4, 5 and so on.
5. Double press the [PLAYBACK] key to open the PLAYBACK SETUP menu. Set **SLIC** to ON. This will make the **STRT** parameter select between any available slices.

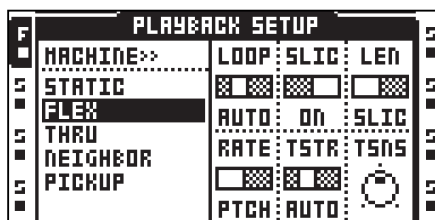

6. Press [TRACK 1] + [BANK] to open the sample in the audio editor. Open the SLICE menu by pressing the [AMP] key.
7. Press [ENTER/YES] to open the slice open the SLICE EDIT menu. Select CREATE SLICE GRID and press [ENTER/YES]. Select 16 SLICES and press [ENTER/YES]. The drum loop will be divided in 16 slices.



8. Press **[EXIT/NO]** exit the audio editor.
9. Press and hold **[SCENE A]** and press a **[TRIG]** key to assign a scene. The scene should be empty and we assume scene 1 was assigned. Do the same for Scene slot B. We assume scene 2 was assigned.
10. Access the **PLAYBACK MAIN** menu by pressing **[PLAYBACK]**. Press and hold **[SCENE A]** and set the **STRT** parameter, found in the **PLAYBACK MAIN** menu, to SL1. Then press and hold **[SCENE B]** and set the **STRT** parameter to SL16. The crossfader will now interpolate between the first slice and the last slice of the loop.
11. Press **[PLAY]** to start the Octatrack sequencer. Move the crossfader in various ways to create new rhythms.


17.3 PREPARING LOOPS AND SAMPLES

To make a sample stay in sync when the BPM of the Octatrack is changed its original BPM of the sample must be set correctly. To make it easier to sync the sample, its start point should also be placed at a relevant position. This tutorial is a guide for how to do it "by the book". Once you know the rules we encourage you to break them. Experiment with assigning other BPMs than the original to samples and use start points creatively.

1. Load a Flex or Static machine to a track. Load a drum loop sample to the machine. We assume the sample has a 4/4 time signature. Mute all other tracks.
2. Double click **[PLAYBACK]** to open the **PLAYBACK SETUP** menu. Set **TSTR** to OFF. Time stretch for the track has now been turned off and will therefore not affect the sample.
3. Press **[REC]** and place a sample trig on the first step of the step sequencer.
4. Press **[FUNCTION] + [PATTERN PAGE]** to open the **SCALE SETUP** menu. Set the scale to 16/16. Press **[EXIT/NO]** to exit the menu.
5. Press **[TRACK] + [BANK]** to open the sample in the audio editor. Press **[PLAYBACK]** to open the **TRIM** menu. Use the **F** knob to zoom in on the sample and set the start point with the knob **A**. A good position would be right before the downbeat. Press **[FUNCTION] + [ENTER/YES]** to preview the sample from the start point.



6. Press **[PLAY]** to start the sequencer of the Octatrack.
7. Press **[TEMPO]** to open the **TEMPO** menu. Turn the **LEVEL** knob to adjust the tempo. Once the sample loops seamlessly you know that this BPM is the original tempo of the sample.

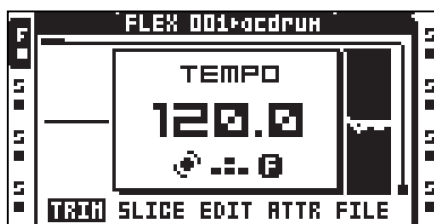

8. Exit the **TEMPO** menu by pressing **[EXIT/NO]**. Press **[EFFECT 1]** to open the **ATTRIBUTES** menu in the audio editor. Select **ORIGINAL TEMPO** and set it to the current Octatrack BPM. Depending on the character of the sample, make sure **TIMESTRETCH** is set to either **NORMAL** or **BEATS**.



9. Press **[EXIT/NO]** to exit the audio editor. In the **PLAYBACK SETUP** menu, set **TSTR** to **AUTO**. No matter the BPM of the Octatrack sequencer, the loop will now be time stretched or time compressed accordingly and thus stay in sync.




To permanently link the start point and **ORIGINAL TEMPO** settings to the sample, use the **SAVE SAMPLE SETTINGS** command found in the **FILE** menu.

17.4 THE OCTATRACK AS A DJ DECK

The Octatrack can function as a complete DJ setup, eliminating the need for both DJ decks and a DJ mixer.

1. Connect a pair of headphones to the Octatrack headphones output.
2. Double press **[TRACK 1]** to open the **QUICK ASSIGN** menu. Assign a Static machine to track 1. Press **[TRACK 5]** and assign a Static machine to track 5. This makes it easier to remember where the different tracks you are going to mix between are located. The left block of tracks could be said to represent one DJ deck and the right track block another. Make sure none of the tracks contain any trigs.
3. Double-click either **[TRACK 1]** or **[TRACK 5]** to open the Static sample slot list. Select an empty sample slot and press **[ENTER/YES]** to open the file browser. Select a long sample, preferably a complete song, and press **[ENTER/YES]** to load it to the sample slot. Load three or four songs to the Static sample slot list.
4. Prepare the songs as described in the tutorial “PREPARING LOOPS AND SAMPLES” on page 136. This will time stretch or time compress them so they play in sync with Octatrack BPM.
5. Double-click **[TRACK 1]** to open the Static sample slot list. Assign one of the songs to the Static machine of track 1. Press **[TRACK 5]** and assign another song to the Static machine of track 5.
6. Press **[MIXER]** to open the **MIXER** menu. Make sure **MIX** is set so a cue signal will be audible once a track is cued.

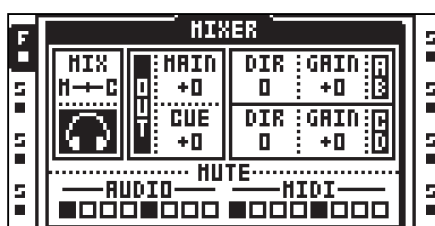

7. Assign a Scene to Scene A by pressing **[SCENE A]** + a **[TRIG]** key. Assign a Scene to Scene B by pressing **[SCENE B]** + a **[TRIG]** key. We assume scene 1 was assigned to Scene A and scene 2 to Scene B.
8. Select track 1 and press and hold **[SCENE A]**. Note how the **LEV** parameter changes to **XLV**. While keeping **[SCENE A]** pressed, turn the **LEVEL** knob so **XLV** is set to **MAX**. Release **[SCENE A]** and press and hold **[SCENE B]**. Turn the **LEVEL** knob so **XLV** is set to **MIN**.
9. Select track 5 and press and hold **[SCENE A]**. While keeping **[SCENE A]** pressed, turn the **LEVEL** knob so **XLV** is set to **MIN**. Release **[SCENE A]** and press and hold **[SCENE B]**. Turn the **LEVEL** knob so **XLV** is set to **MAX**. When the crossfader is at its leftmost position only the audio from track 1 will be routed to the main outputs. When it is at its rightmost position only the audio from track 2 will be routed to the main outputs. Any other crossfader position will mix the between the audio of the tracks.
10. Set the crossfader to its leftmost position. Make sure **GRID RECORDING** mode is not active and press **[TRIG 9]** to trig the machine of track 1. The sample assigned to the machine will start playing through the main outputs.
11. Press **[CUE]** + **[TRACK 5]** to cue listen to the other song using the headphones. When it is time to mix in song 2, first trig it by pressing **[TRIG 13]** at the downbeat of song 1. Then slide the crossfader from left to right. Song 2 will now be heard, mixed in sync with song 1. Press **[CUE]** + **[TRACK 5]** to de-cue song 2.

12. Assign a new sample to the Static machine of track 1. Press **[CUE] + [TRACK 1]** to cue the new song. Trig it by pressing **[TRIG 9]** at the downbeat of song 2. Slide the crossfader from right to left to mix in the new song.




Prepare a DJ set by loading a lot of songs to the Static sample slot list. The songs should be prepared according to the tutorial “17.3 PREPARING LOOPS AND SAMPLES” on page 108. This will make it easy to mix between songs.

Use the track effects to make for example filter sweep transitions when mixing between two songs.

17.5 THE OCTATRACK AS AN EFFECTS PROCESSOR

The Neighbor machines offer the possibility to chain tracks. As the sound from the first track in the chain will be routed through the rest of the chained tracks and their respective track effects, very powerful effects chains can be formed. In this example an external sound source will be affected by up to eight track effects.

1. Connect an external sound source to input pair AB of the Octatrack. Make sure the <AUDIO RECORD> LEDs indicate an audio signal is being sent to the input pair.
2. Open the MIXER menu by pressing **[MIXER]**. Make sure **DIR** for AB and CD is set to 0. This will make incoming sound available to only Thru machines.

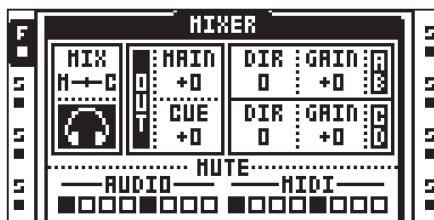

3. Double-click **[TRACK 1]** to open the QUICK ASSIGN menu. Assign a Thru machine to track 1. In the PLAYBACK MAIN menu, set **INAB** to A B. This will make the machine listen to input pair AB.
4. Double click **[TRACK 2]** and assign a Neighbor machine to track 2. Do the same for track 3 and 4.
5. Select track 1. Double press **[EFFECT 1]**, select an effect from the list and assign it to the track by pressing **[ENTER/YES]**. Assign an effect to the second track effect block as well. Repeat the procedure for track 2, 3 and 4. An effects chain has now been created.
6. Select track 1, press **[REC]** to enter GRID RECORDING mode and place a trig on the first step of the sequencer. Triggering the Thru machine is necessary for it to start passing through incoming audio.
7. Press **[PLAY]**. The external sound, shaped by the track effects, should now be heard from the Octatrack main outputs.



Use scenes and the crossfader to control multiple effects parameters in real time. Add parameter locks for rhythmical effect applications.

For strange and interesting results, remove the Thru machine from track 1 and instead assign a Flex machine to which recorder buffer 1 is loaded. Open one of the RECORDING SETUP menus and place some recorder trigs on the sequencer. Make sure the trigs record from input AB. Trig the recorder buffer by placing sample trigs on track 1. Parameter lock the sample trigs so the recorded audio is pitched up or down, is affected by effects in various ways et cetera. Use the LFOs to further modulate the track parameters. Press **[PLAY]** to enjoy automated real-time sampling and extensive audio manipulation.

18. EARLY STARTUP MENU

To access this menu, hold down the **[FUNCTION]** key while powering up the Octatrack. From here you can perform a variety of tasks. To choose the different alternatives, press the corresponding **[TRIG]** key.

```
OCTATRACK MENU
1 . . TESTMODE
2 . . EMPTY RESET
3 . . MIDI UPGRADE
4 . . SEND UPGRADE
5 . . EXIT
```

18.1 TEST MODE

To enter this mode, press the first **[TRIG]** key. If you have any trouble with your Octatrack and suspect it may be due to a hardware problem, perform this self test. Everything should come up as shown below. If not, contact Elektron support or the retailer you bought the Octatrack from.

```
FUNCTION TEST
DRAM: [*] SRAM: [*]
USB ULP1: [OK]
ATA: [OK]
RTC: [OK]
CODEC: [OK]
DSP: C0 [OK] C1 [OK]
BATTERY: [OK]
```

18.2 EMPTY RESET

To perform this operation, press the second **[TRIG]** key. This will reinitialize the battery backed RAM and clear all data. The content of the Compact Flash card will not be affected.

18.3 MIDI UPGRADE

By choosing this option, the Octatrack prepares itself to receive an OS upgrade via MIDI.

1. Check that all MIDI cables are connected correctly.
2. Load the new OS in an appropriate program capable of sending sysex files. We recommend the program C6 which can be found on the Elektron website.
3. Choose MIDI UPGRADE by pressing the third **[TRIG]** key. The Octatrack will wait for the OS to be transmitted to it and a message stating "READY TO RECEIVE MIDI UPGRADE..." will appear on the screen.
4. As the Octatrack receives the OS the <TRIG> LEDs will light up one after another. Please note that this procedure takes a while.
5. When the transfer is finished the message "PREPARING FLASH" appears.
6. "PREPARING FLASH" is shortly followed by "UPDATING FLASH". When this process is finished the OS is updated. After the upgrade the operating system may upgrade the bootstrap, **do not turn off the unit** before it has completed its startup sequence or explicitly tells you to restart!

18.4 SEND UPGRADE

With this option you can send the OS installed in your Octatrack to a friend's unit.

1. Connect the MIDI OUT on the Octatrack with the latest OS to the MIDI IN on the Octatrack that is going to be upgraded. Enter the EARLY STARTUP menus on both machines.
2. Enter the MIDI UPGRADE mode in the Octatrack that is supposed to be upgraded by pressing the third **[TRIG]** key. Make sure you see the message "READY TO RECEIVE MIDI UPGRADE..." on the screen.
3. Press the fourth **[TRIG]** key on the Octatrack that is used to send the OS upgrade. This will start the transmission of the OS to the other Octatrack.



For faster OS updates, utilize the speed of the Elektron TurboCharge protocol. You will need to have the MIDI IN port of the receiving machine connected to the MIDI OUT port of the transmitting machine and vice versa for this to function.

The most convenient way of upgrading the OS is by updating from the Compact Flash card. This is performed in the OS UPDATE menu. Read more about this menu in the section “8.5 SYSTEM” on page 32.

19. SUMMARY OF BUTTON COMBINATIONS

[AUDIO RECORD AB/CD] + [BANK] will open the recorder buffer, corresponding to the active track, in the audio editor.

[BANK] + [TRIG] will select the active bank.

[CUE] + [ENTER/YES] will preview the selected sample through the cue outputs while in the audio editor, the Flex or Static sample slot lists or the file browser.

[CUE] + [AUDIO RECORD AB/CD] will cue the chosen audio input.

[CUE] + [TRACK] will cue the chosen track.

[CUE] + [TEMPO] will toggle the metronome on/off.

[CUE] + **LEVEL** will set the cue level of a track.

[EXIT/NO] + [TRACK] will in LIVE RECORDING mode erase trigs on the track.

[EXIT/NO] + KNOB push will in LIVE RECORDING mode erase parameter locks on the track.

[FUNCTION] + [AUDIO RECORD AB/CD] will open the RECORDING SETUP menus.

[FUNCTION] + [BANK] will depending on the currently active menu or mode open various menus. If GRID RECORDING mode is active the TRACK TRIG menu will be opened. If GRID RECORDING mode is not active the PATTERN SETTINGS menu will be opened. If the QUICK ASSIGN or PLAYBACK SETUP menus are active the selected sample will be opened in the audio editor. If the ARRANGER mode is active various options will be accessed. If the PARTS menu is active, various options for the parts will be accessed.

[FUNCTION] + [CUE] will reload the active part to its saved settings.

[FUNCTION] + [MIXER] will open the PROJECT menu.

[FUNCTION] + [MIDI] will open the PARTS menu.

[FUNCTION] + [TRACK] will mute the chosen track.

[FUNCTION] + [PATTERN] will open the ARRANGER menu.

[FUNCTION] + [TRACK PARAMETER] will open the SETUP menus of the TRACK PARAMETER pages.

[FUNCTION] + [SCENE A/B] will mute scene A or scene B.

[FUNCTION] + [PATTERN PAGE] will open the SCALE SETUP menu.

[FUNCTION] + [TRIG] will place trigless locks and one shot trigs on the sequencer when GRID RECORDING mode is active.

[FUNCTION] + [TRIG 9.16] will when no RECORDING mode is activated manually trig trigless trigs instead of sample trigs. This is only relevant when TRACKS or CHROMATIC trig mode is active.

[FUNCTION] + [TEMPO] makes it possible, through repeating [TEMPO] button presses, to tap the BPM of the sequencer.

[FUNCTION] + [REC] will perform a copy command. The content that will be copied depends on the currently active menu or mode of the Octatrack.

[FUNCTION] + [PLAY] will perform a clear command. The content that will be cleared depends on the currently active menu or mode of the Octatrack.

[FUNCTION] + [STOP] will perform a paste command. The content that will be pasted depends on the content that was copied.

[FUNCTION] + [UP]/[DOWN] will increase the scrolling speed in various menu lists.

[FUNCTION] + [UP]/[DOWN] will when no scrollable menu is active change the active TRIG mode.

[FUNCTION] + [LEFT]/[RIGHT] will while in GRID RECORDING mode nudge trigs back or forth one step.

[FUNCTION] + [ENTER/YES] will preview the selected sample through the main outputs while in the audio editor, the Flex or Static sample slot lists or the file browser.

[FUNCTION] + [EXIT/NO] will for as long as held remove all parameter locks from the active track while in LIVE RECORDING mode.

[FUNCTION] + **LEVEL** will adjust the MAIN parameter of the MIXER menu.

[PATTERN] + [TRIG] will select the active pattern.

[PATTERN PAGE] + [REC] will copy the active pattern page.

[PATTERN PAGE] + [PLAY] will clear the active pattern page.

[PATTERN PAGE] + [STOP] will paste a copied pattern page to the active pattern page.

[SCENE A/B] + [TRIG] will assign a scene to the selected scene slot.

[TRACK] + [PLAY] will trig the sample assigned to the machine of the track.

[TRACK] + [STOP] will stop playback of the sample assigned to the machine of the track.

[TRACK] + [BANK] will open the sample assigned to the track in the audio editor.

[TRACK] + [AUDIO RECORD AB/CD] will initiate sampling from the audio inputs.

[TRACK] + [MIDI] will initiate sampling of the audio tracks.

[TRACK] + [ENTER/YES] will re-arm any one shot recorder trigs of the track whose [TRACK] key was pressed.

[TRACK] + [EXIT/NO] will disarm any one shot recorder trigs of the track whose [TRACK] key was pressed.

[TRACK] + [LEFT]/[RIGHT] will nudge the BPM of the sample of the track.

[TRACK PARAMETER] + [REC] will copy the parameter settings of a TRACK PARAMETER page.

[TRACK PARAMETER] + [STOP] will paste the copied parameter settings of a TRACK PARAMETER page.

[TRACK PARAMETER] + [PLAY] will initialize the settings of a TRACK PARAMETER page.

[SCENE] + [REC] will copy the assigned scene.

[SCENE] + [PLAY] will clear the assigned scene.

[SCENE] + [STOP] will paste a copied scene to the scene assigned to the scene slot.

[TRIG] + [ENTER/YES] will turn a trigless lock into a trigless trig.

[TRIG] + [EXIT/NO] will turn a sample trig to a trigless trig. A trigless trig will be turned to a trigless lock.

[TRIG] + [UP]/[DOWN] will, while in GRID RECORDING mode, open the SAMPLE LOCK menu.

[TRIG] + [LEFT]/[RIGHT] will while in GRID RECORDING mode open the MICRO TIMING menu.

[TRIG] + [REC] will copy the selected trig.

[TRIG] + [PLAY] will clear all parameter locks from the selected trig.

[TRIG] + [STOP] will paste a previously copied trig.

20. TECHNICAL INFORMATION

SPECIFICATIONS

ELECTRICAL SPECIFICATIONS

Impedance balanced audio outputs:
 Headphones out **LEVEL**: +15 dBu
 Main/cue outputs **LEVEL**: +10 dBu
 Output impedance: 560 Ω unbalanced
 S/N ratio: 102 dBFS (20-20.000 Hz)
 Unbalanced audio inputs:
 Input **LEVEL**: +8 dBu maximum
 Audio input impedance: 9 k Ω
 SNR inputs: 99 dBFS (20-20.000 Hz)
 Unit power consumption: 8 W typical, 18 W maximum.
 Recommended power supply: 6 V DC, 3 A

HARDWARE

128x64 pixel backlit LCD
 MIDI In/Out/Thru
 4 x 1/4" impedance balanced audio out jacks
 4 x 1/4" audio in jacks
 1 x 1/4" stereo headphone jack
 Advanced dual DSP system
 44.1kHz, 24-bit D/A and A/D converters
 Flash-EEPROM upgradable OS
 USB 2.0 port
 Compact Flash card reader
 Infinium optical crossfader

PHYSICAL SPECIFICATIONS

Steel casing
 Dimensions: W340xD181xH63mm (including knobs, jacks and rubber feet)
 Weight: approximately 2.4 kg

POWER SUPPLY (PSU-2) ELECTRICAL SPECIFICATIONS

Input voltage range: 100-240V (43-60Hz)
 Input connector: IEC320-C8 (2 prong)
 In-rush current: 50A maximum
 Output voltage: 5.7-6.3V DC
 Output current: 3.5A maximum
 Output connector: 5.5x2.5mm DC plug, power at center

21. CREDITS AND CONTACT INFORMATION

CREDITS

PRODUCT DESIGN AND DEVELOPMENT

Oscar Albinsson
 Magnus Forsell
 Anders Gärder
 Jimmy Myhrman
 Jon Mårtensson
 David Revelj
 Daniel Troberg

ADDITIONAL DESIGN

Thomas Ekelund
 Jesper Kouthoofd

FACTORY DEFAULT SOUND DESIGN

Thomas Ekelund
 Jesper Kouthoofd

DOCUMENTATION

Thomas Ekelund
 Jon Mårtensson
 Erik Ångman

CONTACT INFORMATION

ELEKTRON WEBSITE

<http://www.elektron.se>

OFFICE ADDRESS

Elektron Music Machines MAV AB
 Sockerbruket 9
 SE-414 51 Gothenburg
 Sweden

TELEPHONE

+46 (0)31 743 744 0


APPENDIX A: MACHINE REFERENCE

In this appendix, the Octatrack machines are explained. The individual machine parameters are presented for reference.

A.1 THRU MACHINE

Thru machines are utility machines, very handy in live setups when using the Octatrack to re-route and affect external audio signals. Thru tracks need to be triggered for them to start passing through sound. Thru machine playback can be stopped by pressing [TRACK] + [STOP].

THRU MAIN

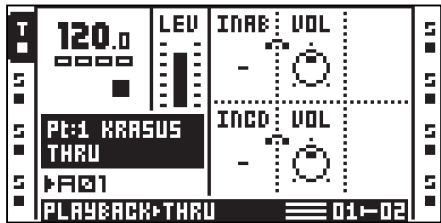


INAB sets how input pair AB should be listened to.

VOL sets the volume of the signal coming from the input or inputs chosen by the **INAB** setting. The max setting will boost it by +12 dB. The min setting will mute it.

INCD sets how input pair CD should be listened to.

VOL sets the volume of the signal coming from the input or inputs chosen by the **INCD** setting. The max setting will boost it by +12 dB. The min setting will mute it.

THRU SETUP

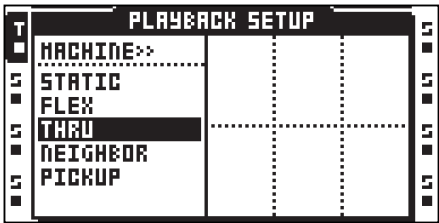


No setup parameters are available.

A.2 FLEX MACHINE

Flex machines offer the most extensive sound manipulation possibilities. A sample used by a Flex machine is loaded to the RAM memory of the Octatrack. From there it can be twisted, stretched and reassembled in multiple ways. Flex machines are unbeatable sound processors.

FLEX MAIN

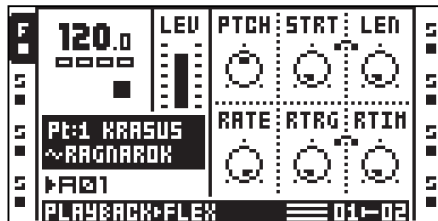

PTCH adjusts the pitch of the sample. The max setting pitches the sample up an octave, a min setting pitches the sample down an octave. Integer changes are equivalent to semitones.

STRT controls the start point of the sample in a linear fashion. If the sample contains slices, and the **SLIC** parameter in the FLEX SETUP menu is set to ON, this parameter selects between the slices. **STRT** values exceeding the number of actual sample slices will select the last sample slice.


LEN controls the length of the sample or slice. The behavior is controlled by the **LEN** parameter found in the FLEX SETUP menu.

RATE adjusts the playback speed. It shifts behavior depending on the **RATE** setting found in the FLEX SETUP page. When set to 0 the sample won't be played back at all. Negative values make the sample play backwards.

RTRG sets the number of retrigs that should occur when a note is triggered.

RTIM sets the time between each retrigger. The time is relative to the tempo and is expressed in values relating to the amount of steps of the sequencer.

FLEX SETUP

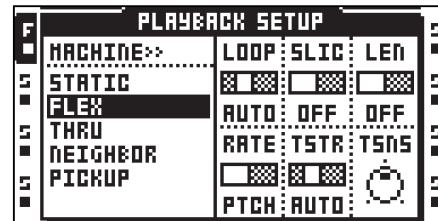

LOOP sets the master loop mode setting of the track. When set to AUTO the individual loop settings made in the audio editor will apply. Each sample of the track can then have its own loop setting.

SLIC selects whether slices will be selected or not by the **STRT** parameter found in the FLEX MAIN page.

LEN offers different settings depending on if **SLIC** is active or not. If **SLIC** is set to ON **LEN** can be set to either SLIC or TIME. SLIC will make the **LEN** parameter of the FLEX MAIN page control how many slices, starting from the **STRT** slice, that will play. TIME means that **LEN** controls the length of a particular slice. If **SLIC** is set to OFF, **LEN** can be set to either OFF or TIME. OFF renders the FLEX MAIN **LEN** parameter inactive. TIME means that **LEN** will linearly control the length of the sample that will be played, starting from the set **STRT** value.

RATE selects if the **RATE** parameter found in the main menu will affect the timestretch or pitch of the sample.


TSTR sets the master timestretch setting of the track. When set to AUTO the individual timestretch settings made in the audio editor will apply. Each sample of the track can then have its own time-stretch setting.

TSNS adjusts the transient detection when the timestretch algorithm is set to BEAT. The higher the setting, the more transient sensitive the algorithm will be.

A.3 STATIC MACHINE

Static machines are perfect for handling extremely large samples. Samples assigned to Static machines are streamed from the Compact Flash card, thus their size can be in the order of gigabytes. They can of course still be time stretched and pitch scaled as needed.

STATIC MAIN

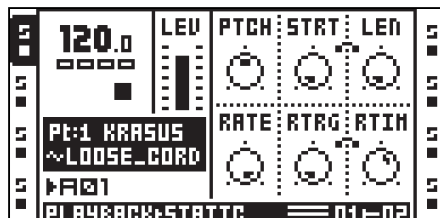

PTCH adjusts the pitch of the sample. The max setting pitches the sample up an octave, a min setting pitches the sample down an octave. Integer changes are equivalent to semitones.

STRT controls the start point of the sample in a linear fashion. If the sample contains slices, and the **SLIC** parameter in the STATIC SETUP menu is set to ON, this parameter selects between the slices. **STRT** values exceeding the number of actual sample slices will select the last sample slice.


LEN controls the length of the sample or slice. The behavior is controlled by the **LEN** parameter found in the STATIC SETUP menu.

RATE adjusts the playback speed. It shifts behavior depending on the **RATE** setting found in the STATIC SETUP page. When set to 0 the sample won't be played back at all. Negative values make the sample play backwards.

RTRG sets the number of retrigs that should occur when a note is triggered.

RTIM sets the time between each retrigger. The time is relative to the tempo and is expressed in values relating to the amount of steps of the sequencer.

STATIC SETUP

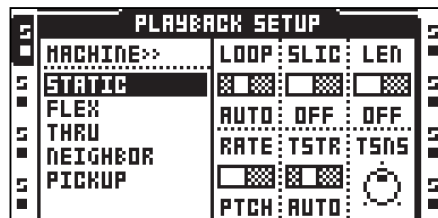

LOOP sets the master loop mode setting of the track. When set to AUTO the individual loop settings made in the audio editor will apply. Each sample of the track can then have its own loop setting.

SLIC selects whether slices will be accessible or not to the **STRT** parameter found in the STATIC MAIN page.

LEN offers different settings depending on if **SLIC** is active or not. If **SLIC** is set to ON **LEN** can be set to either SLIC or TIME. SLIC will make the **LEN** parameter of the STATIC MAIN page control how many slices, starting from the **STRT** slice, that will play. TIME means that **LEN** controls the length of a particular slice. If **SLIC** is set to OFF **LEN** can be set to either OFF or TIME. OFF renders the **STATIC MAIN** **LEN** parameter inactive. TIME means that **LEN** will linearly control the length of the sample that will be played, starting from the set **STRT** value.

RATE selects if the **RATE** parameter found in the main menu will affect the timestretch or pitch of the sample.


TSTR sets the master timestretch setting of the track. When set to AUTO the individual timestretch settings made in the audio editor will apply. Each sample of the track can then have its own time-stretch setting.

TSNS adjusts the transient detection when the timestretch algorithm is set to BEAT. The higher the setting, the more transient sensitive the algorithm will be.

A.4 NEIGHBOR MACHINE


Neighbor machines listen to the output of the preceding track. Multiple tracks with Neighbor machines can form extremely powerful effects chains. Neighbor machines cannot be assigned to track 1 or 5.

NEIGHBOR MAIN

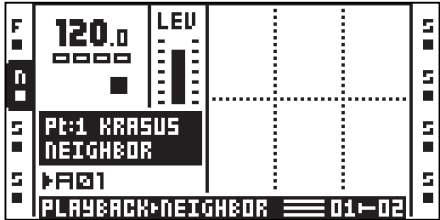

No main parameters are available.

NEIGHBOR SETUP

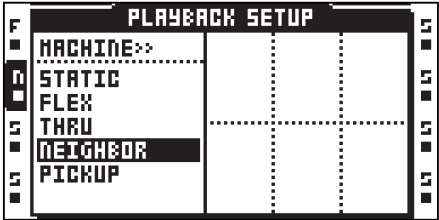


No setup parameters are available.

A.5 PICKUP MACHINE

Pickup machines are specialized for recording loops. A Pickup machine is hard-linked to both the track recorder and the recorder buffer of the track it is assigned to. The function of the **[AUDIO RECORD]** buttons change for tracks to which Pickup machines are assigned. Pickup machine parameters can not be locked. For more info how to work with Pickup machines, see “PICKUP MACHINE SAMPLING” on page 54.

PICKUP MAIN

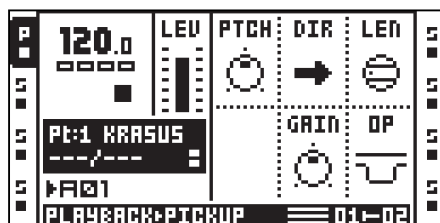

PITCH adjusts the pitch of the sample. The max setting pitches the sample up an octave, a min setting pitches the sample down an octave. Integer changes are equivalent to semitones. For overdubbing and replacing to be possible, this parameter must be set to 0.


DIR controls playback direction of the sample. It can be played from start to end, in a ping-pong fashion or backwards.

LEN selects the length of the slave loop in relation to the master loop. It is only used when recording a new slave loop. For a master loop, the loop first recorded, this parameter fill no function.

GAIN can attenuate or boost the volume of recordings or overdubs, making gradual fade outs possible. The value is expressed in dB.

OP controls the recording behavior. If **GAIN** is selected, the Pickup machine will not be able to record any material. Only volume changes, dictated by the **GAIN** parameter, to an already recorded loop will be possible to perform. If DUB is selected, it will be possible to make overdubs on top of the original loop. The volume of the overdub is controlled by the **GAIN** parameter.

PICKUP SETUP

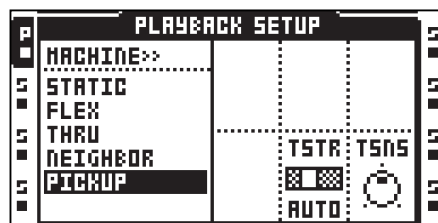

TSTR sets the master timestretch setting of the track. When set to AUTO the individual timestretch settings made in the audio editor will apply. It is not possible turn off timestretch for Pickup machines.

TSNS adjusts the transient detection when the timestretch algorithm is set to BEAT. The higher the setting, the more transient sensitive the algorithm will be.


APPENDIX B: EFFECTS REFERENCE

In this appendix, the Octatrack effects are explained. The individual effect parameters are presented for reference.

B.1 NONE


The none effect is a blank effect. Use it if you don't want to affect the audio of the track whatsoever.

NONE MAIN

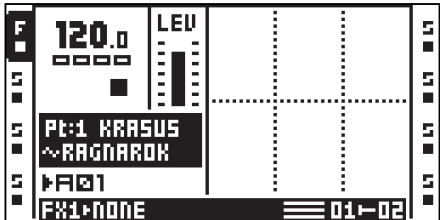

No main parameters are available.

NONE SETUP

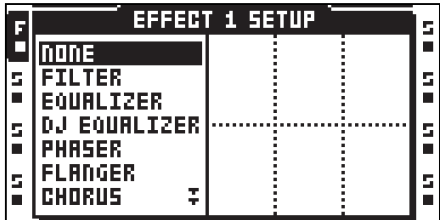


No setup parameters are available.

B.2 12/24dB MULTI MODE FILTER

The resonant 12/24dB lo/hi/band-pass filter gives control of both the low and high filter cutoffs. Its flexibility can make it function as a variable gap bandpass filter as well.

MULTI MODE FILTER MAIN

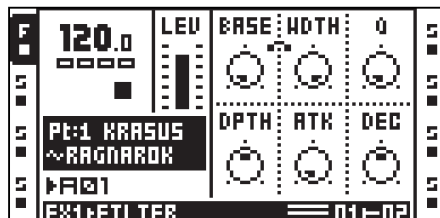

BASE sets the base cutoff frequency of the filter. Sweeping this parameter with **WIDTH** set to the max value makes the multi mode filter act as a high pass filter.

WIDTH controls the distance between the low pass and high pass cutoff frequencies. When **BASE** is set to its minimum value, sweeping this parameter makes the multi mode filter act as a low pass filter.


Q controls the amount of resonance applied to the cutoff frequency or frequencies set in the multi mode filter SETUP menu.

DEPTH controls how much the filter envelope affects the cutoff frequency or frequencies. Negative values invert the envelope.

ATK sets the attack time of the filter envelope.

DEC sets the decay time of the filter envelope.

MULTI MODE FILTER SETUP

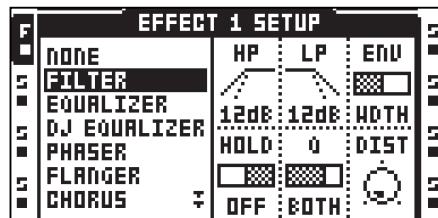

HP sets the high pass filter slope. Select between 12 dB or 24 dB.

LP sets the low pass filter slope. Select between 12 dB or 24 dB.

ENV selects which parameter the filter envelope will affect.

HOLD controls whether the filter envelope should be affected by the **HOLD** parameter of the AMP MAIN page or not.


Q selects how the resonance will affect the cutoff frequencies. It can affect the **BASE**, **WIDTH**, both of them or none.

DIST sets the headroom of the filter. The higher the value, the lower the headroom.

B.3 2-BAND PARAMETRIC EQ

The parametric EQ is useful for shaping the timbre of a sound. Two frequency bands can be attenuated or amplified.

PARAMETRIC EQ MAIN

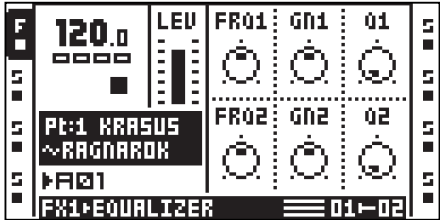

FRQ1 sets the center frequency the first band of the EQ will affect.

GN1 attenuates or boosts the set frequency.


Q1 controls the width of the frequency range the **GN1** setting affects. The higher the value the narrower the frequency curve.

FRQ2 sets the center frequency the second band of the EQ will affect.

GN2 attenuates or boosts the set frequency.

Q2 controls the width of the frequency range the **GN2** setting affects. The higher the value the narrower the frequency curve.

PARAMETRIC EQ SETUP

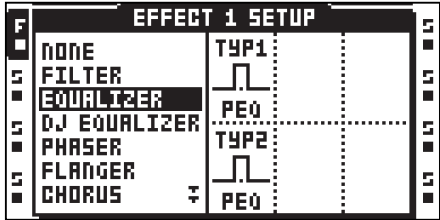


TYP1 sets how the first band of the filter will operate. It can act as a low shelf shelving filter, a full parametric EQ or as a high shelf shelving filter.

TYP2 sets how the second band of the filter will operate. It can act as a low shelf shelving filter, a full parametric EQ or as a high shelf shelving filter.

B.4 DJ STYLE KILL EQ

This EQ variant is somewhat of a cross-breed between a filter and an EQ. It is a three band EQ, capable of completely filtering out the bands.

DJ EQ MAIN

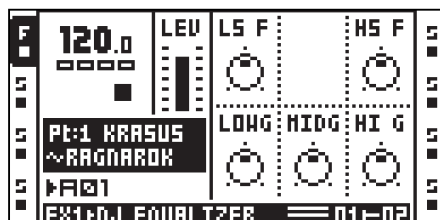

LS F sets the frequency of the low shelf filter.

HS F sets the frequency of the high shelf filter.

LOWG controls the gain of the first band of the EQ.


A max setting will boost the signal +12 dB. A min setting will kill the band completely.

MIDG controls the gain of the second band of the EQ. A max setting will boost the signal +12 dB. A min setting will kill the band completely.

HIG controls the gain of the third band of the EQ.

A max setting will boost the signal +12 dB. A min setting will kill the band completely.

DJ EQ SETUP

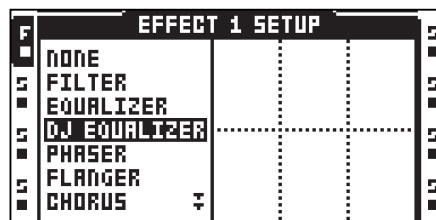


No setup parameters are available.

B.5 2-10 STAGE PHASER

The phaser applies sweeping effects to sounds. It can also be used to make sounds appear wider.

PHASER MAIN

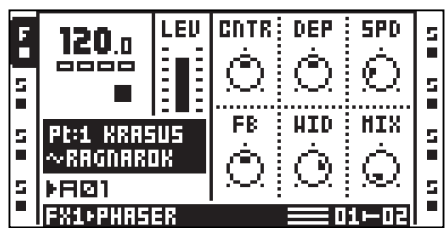

CNTR selects the center phase of the phase modulation.

DEP sets the depth of the phase modulation.


SPD adjusts the speed of the phase depth modulation.

FB controls the feedback of the original signal.

WID controls the stereo width of the affected signal.

MIX adjusts the output between the original dry signal and the phased signal.

PHASER SETUP

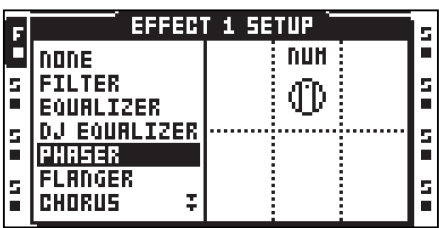


NUM selects the number of stages that should be used.

B.6 FLANGER

A flanger is a modulation effect sharing similarities with the phaser. The main difference is the notches being evenly spread out in the frequency spectrum.

FLANGER MAIN

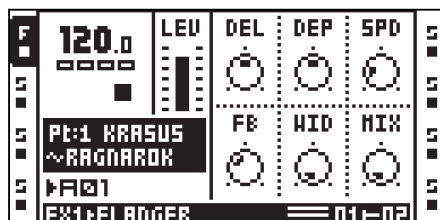

DEL controls the amount of delay of the flanged signal.

DEP controls the depth of the flanger.


SPD adjusts the speed of the flanger.

FB controls the feedback of the original signal.

WID controls the stereo width of the affected signal.

MIX adjusts the output between the original dry signal and the wet, flanged, signal.

FLANGER SETUP

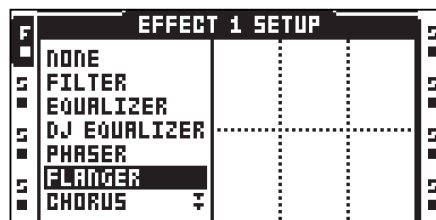


No setup parameters are available.

B.7 2-10 TAP CHORUS


The variable tap stereo chorus is great for enhancing the stereo image of a sound and for making it appear softer and smoother.

CHORUS MAIN

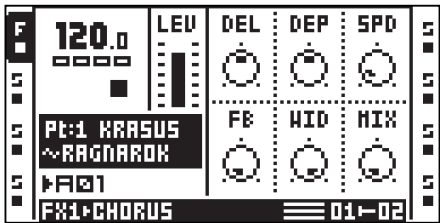

- DEL** controls the delay time of the taps.
- DEP** controls the depth of the modulation of the chorus taps.
- SPD** sets the low frequency modulation speed of the taps.
- FB** controls the feedback of the delay taps.
- WID** controls the stereo width output of the chorus.
- MIX** adjusts the output between the original dry signal and the chorused wet signal.

CHORUS SETUP

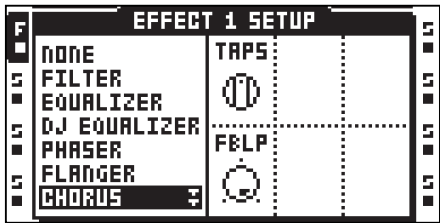


- TAPS** sets the number of chorus taps that should be used.
- FBLP** controls the low pass filtering of the feedback signal.

B.8 SPATIALIZER

The spatializer effect is suitable for affecting the stereo image in various ways, for example by widening it. It is also capable of generating a psuedo-stereo image from a mono sample.

SPATIALIZER MAIN

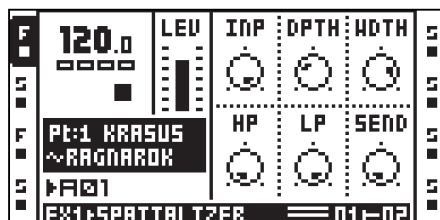

INP adjusts the gain of the dry signal.

DPTH sets the depth of the widened signal. The parameter works in conjunction with the **WPTH** control.


WPTH sets the amount of stereo spread. The parameter works in conjunction with the **DPTH** control.

HP controls the cutoff frequency of the high pass filter for the widened signal.

LP controls the cutoff frequency of the low pass filter for the widened signal.

SEND adjusts the **LEVEL** of the widened signal.

SPATIALIZER SETUP

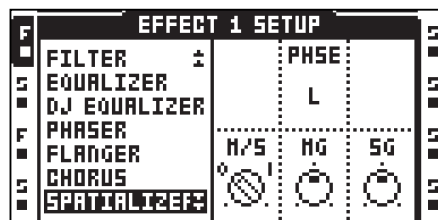

PHSE reverses the phase of the wet signal for: none of the channels (NONE), the left channel (L), the right channel (R) or both the left and right channel (L,R).

M/S activates/deactivates the **MG** and **SG** controls.


MG controls the amount of mid gain.

SG controls the amount of side gain.

B.9 COMB FILTER

The comb filter introduces metallic sounding, pitch tuned, resonant overtones to sounds and samples.

COMB FILTER MAIN

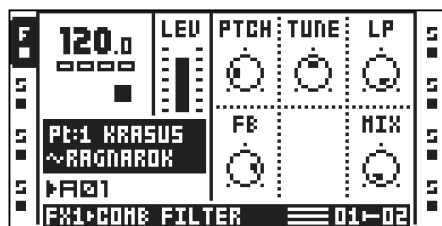

PTCH controls the resonant frequencies of the comb filter.


TUNE changes the pitch by up to 2 semitones up or down.

LP controls the cutoff frequency of the low pass filter that is implemented in the feedback signal.

FB controls the gain of the feedback signal.

MIX controls the dry/wet signal.

COMB FILTER SETUP

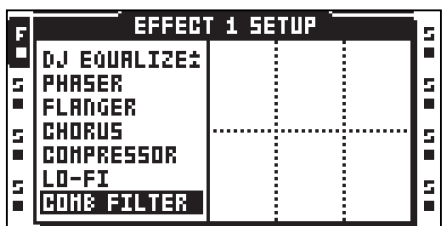


No setup parameters are available.

B.10 DYNAMIX COMPRESSOR

The Dynamix processor can be used for increasing the overall sound level of a track or pattern. It can also be used to enhance or reduce transients.

COMPRESSOR MAIN

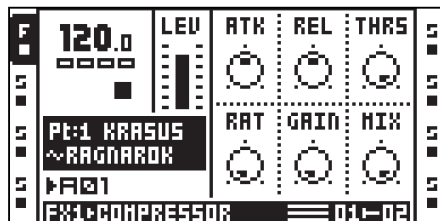

ATK sets the attack time from 0.5 ms to 100 ms.

REL sets the release time from 50 ms to 5 s.


THRS controls the compressor knee threshold.

RAT sets the compression ratio between 1:1 and 1:255.

GAIN can be used to adjust the output **LEVEL** of the compressor.

MIX adjusts the output between the uncompressed dry signal and the compressed wet signal.

COMPRESSOR SETUP

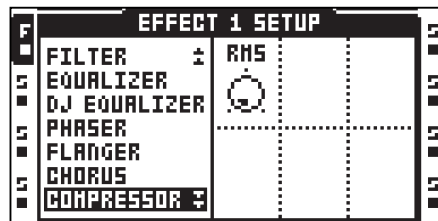


RMS adjusts the way the compressor works. A zero setting makes the compressor look for amplitude peaks and a max setting makes it react to the overall energy **LEVEL** of the signal.

B.11 LO-FI COLLECTION

The lo-fi collection consists of several effects dedicated to making sounds grittier and more abrasive. These effects are not for the faint-hearted!

LO-FI MAIN

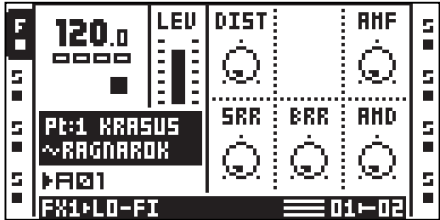

DIST controls the signal overload distortion.


AMF controls the modulation frequency of the amplitude modulator. The amplitude modulator is essentially a volume control which is controlled by a low frequency oscillator. A high setting makes for extreme changes in the timbre of a sound.

SRR controls the amount of sample rate reduction.

BRR controls the amount of bit rate reduction.

AMD controls the modulation depth of the amplitude modulator.

LO-FI SETUP

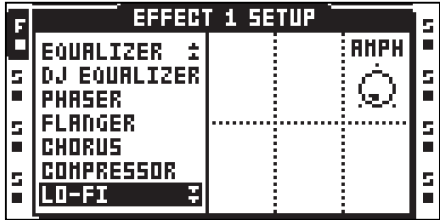


AMPH sets the start phase of the amplitude modulation. It is adjusted in degrees. A setting of 90 makes the modulator start high. A setting of 270 makes it start low.

B.12 ECHO FREEZE DELAY

The delay adds echoes to the affected signal. The special echo freeze functionality makes it possible to repeat a portion of a sound.

DELAY MAIN

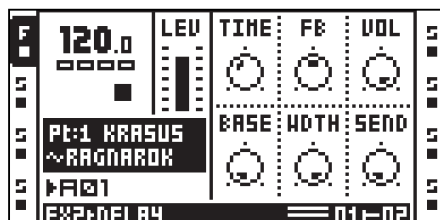

TIME controls the delay time of the delay loop. The actual delay time is relative to the current tempo, and it is measured in 256th notes. For instance, for a one beat delay (four 16th notes) delay time should be set to 64. By setting **SYNC** to off, the delay time will not be relative to the tempo.

FB controls how much of the delay output sound will be fed back into the input of the delay. Using the delay feedback you can make delays with several or infinite echoes.


VOL sets the main volume of the delay output.

BASE controls the high pass filtering of the signal from the delay feedback loop.

WDTH controls the low pass filtering of the signal from the delay feedback loop, relative the **BASE** parameter.

SEND controls how much of the signal that will be sent to the delay.

DELAY SETUP

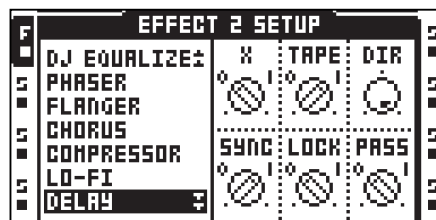

X sets if the delay will act as a ping-pong delay or not.

TAPE sets the mode of the delay. An ON setting will make the delay interpolate between delay times when the **TIME** parameter in the DELAY MAIN page is changed. An OFF setting will not interpolate between the delay times when the **TIME** parameter is changed.

DIR sets the how much of the dry signal that will be mixed with the delay signal. A min setting will make only the delay signal be heard.

SYNC controls whether the delay should be tempo synced or not.


LOCK will when activated make it possible for the delay to function as repeater effect. If the FB parameter of the DELAY MAIN page is set to 127, setting **SEND** to 0 will repeat the content of the delay buffer infinitely. Lower **FB** values will make the buffer fade out gradually. **SEND** settings other than 0 deactivates the repeats. **TIME** controls the length of the repeats. Please note that if **PASS** is set to 0, **VOL** of the DELAY MAIN page will not affect the amplitude of the delay buffer signal.

PASS controls how the dry signal will be routed when the **LOCK** setting is activated. A setting of 1 will mix in dry signal, setting of 0 will make only the delay buffer be heard - which is preferable for repeater use. The volume of the dry signal is controlled by **DIR**. When **PASS** is activated, the volume of the delay buffer is controlled by the **VOL** parameter of the DELAY MAIN page. When deactivated, **VOL** do not affect the buffer signal.

B.13 GATEBOX PLATE REVERB

The Gatebox plate reverb adds reverberation to the signal. The effect has many uses thanks to the implemented gating possibilities.

PLATE REVERB MAIN

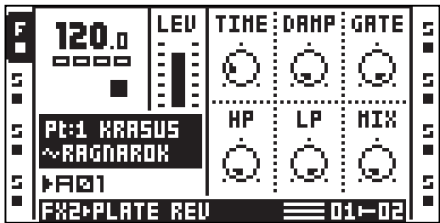

TIME controls the decay time, i.e. how long time the reverberated signal will stay around before dying out.

DAMP sets the reverb damping, which is the effect of “soft walls”. The higher the parameter is set the faster the sound will die out.


GATE sets the gate time. The reverbated signal is gated after this time, if the signal **LEVEL** is low. The maximal value for this parameter gives infinite time - in other words, the gate is turned off.

HP controls the high pass filtering of the reverb signal.

LP controls the low pass filtering of the reverb signal.

MIX adjusts the output between the original dry signal and the reverberated wet signal. When **MIXF** of the REVERB SETUP page is set to SEND, the **MIX** parameter works similarly to an aux send knob of a mixer.

PLATE REVERB SETUP

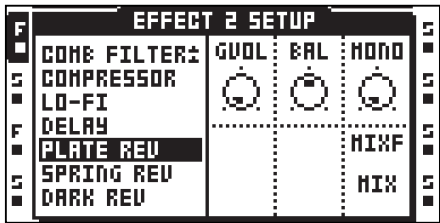

GVOL sets the threshold volume of the gated signal.

BAL sets the balance between the left/right channel of the reverberated signal.


MONO continuously adjusts the width of the reverberated signal from stereo to mono.

MIXF defines the functionality of the **MIX** control of the REVERB MAIN page to be either MIX or SEND.

B.14 SPRING REVERB

This effect is based on a classic spring reverb. It adds a grungy and “twangy” reverberation to the incoming signal.

SPRING REVERB MAIN

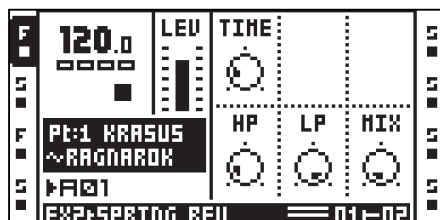


TIME sets the decay time of the springs.

HP controls the cut off frequency of the high pass filter of the springs.

LP controls the cut off frequency of the low pass filter of the springs.

MIX adjusts the balance between the dry and reverberated signal.

SPRING REVERB SETUP

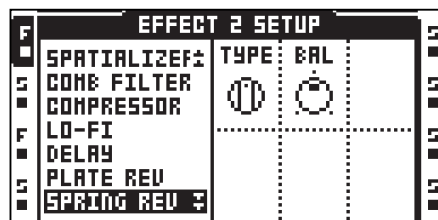

TYPE sets the type of spring going from slightly transparent to more springy in three steps.

BAL sets the balance between the left/right channel of the reverberated signal.

B.15 DARK REVERB

The dark reverb provides lush, wide stereo reverberation with long decay times. It is good for adding a spacey ambience to a sound.

DARK REVERB MAIN



TIME sets the decay time of the reverberated signal.

SHVG affects the damping of the reverberated signal above the shelving frequency set by the **SHVF** parameter. At max value treble is included in the reverberations, lowering the value gradually dampens it.


SHVF controls the frequency of the shelving filter inside the reverberator. Together with the **SHVG** parameter it can be used to dampen the reverberated signal above a chosen frequency, making the reverberation sound darker.

HP controls the cutoff frequency of the high pass filter affecting the incoming signal.

LP controls the cutoff frequency of the low pass filter affecting the incoming signal.

MIX adjusts the mix between the original dry signal and the reverberated signal. When **MIXF** of the DARK REVERB SETUP page is set to SEND, the **MIX** parameter works similarly to an aux send knob of a mixer.

DARK REVERB SETUP

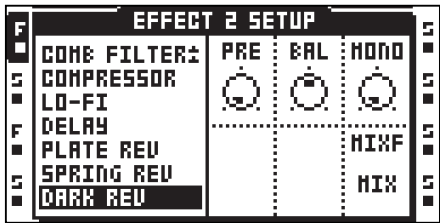

PRE adjusts the length of a short delay before the signal reaches the reverberator.

BAL sets the balance between the left/right channel of the reverberated signal.

MONO continuously adjusts the width of the reverberated signal from stereo to mono.

MIXF defines the functionality of the **MIX** control of the DARK REVERB MAIN page to be either MIX or SEND.

APPENDIX C: MIDI CONTROL REFERENCE

All parameters found in the TRACK PARAMETER MAIN pages are controllable by MIDI control change messages. It is also possible to trig tracks, samples and track recorders as well as to play samples chromatically from an external MIDI device.

Which tracks responding to which MIDI channels are configured in the PROJECT>MIDI>CHANNELS menu.

C.1 NOTE MAPPING

The Octatrack responds to MIDI Note as follows:

NOTE	FUNCTION	NOTE	FUNCTION
C1 (24)	Audio Track 1 Play	C4 (60)	Combo rec
C#1 (25)	Audio Track 2 Play	C#4 (61)	INAB rec
D1 (26)	Audio Track 3 Play	D4 (62)	INCD rec
D#1 (27)	Audio Track 4 Play	D#4 (63)	SRC3 rec
E1 (28)	Audio Track 5 Play	E4 (64)	Pickup Play/Stop
F1 (29)	Audio Track 6 Play	F4 (65)	Multiply
F#1 (30)	Audio Track 7 Play	F#4 (66)	Mute active track
G1 (31)	Audio Track 8 Play	G4 (67)	Cue active track
G#1 (32)		G#4 (68)	Active track up
A1 (33)	Sequencer Stop	A4 (69)	Active track down
A#1 (34)	Sequencer Start	A#4 (70)	Toggle Seq sync
B1 (35)	Sequencer Restart	B4 (71)	Toggle Seq sync + start
C2 (36)	Audio Track 1 Sample Trigger	C5 (72)	Track Sample Pitch -12
C#2 (37)	Audio Track 2 Sample Trigger	C#5 (73)	Track Sample Pitch -11
D2 (38)	Audio Track 3 Sample Trigger	D5 (74)	Track Sample Pitch -10
D#2 (39)	Audio Track 4 Sample Trigger	D#5 (75)	Track Sample Pitch -9
E2 (40)	Audio Track 5 Sample Trigger	E5 (76)	Track Sample Pitch -8
F2 (41)	Audio Track 6 Sample Trigger	F5 (77)	Track Sample Pitch -7
F#2(42)	Audio Track 7 Sample Trigger	F#5 (78)	Track Sample Pitch -6
G2 (43)	Audio Track 8 Sample Trigger	G5 (79)	Track Sample Pitch -5
G#2 (44)		G#5 (80)	Track Sample Pitch -4
A2 (45)		A5 (81)	Track Sample Pitch -3
A#2 (46)		A#5 (82)	Track Sample Pitch -2
B2 (47)		B5 (83)	Track Sample Pitch -1
C3 (48)	MIDI Track 1 Play	C6 (84)	Track Sample Pitch 0
C#3 (49)	MIDI Track 2 Play	C#6 (85)	Track Sample Pitch +1
D3 (50)	MIDI Track 3 Play	D6 (86)	Track Sample Pitch +2
D#3 (51)	MIDI Track 4 Play	D#6 (87)	Track Sample Pitch +3
E3 (52)	MIDI Track 5 Play	E6 (88)	Track Sample Pitch +4
F3 (53)	MIDI Track 6 Play	F6 (89)	Track Sample Pitch +5
F#3 (54)	MIDI Track 7 Play	F#6 (90)	Track Sample Pitch +6
G3 (55)	MIDI Track 8 Play	G6 (91)	Track Sample Pitch +7
G#3 (56)		G#6 (92)	Track Sample Pitch +8
A3 (57)		A6 (93)	Track Sample Pitch +9
A#3 (58)		A#6 (94)	Track Sample Pitch +10
B3 (59)		B6 (95)	Track Sample Pitch +11
		C7 (96)	Track Sample Pitch +12



- Chromatic trig keys sent to the AUTO channel or the MIDI channel of the active track can, when in LIVE RECORDING mode or holding a note trig, be used to enter note trigs with locked PTCH parameters.
- CC messages sent to the auto channel or the MIDI channel of the active track can, when in LIVE RECORDING mode or when entering parameter and scene locks, be recorded.
- Active track up and down only works on the auto channel.

C.2 CTRL CHANGE MAPPINGS

HEX DEC	CTRL PARAMETER	TRN	REC
\$07 07	Track level		X
\$08 08	Track balance		X
\$10 16	Playback param #1	X	X
\$11 17	Playback param #2	X	X
\$12 18	Playback param #3	X	X
\$13 19	Playback param #4	X	X
\$14 20	Playback param #5	X	X
\$15 21	Playback param #6	X	X
\$16 22	Amp param #1 (Attack)	X	X
\$17 23	Amp param #2 (Hold)	X	X
\$18 24	Amp param #3 (Release)	X	X
\$19 25	Amp param #4 (Volume)	X	X
\$1A 26	Amp param #5 (Balance)	X	X
\$1B 27	Amp param #6 (N/A)	X	X
\$1C 28	LFO param #1 (Speed 1)	X	X
\$1D 29	LFO param #2 (Speed 2)	X	X
\$1E 30	LFO param #3 (Speed 3)	X	X
\$1F 31	LFO param #4 (Depth 1)	X	X
\$20 32	LFO param #5 (Depth 2)	X	X
\$21 33	LFO param #6 (Depth 3)	X	X
\$22 34	FX1 param #1	X	X
\$23 35	FX1 param #2	X	X
\$24 36	FX1 param #3	X	X
\$25 37	FX1 param #4	X	X
\$26 38	FX1 param #5	X	X
\$27 39	FX1 param #6	X	X
\$28 40	FX2 param #1	X	X
\$29 41	FX2 param #2	X	X
\$2A 42	FX2 param #3	X	X
\$2B 43	FX2 param #4	X	X
\$2C 44	FX2 param #5	X	X
\$2D 45	FX2 param #6	X	X
\$2E 46	Track level	X	X
\$2F 47	Cue level	X	X

HEX DEC	CTRL PARAMETER	TRN	REC
\$30 48	Crossfader	X	X
\$31 49	Track Mute [0]=Unmuted, [1-127]=Muted	X	X
\$32 50	Track Solo [0]=No solo, [1-127]=Soloed	X	X
\$33 51	Track Cue [0]=Not Cued, [1-127]=Cued	X	X
\$34 52	Track Arm [0]=Trk disarm, [1-127]=Arm	X	X
\$35 53	Recrdr Arm [0]=Rec disarm, [1-127]=Arm	X	X
\$36 54	All Arm [0]=All disarm, [1-127]=Arm	X	X
\$37 55	Scene A Select	X	X
\$38 56	Scene B Select	X	X
\$39 57	Pickup SRC AB level		X
\$3A 58	Pickup SRC CD level		X
\$3B 59	Note on [0]=C-1, 127=G9)		X
\$3C 60	Note off [0] =C-1, 127=G9)		X
\$3D 61	Send request, 0 = all audio CC		X
\$70 112	MIDI Trk 1 Mute [0]=Unmute, [1-127]=Mute	X	X
\$71 113	MIDI Trk 2 Mute [0]=Unmute, [1-127]=Mute	X	X
\$72 114	MIDI Trk 3 Mute [0]=Unmute, [1-127]=Mute	X	X
\$73 115	MIDI Trk 4 Mute [0]=Unmute, [1-127]=Mute	X	X
\$74 116	MIDI Trk 5 Mute [0]=Unmute, [1-127]=Mute	X	X
\$75 117	MIDI Trk 6 Mute [0]=Unmute, [1-127]=Mute	X	X
\$76 118	MIDI Trk 7 Mute [0]=Unmute, [1-127]=Mute	X	X
\$77 119	MIDI Trk 8 Mute [0]=Unmute, [1-127]=Mute	X	X
\$78 120	MIDI Trk 1 Solo [0]=Unsolo, [1-127]=Solo	X	X
\$79 121	MIDI Trk 2 Solo [0]=Unsolo, [1-127]=Solo	X	X
\$7A 122	MIDI Trk 3 Solo [0]=Unsolo, [1-127]=Solo	X	X
\$7B 123	MIDI Trk 4 Solo [0]=Unsolo, [1-127]=Solo	X	X
\$7C 124	MIDI Trk 5 Solo [0]=Unsolo, [1-127]=Solo	X	X
\$7D 125	MIDI Trk 6 Solo [0]=Unsolo, [1-127]=Solo	X	X
\$7E 126	MIDI Trk 7 Solo [0]=Unsolo, [1-127]=Solo	X	X
\$7F 127	MIDI Trk 8 Solo [0]=Unsolo, [1-127]=Solo	X	X

C.3 MIDI MODE CTRL CHANGE MAPPINGS

While in MIDI mode and CC DIRECT CONNECT is deactivated, the auto channel responds to the following CC messages.

HEX DEC	CTRL PARAMETER	TRN	REC
\$10 16	Playback param #1 (Note)		X
\$11 17	Playback param #2 (Velocity)		X
\$12 18	Playback param #3 (Length)		X
\$13 19	Playback param #4 (Note 2)		X
\$14 20	Playback param #5 (Note 3)		X
\$15 21	Playback param #6 (Note 4)		X
\$16 22	Amp param #1 (Transpose)		X
\$17 23	Amp param #2 (Legato)		X
\$18 24	Amp param #3 (Mode)		X

HEX DEC	CTRL PARAMETER	TRN	REC
\$19 25	Amp param #4 (Speed)		X
\$1A 26	Amp param #5 (Octave Range)		X
\$1B 27	Amp param #6 (Arp Note Length)		X
\$1C 28	MIDI LFO param #1 (Speed 1)		X
\$1D 29	MIDI LFO param #2 (Speed 2)		X
\$1E 30	MIDI LFO param #3 (Speed 3)		X
\$1F 31	MIDI LFO param #4 (Depth 1)		X
\$20 32	MIDI LFO param #5 (Depth 2)		X
\$21 33	MIDI LFO param #6 (Depth 3)		X
\$22 34	Pitch bend		X
\$23 35	Aftertouch		X
\$24 36	CC #1 param		X
\$25 37	CC #2 param		X
\$26 38	CC #3 param		X
\$27 39	CC #4 param		X
\$28 40	CC #5 param		X
\$29 41	CC #6 param		X
\$2A 42	CC #7 param		X
\$2B 43	CC #8 param		X
\$2C 44	CC #9 param		X
\$2D 45	CC #10 param		X
\$31 49	MIDI Track Mute [0]=Unmuted, [1-127]=Muted		X
\$32 50	MIDI Track Solo [0]=No solo, [1-127]=Soloed		X
\$36 54	All Arm [0]=All disarm, [1-127]=Arm		X
\$37 55	Scene A Select		X
\$38 56	Scene B Select		X
\$70 112	MIDI Trk 1 Mute [0]=Unmute, [1-127]=Mute		X
\$71 113	MIDI Trk 2 Mute [0]=Unmute, [1-127]=Mute		X
\$72 114	MIDI Trk 3 Mute [0]=Unmute, [1-127]=Mute		X
\$73 115	MIDI Trk 4 Mute [0]=Unmute, [1-127]=Mute		X
\$74 116	MIDI Trk 5 Mute [0]=Unmute, [1-127]=Mute		X
\$75 117	MIDI Trk 6 Mute [0]=Unmute, [1-127]=Mute		X
\$76 118	MIDI Trk 7 Mute [0]=Unmute, [1-127]=Mute		X
\$77 119	MIDI Trk 8 Mute [0]=Unmute, [1-127]=Mute		X
\$78 120	MIDI Trk 1 Solo [0]=Unsolo, [1-127]=Solo		X
\$79 121	MIDI Trk 2 Solo [0]=Unsolo, [1-127]=Solo		X
\$7A 122	MIDI Trk 3 Solo [0]=Unsolo, [1-127]=Solo		X
\$7B 123	MIDI Trk 4 Solo [0]=Unsolo, [1-127]=Solo		X
\$7C 124	MIDI Trk 5 Solo [0]=Unsolo, [1-127]=Solo		X
\$7D 125	MIDI Trk 6 Solo [0]=Unsolo, [1-127]=Solo		X
\$7E 126	MIDI Trk 7 Solo [0]=Unsolo, [1-127]=Solo		X
\$7F 127	MIDI Trk 8 Solo [0]=Unsolo, [1-127]=Solo		X

INDEX

A

ACCESSORIES 14

- Carrying bag and protective lid 14
- Rack mount kit 14

AMP

- Amp main 58
- Amp setup 58

ARPEGGIATOR 91

- Setup 92

ARRANGER 86

AUDIO EDITOR 79

- Accessing 79
- Attributes 83
- Edit 81
- File 85
- Slice 80
- Trim 79

AUDIO FILE COMPATIBILITY 27

AUDIO POOL 27

- Adding content 27
- File compatibility 27

AUTO CHANNEL 41

B

BANKS 52

C

CARE INSTRUCTIONS 15

CHROMATIC MODE 68

CLEAR

- Pattern 70
- Scene 54
- Track 71
- Track page 71
- Track parameter page 71
- Trig lock 72

COMPACT FLASH CARD 14

- Card tools 34
- Format card 35

CONDITIONAL LOCKS 76

CONNECTING THE UNIT 15

COPY

- Pattern 70
- Scene 54
- Track page 71
- Track parameter page 71
- Trig 71

COPY, CLEAR AND PASTE 20

CREDITS AND CONTACT INFORMATION 115

CUE LEVEL 57

CUE OUTPUTS 62

D

DELAY COMPENSATE 36

E

EARLY STARTUP MENU 111

EFFECTS

- Effects reference 121
- Track effects 61

ELECTRICAL SPECIFICATIONS 115

EMPTY RESET 111

F

FILE BROWSER 30

FILL MODE 76

FLEX AND STATIC MACHINES 55

G

GRID RECORDING MODE 65

L

LEVELS

- Cue level 57
- Track main level 57

LFO

- LFO designer 61
- LFO main 59
- LFO setup 60

LIVE RECORDING MODE 65

LOADING SAMPLES 24, 29

M

MAIN OUTPUTS 62

MASTER TRACK 35

METRONOME 39

MICRO TIMING 75

MIDI

- Auto channel 41
- Clock receive 40
- Clock send 40
- Settings 39
- Transport receive 40
- Transport send 40
- Trig channel 41

MIDI CC LEARN 93

MIDI CONTROL REFERENCE 136

MIDI SEQUENCER 89

- Accessing 89
- MIDI mode live recording/parameter locking 90
- MIDI routing 89
- MIDI track parameter pages 90

MIDI TRACK PARAMETERS 90

- Arpeggiator main 91
- Arpeggiator setup 92
- CTRL 1 main 93
- CTRL 1 setup 93
- CTRL 2 main 93
- CTRL 2 setup 94

MIDI LFO main 92
MIDI LFO setup 92
Note main 90
Note setup 91

MIXER 42**MUTE**

Scene 54

MUTE TRACKS

Direct mute 62
Mixer mute 42
Trig mode quick mute 69

N**NAMING MENU 20****NOISE GATE 36****O****OCTATRACK STRUCTURE 16****OS UPDATE**

Between Octatracks 111
Via Compact Flash 33
Via MIDI 111

OUTPUT ROUTING 35**P****PANEL LAYOUT AND CONNECTORS 12**

Front panel 12
Rear connectors 14

PARAMETER EDITING 20

Parameter value skip 20
Quick parameter editing 20

PARAMETER LOCKS 67

MIDI 90

PARTS 52

Edit parts menu 53
Quick select 52
Reload 53

PATTERNS 64

Basic pattern operations 64
Chaining 65
Grid recording mode 65
Live recording mode 65
Micro timing 75
Parameter locks 67
Pattern control 64
Pattern settings menu 73
Recording modes 65
Sample locks 67
Scale setup 77
Selecting 64
Sequencer Copy, Paste and Clear operations 70
Track trig edit menu 72
Trig led indicators 64
Trig modes 68
Trig types 66

PERSONALIZE MENU 33**PHYSICAL SPECIFICATIONS 115****PICKUP MACHINES 44**

Sampling 49

PLAYBACK

Playback main 57
Playback setup 57

PROJECT MENU 31

Control 35
System 32

PROJECTS 28

Change project 32
Loading and creating 28
Mixer 42
Project card sync 32
RAM memory 28
Reload 32
Tempo 43
The Project menu 31
Track recorders 44

Q**QUICK SCROLLING 20****QUICK START 22****R****RACK MOUNT KIT 14****RAM MEMORY 28****RECORDING MODES 65**

Grid recording mode 65
Live recording mode 65

ROUTING

Main and Cue outputs 62
Routing examples 95

S**SAMPLE LOCKS 67****SAMPLING**

Manual sampling 47
Pickup machine sampling 49
Playing back recorder samples 48
Recorder trig sampling 48

SCALE SETUP 77

Master scale 78
Normal 77
Per track 77

SCENES 53

Assigning and adjusting 53
Clear 54
Copy 54
Mute 54
Volume locking 54

SEQUENCER

Conditional locks 76

SET DATE/TIME 33**SETS 26**

Audio pool 27
Change set 32
Creating and mounting 26

SETUP EXAMPLES 95

- DJ mixer and sampler 99
- MIDI control center 101
- Performance hub 95
- Processing live instruments 98
- With external effects 97

SLICES 69

SLIDE TRIGS 67

SOLO TRACKS 42

SUGGESTED APPLICATIONS 11

SWING TRIGS 67

SYSTEM 32

- Date/Time 33
- OS upgrade 33
- Personalize 33
- USB disk mode 32

T

TECHNICAL INFORMATION 115

TEMPO 43

- Nudge 43
- Tap tempo 43

TEST MODE 111

TRACK MAIN LEVEL 57

TRACK PARAMETER PAGES 57

- Amp main 58
- Amp setup 58
- Cue level 57
- Effect 1 and Effect 2 61
- LFO designer 61
- LFO main 59
- LFO setup 60
- Main level 57
- Playback main 57
- Playback setup 57

TRACK RECORDERS 44

- Sampling methods 47

TRACKS 55

- Assigning Flex/Static samples to machines 56
- Assigning machines 55
- Direct track muting 62
- Main and Cue outputs routing 62
- Mixer mute 42
- Parameter pages 57
- Solo 42

TRACK TRIG EDIT MENU 72

- Recorder trigs 73
- Slide 72
- Swing 73
- Trigs 72

TRIG CONDITIONS 76

TRIG LED INDICATIONS 64

TRIG MODES 68

- Chromatic 68
- Quick mute 69
- Slices 69
- Slots 69

Track 68

TRIGS 66

- One shot trigs 66
- Recorder trigs 67
- Sample trigs 66
- Slide trigs 67
- Swing trigs 67
- Trigless locks 66
- Trigless trigs 66

TUTORIALS 103

- Loop remixing 106
- Octatrack as a DJ deck 109
- Octatrack as an effects processor 110
- Preparing loops and samples 108
- Track recorder sampler 103

U

UNDO

- Parameter lock clear 72
- Pattern clear 70
- Pattern copy 70
- Rec trigs clear 73
- Slide trig clear 72
- Swing trig clear 73
- Track clear 71
- Track copy 70
- Track page clear 71
- Track parameter page clear 71
- Trig lock clear 72

USB DISK MODE 32

USER INTERFACE 19

 elektron